

JOYDEEM JD-ZQG9099

Joydeem Electric Glass Steam Cooker

Model: JD-ZQG9099

Brand: JOYDEEM

1. INTRODUCTION

Thank you for choosing the Joydeem Electric Glass Steam Cooker. This versatile appliance is designed to simplify your cooking experience, offering multiple functions for preparing a variety of dishes. Featuring a ceramic inner pot and high borosilicate glass components, it prioritizes healthy cooking and preserves the natural flavors of your ingredients. Please read this manual thoroughly before first use to ensure safe and optimal operation.



2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or appliance base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- **Caution:** The ceramic and glass components can be fragile. Avoid sudden temperature changes, such as washing hot components with cold water, as this may cause cracking.

3. PRODUCT COMPONENTS

The Joydeem Electric Glass Steam Cooker comes with several components designed for various cooking methods. Familiarize yourself with each part:


- **Cooker Base:** The main unit containing the heating element and control panel.
- **2L Soup Pot:** Made of high borosilicate glass, used for boiling, steaming, and as the primary water reservoir.
- **1.5L Ceramic Pot:** A handmade ceramic inner liner, ideal for boiling and stewing, designed to preserve original flavors.
- **0.5L Stew Pot:** A smaller ceramic pot for individual portions or specific stewing tasks.
- **Ceramic Pot Holder:** A silicone or heat-resistant holder for the ceramic pot.
- **Steamer Rack:** Used for steaming ingredients above the water in the soup pot.
- **Tagine Lid:** A unique lid design that condenses steam and prevents water loss, enhancing flavor and reducing fat/purine content in soups.
- **Manual:** This instruction booklet.

Excellent Material for Healthy Eating



Handmade ceramic inner liner,
better preserving the
original flavor of ingredients

Repeatedly polished ceramic glaze allows
food to cook without losing nutrients and flavor

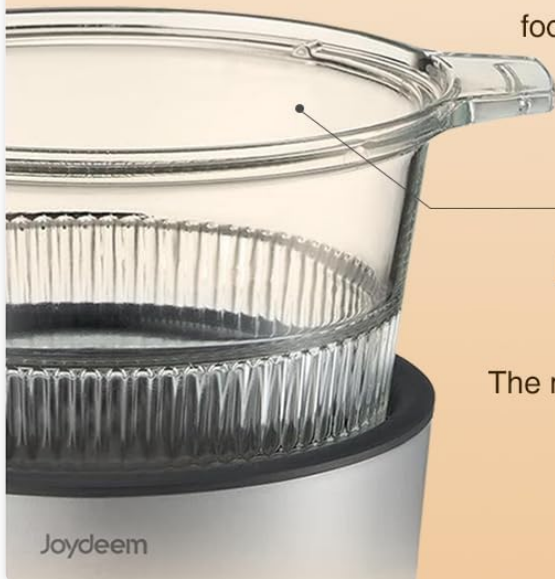

High borosilicate glass material,
take care of your health

The material is wear-resistant, not easy to break,
easy to clean and corrosion-resistant

Joydeem

Image 3.1: Overview of included components.

What's Included



Cooker Base



2L Soup Pot



1.5L Ceramic Pot



0.5L Stew Pot



Ceramic Pot Holder



Steamer Rack



Manual

Image 3.2: Detail of the ceramic and glass materials.

4. SETUP AND ASSEMBLY

Before first use, wash all removable parts (pots, lid, rack, holder) with warm soapy water, rinse thoroughly, and dry. The cooker base should be wiped clean with a damp cloth.

4.1 General Assembly

1. Place the cooker base on a stable, flat, heat-resistant surface.
2. Ensure the power cord is securely plugged into the base and then into a suitable electrical outlet.

4.2 Assembly for Boil Mode (Example)

For boil mode, typically using the ceramic pot:

1. Place the 2L Soup Pot onto the cooker base.
2. Insert the Ceramic Pot Holder into the 2L Soup Pot.
3. Place the 1.5L Ceramic Pot (or 0.5L Stew Pot) onto the Ceramic Pot Holder.
4. Add ingredients to the ceramic pot and cover with the Tagine Lid.

Combination Steps in Boil Mode



Image 4.1: Assembly steps for Boil Mode.

5. OPERATING INSTRUCTIONS

The cooker features an intuitive control panel with a central dial and a 'Preset' button.

5.1 Control Panel Overview

- **Central Dial:** Used to select cooking modes and adjust cooking time. Turn to navigate, press to confirm.
- **Preset Button:** Activates the delayed start function.



Image 5.1: Control panel with preset and adjustable cooking time features.

5.2 Cooking Modes

The cooker offers four primary cooking modes:

- **Boil Mode:** Ideal for preparing dishes like Qiguo (a Chinese stew) or general boiling.
- **Steam Mode:** Perfect for steaming vegetables, seafood, or other ingredients using the steamer rack.
- **Broth Mode:** Specifically designed for stewing delicious soups, utilizing the micro-pressure distillation of the tagine lid for enhanced flavor and reduced fat.
- **Cook Mode:** Suitable for hot pot, fruit tea, or other general cooking tasks.

Different Flavors in 4 Cooking Modes



Image 5.2: Visual representation of the four cooking modes.

Enjoying a Delicious Soup Can Be So Easy

—

There is no need for complicated programs and techniques, just add ingredients, select boil mode, cover the lid, no need to watch the fire, and enjoy a delicious and healthy soup once the program is complete



Image 5.3: One pot for multiple uses, showing different assembly for each mode.

5.3 Using the Tagine Lid

The unique tagine lid design promotes micro-pressure distillation. Water vapor rises, condenses, and then melts back with the ingredients, enhancing flavor and reducing fat content in soups.



Image 5.4: Steam cooking mechanism with the tagine lid.

5.4 Preset Function and Keep Warm

The cooker supports a 10-hour preset function, allowing you to set a delayed start time for your cooking. After cooking is complete, the appliance will automatically switch to a 'Keep Warm' mode, ensuring your meal remains at an optimal serving temperature. The 'Keep Warm' function can also be selected independently.

1. Press the 'Preset' button.
2. Use the central dial to adjust the desired delay time.
3. Select your desired cooking mode and time. The cooker will start after the preset delay.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your Joydeem Electric Glass Steam Cooker.

- **Always unplug the appliance** from the power outlet and allow it to cool completely before cleaning.
- **Cooker Base:** Wipe the exterior of the cooker base with a soft, damp cloth. Do not immerse the base in water or any other liquid.
- **Pots and Lid:** The ceramic pots, glass soup pot, and tagine lid are **hand wash only**. Use warm soapy water and a non-abrasive sponge. Rinse thoroughly.
- **Important:** Avoid washing hot glass or ceramic components with cold water immediately after use, as sudden temperature changes can cause cracking. Allow them to cool down gradually.
- **Steamer Rack and Ceramic Pot Holder:** These can be hand washed with warm soapy water.
- **Dishwasher Safety:** This appliance and its components are **not dishwasher safe**.
- Ensure all parts are completely dry before storing or reassembling.

7. TROUBLESHOOTING

If you encounter any issues with your Joydeem Electric Glass Steam Cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; damaged cord.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the cord is damaged, contact customer support.
Ceramic pot or glass pot cracks.	Sudden temperature change (e.g., washing hot pot with cold water); impact damage.	Always allow pots to cool completely before washing. Handle with care to prevent impact. Replacement parts may be available through customer service.
Steam cooking is slow or insufficient.	Insufficient water in the soup pot; improper assembly; lid not sealed properly.	Ensure adequate water is added to the 2L Soup Pot. Verify that all components are assembled correctly and the lid is securely placed.
Food not cooking evenly.	Overfilling the pot; uneven ingredient distribution.	Do not overfill pots. Ensure ingredients are distributed evenly for consistent heating.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	JD-ZQG9099
Brand	JOYDEEM
Item Weight	15 Pounds

Feature	Detail
Capacity	1.5 Liters (Ceramic Pot), 2 Liters (Glass Soup Pot)
Material	Ceramic, High Borosilicate Glass
Product Care Instructions	Hand Wash Only
Dishwasher Safe	No
Oven Safe	Yes (refer to specific pot instructions, not the electric base)
Lid Material	Glass
Package Dimensions	18.75 x 16.5 x 11.5 inches
Color	Yellow

9. WARRANTY AND SUPPORT

The Joydeem Electric Glass Steam Cooker comes with a one-year warranty. If you receive an item with any quality issues or require assistance, please contact the seller or Joydeem customer support. For specific contact information, refer to your purchase documentation or the seller's platform.