

## DeLonghi CTY2103.BK

# DeLonghi Eclettica CTY2103.BK 2-Slice Toaster User Manual

Model: CTY2103.BK

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. This appliance is intended for household use only. Do not use outdoors. Always ensure the voltage indicated on the rating label corresponds to your mains voltage.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- Do not use with food items containing sugar or jam, as these can melt and cause blockages or damage.

## 2. PRODUCT OVERVIEW

The DeLonghi Eclettica CTY2103.BK is a stylish and functional 2-slice toaster designed for optimal performance and ease of use. It features wide slots, variable browning control, and special functions for reheating and defrosting.



Figure 1: Front view of the DeLonghi Eclettica CTY2103.BK 2-Slice Toaster with two slices of toast.

## Components:

- **Toasting Slots:** Two wide slots for various bread types.
- **Carriage Lever:** Lowers and raises the bread carriage. Also features an extra-lift position.
- **Browning Control Dial:** Adjusts the desired level of browning (settings 1-6).
- **Reheat Button (⌂):** Reheats previously toasted bread without further browning.
- **Defrost Button (★):** Defrosts and toasts frozen bread.
- **Cancel Button (⏏):** Stops the toasting cycle at any time.
- **Removable Crumb Tray:** Collects crumbs for easy cleaning.
- **Bun Warmer (Accessory):** For warming buns, croissants, or pastries.

## Easily achieve your preferred results



### Complete set of controls

Electronic controls, separate for each side, allow you to easily create breakfast treats. The complete array of settings includes one-side bagel function, reheat, and defrost to toast bread from frozen. It also features adjustable progressive browning controls, plus a one-touch cancel function.



### Extra practicality

Wide slots and independent side operation mean the whole family can enjoy toast the way they like, from artisan breads to bagels and crumpets, the possibilities are endless. Practical extra-lift position to easily remove smaller slices, and removable crumb trays to prevent breadcrumbs building up.

Figure 2: Close-up view of the toaster's control panel, showing the browning dial, function buttons, and carriage lever.

## 3. SETUP AND FIRST USE

### Unpacking:

1. Remove all packaging materials and promotional labels from the toaster.
2. Check that all components are present and undamaged.

### Placement:

- Place the toaster on a stable, heat-resistant, and dry surface.
- Ensure there is adequate space around the toaster (at least 10 cm) and above it (at least 20 cm) for proper ventilation. Do not place it directly under wall cabinets.
- Keep the toaster away from curtains, drapes, and other flammable materials.

### Before First Use:

To eliminate any manufacturing odors, operate the toaster without bread for a few cycles at the highest browning setting (6). Ensure the room is well-ventilated during this process.

## 4. OPERATING INSTRUCTIONS

### 4.1 Toasting Bread

1. Plug the toaster into a suitable electrical outlet.
2. Place one or two slices of bread into the toasting slots.
3. Select your desired browning level using the **Browning Control Dial** (1 for light, 6 for dark).
4. Press the **Carriage Lever** down until it locks into place. The toasting cycle will begin, and the indicator light will illuminate.

5. When the desired browning is achieved, the toast will automatically pop up, and the indicator light will turn off.

## 4.2 Reheat Function (⚙)

Use this function to warm up previously toasted bread without further browning.

1. Place the cold toast into the slots.
2. Press the **Carriage Lever** down.
3. Press the **Reheat Button** (⚙). The reheat indicator light will illuminate.
4. The toaster will reheat the bread for a short period and then automatically pop up.

## 4.3 Defrost Function (❄)

This function allows you to toast frozen bread directly.

1. Place frozen bread into the slots.
2. Select your desired browning level using the **Browning Control Dial**.
3. Press the **Carriage Lever** down.
4. Press the **Defrost Button** (❄). The defrost indicator light will illuminate.
5. The toaster will automatically adjust the toasting time to defrost and then toast the bread to your selected browning level.

## 4.4 Cancel Function ( )

To stop the toasting cycle at any time, simply press the **Cancel Button** ( ). The toast will immediately pop up.

## 4.5 Extra Lift Position

For easier removal of smaller items like crumpets or English muffins, gently lift the **Carriage Lever** upwards after the toasting cycle is complete. This raises the toast higher out of the slots.



Figure 3: A hand demonstrating the extra lift feature to retrieve toast from the slots.

## 4.6 Using the Bun Warmer

The included bun warmer accessory can be used to warm buns, croissants, or pastries.

1. Place the bun warmer securely over the toasting slots.
2. Place the items to be warmed on top of the bun warmer.
3. Set the **Browning Control Dial** to a low setting (e.g., 1 or 2).
4. Press the **Carriage Lever** down to start the heating cycle.
5. Monitor the warming process closely to prevent burning. Press the **Cancel Button** ( ) when desired warmth is achieved.





Figure 4: The toaster with the bun warmer accessory in place, holding a croissant.

## 4.7 Product Operation Video

Your browser does not support the video tag.

Video 1: A short demonstration of the DeLonghi Eclettica toaster in use, showing the browning control, carriage lever, and crumb tray removal.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

## 5.1 Cleaning the Crumb Tray

The crumb tray should be emptied regularly to prevent crumb build-up, which can be a fire hazard.

1. Ensure the toaster is unplugged from the power outlet and completely cool.
2. Pull out the **Removable Crumb Tray** located at the bottom rear of the toaster.
3. Empty the crumbs into a waste bin.
4. Wipe the tray with a damp cloth if necessary, then dry thoroughly.
5. Slide the crumb tray back into place until it clicks securely.



Figure 5: The removable crumb tray being pulled out from the back of the toaster for cleaning.

## 5.2 Cleaning the Exterior

1. Ensure the toaster is unplugged and cool.



2. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.
3. Dry thoroughly with a soft, dry cloth.

***Never immerse the toaster in water or any other liquid.***

## 6. TROUBLESHOOTING

If you encounter issues with your toaster, please refer to the following common problems and solutions:

| Problem                         | Possible Cause                                           | Solution                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Toaster does not turn on.       | Not plugged in; power outage; faulty outlet.             | Ensure the toaster is securely plugged into a working outlet. Check your circuit breaker.                                                                                     |
| Toast does not pop up.          | Carriage lever not fully depressed; mechanical issue.    | Ensure the carriage lever is pushed down until it locks. If the issue persists, contact customer support.                                                                     |
| Toast is too light or too dark. | Browning control setting is incorrect.                   | Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.                                                                   |
| Smoke coming from toaster.      | Crumbs accumulated; food stuck in slots; first use odor. | Immediately press the Cancel button and unplug. Empty the crumb tray. Remove any stuck food (only when unplugged and cool). If it's the first use, some smoke/odor is normal. |
| Food stuck in slots.            | Oversized food item; food expanded during toasting.      | Unplug the toaster and allow it to cool completely. Carefully remove the food using non-metallic tongs. Never use metal objects.                                              |

## 7. SPECIFICATIONS

| Feature                        | Specification               |
|--------------------------------|-----------------------------|
| Model Number                   | CTY2103.BK                  |
| Brand                          | DeLonghi                    |
| Colour                         | Black                       |
| Material                       | Stainless Steel             |
| Product Dimensions (D x W x H) | 31D x 21W x 16H centimetres |
| Wattage                        | 900 watts                   |
| Voltage                        | 240 Volts                   |
| Number of Slices               | 2                           |



| Feature           | Specification                                                                                   |
|-------------------|-------------------------------------------------------------------------------------------------|
| Browning Settings | 6                                                                                               |
| Special Features  | Defrost Mode, Reheat Mode, Removable Crumb Tray, Variable Browning Control, Extra Lift Position |
| Item Weight       | 1.9 Kilograms                                                                                   |
| Country of Origin | China                                                                                           |

## 8. WARRANTY AND CUSTOMER SUPPORT

Your DeLonghi Eclettica CTY2103.BK Toaster comes with a standard manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical assistance, troubleshooting beyond this manual, or to inquire about warranty service, please contact DeLonghi customer support through their official website or the contact information provided in your product packaging.

You can also visit the official DeLonghi store on Amazon for more product information and support:

[DeLonghi Store](#)