

[manuals.plus](#) /

› [COLORROOM](#) /

› [COLORROOM C5 Android 14 Tablet User Manual](#)

COLORROOM C5

COLORROOM C5 Tablet User Manual

Model: C5

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your COLORROOM C5 Android 14 Tablet. Please read this manual carefully before using your device to ensure proper functionality and to maximize your user experience. Keep this manual for future reference.

2. WHAT'S IN THE Box

Verify that all items are present in the package:

- COLORROOM C5 Tablet
- Charger
- Wireless Keyboard
- Wireless Mouse
- Protective Case
- Stylus



Image: All components included with the COLORROOM C5 Tablet.

3. SETUP GUIDE

3.1 Initial Charging

Before first use, fully charge the tablet using the provided charger. Connect the Type-C cable to the tablet's charging port and the adapter to a power outlet. The charging indicator will show the charging status.

8000mAh Long Lasting Battery

Type-C Fast Charge



🎵 24H
Music

🌐 12H
Web

📺 9H
Video

⌚ 500H
Standby

Image: The tablet features an 8000mAh battery with 18W fast charging support, providing extended usage times.

3.2 Power On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the COLORROOM logo appears.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" and confirm.
- **To Restart:** From the power-off menu, select "Restart" and confirm.

3.3 Connecting Peripherals (Keyboard, Mouse, Stylus)

The included keyboard and mouse connect wirelessly via Bluetooth. The stylus is a passive touch pen and does not require pairing.

1. Ensure Bluetooth is enabled on your tablet (Settings > Connected devices > Bluetooth).
2. Put the keyboard/mouse into pairing mode (refer to their individual instructions if needed).
3. On the tablet, search for available devices and select the keyboard/mouse to pair.

3.4 Wi-Fi and Bluetooth Connection

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Internet**.
2. Turn on Wi-Fi. The tablet will scan for available networks.
3. Select your desired network and enter the password if prompted.

To connect to a Bluetooth device:

1. Go to **Settings > Connected devices > Connection preferences > Bluetooth**.
2. Turn on Bluetooth.
3. Ensure the Bluetooth device is in pairing mode.
4. Select the device from the list of available devices to pair.

5G+2.4G WiFi & BT 5.0

High-speed 5G+2.4G WiFi dual-band access, allowing you to quickly access the Internet ; Bluetooth 5.0, giving you high-fidelity audio enjoyment. The expansion of TF card to 1TB to bring massive photos and files directly to the tablet



BT 5.0



5G+2.4G WiFi



11 Inch High Resolution 1280*800

Brilliant high-definition picture quality

Image: The tablet supports dual-band 2.4GHz/5GHz Wi-Fi and Bluetooth 5.0 for fast and reliable connections.

3.5 Inserting MicroSD Card

The tablet supports microSD cards up to 1TB for expanded storage.

1. Locate the microSD card slot on the side of the tablet.
2. Gently insert the microSD card into the slot until it clicks into place.
3. The tablet will recognize the new storage. You may be prompted to format it for optimal use.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation (Android 14)

Your tablet runs on Android 14, offering an intuitive user interface.

- **Home Screen:** Swipe left/right to navigate between home screens.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings toggles (Wi-Fi, Bluetooth, Brightness, etc.).
- **Multitasking:** Swipe up from the bottom and hold, then release to view recent apps. Swipe left/right to switch or swipe up to close an app.

More program operations

The C5 offers 6GB RAM and up to 12GB RAM with up to 6GB virtual memory expansion, combined with a 128GB high-speed storage cache and a micro SD card with 1TB capacity expansion to meet growing storage demands.

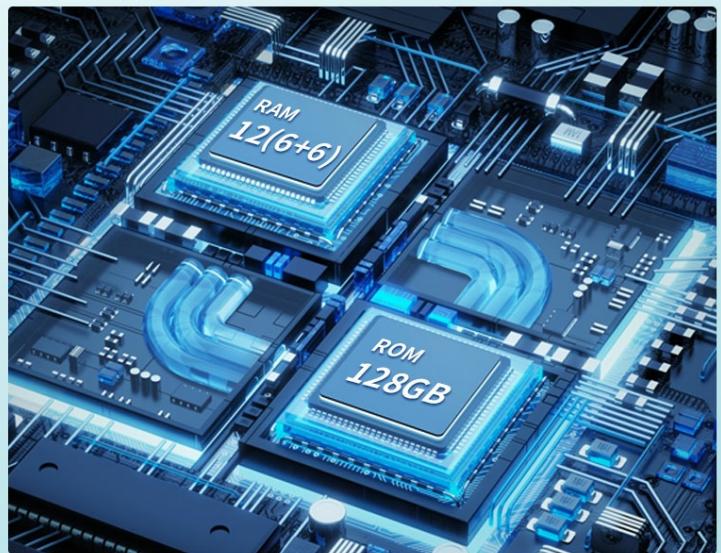


Image: The Android 14 operating system provides a new user experience with enhanced features.

4.2 Display Features

The 11-inch Full HD (800x1280) display with IPS In-cell technology provides clear and vibrant visuals.

- **Brightness Adjustment:** Adjust screen brightness from the quick settings panel or in Settings > Display.
- **Screen Rotation:** Enable or disable auto-rotate from quick settings.

4.3 Performance and Storage

The tablet is powered by a Unisoc T606 octa-core processor and features 12GB RAM (6GB physical + 6GB extended) and 128GB internal storage.

12GB+128GB Large Capacity Combo



12GB RAM

6GB RAM + 6GB Expandable Memory



128GB ROM

Support Micro SD cards up to 1TB



Image: The tablet offers ample memory and storage for multitasking and storing files.

4.4 Camera Usage

The tablet is equipped with dual cameras (front and rear).

- Open the **Camera** app from the home screen or app drawer.
- Tap the shutter button to take photos.
- Switch between front and rear cameras using the camera icon.

4.5 Wireless Projection

You can project your tablet's screen to a compatible external display wirelessly.

1. Ensure your external display supports wireless projection (e.g., Miracast, Chromecast).
2. On your tablet, go to **Settings > Connected devices > Connection preferences > Cast**.
3. Select your external display from the list to begin mirroring.



Image: Wireless projection allows you to cast your tablet's content to a larger screen.

4.6 Google Play Store and Apps

The tablet is GMS certified, providing full access to the Google Play Store.

- Open the **Play Store** app.
- Sign in with your Google account or create a new one.
- Browse and download applications, games, movies, and books.



Android 14




Widgets



Privacy



Safety & Emergency

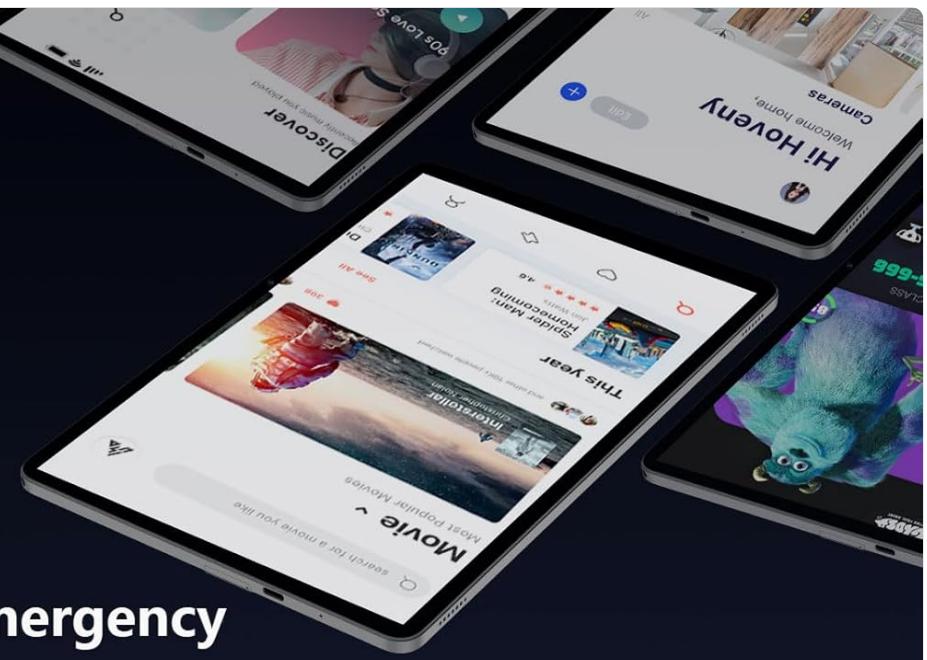

Kids Space



Parent Control



Applique Lock

Image: Android 14 offers various features including parental controls and app management.

5. MAINTENANCE

5.1 Cleaning the Device

To clean your tablet, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner. Avoid using harsh chemicals or abrasive materials.

5.2 Software Updates

Regularly check for system updates to ensure optimal performance and security.

- Go to **Settings > System > System update**.
- Follow the on-screen prompts to download and install any available updates.

5.3 Storage Management

To manage your tablet's storage:

- Go to **Settings > Storage**.
- Here you can see storage usage and free up space by uninstalling apps, deleting files, or clearing cache.

6. TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Solution
Tablet does not power on.	Ensure the tablet is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, try holding the power button for 10-15 seconds.
Wi-Fi connection issues.	Check if Wi-Fi is enabled. Restart your router and the tablet. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance.	Close unused apps. Clear app caches (Settings > Apps > [App Name] > Storage & cache > Clear cache). Free up storage space. Restart the tablet.
Apps crashing or freezing.	Force stop the app (Settings > Apps > [App Name] > Force stop). Clear the app's cache and data. Reinstall the app. Ensure the tablet's software is up to date.
Bluetooth device not pairing.	Ensure Bluetooth is enabled on both devices. Put the Bluetooth device in pairing mode. Make sure the devices are close to each other. Restart both devices.
Camera not working.	Check app permissions for the camera (Settings > Apps > Camera > Permissions). Restart the tablet. If the issue persists, a factory reset might be necessary (see below).

6.1 Factory Reset

If you experience persistent issues, a factory reset can resolve many software-related problems. **Warning: This will erase all data on your tablet. Back up important data before proceeding.**

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision and enter your PIN/password if prompted.

7. SPECIFICATIONS

Detailed technical specifications for the COLORROOM C5 Tablet:

Feature	Specification
Model	C5
Operating System	Android 14
Processor	Unisoc T606 Octa-Core, 1.6 GHz
RAM	12GB (6GB physical + 6GB extended)
Internal Storage	128GB

Feature	Specification
Expandable Storage	Up to 1TB via microSD card
Display Size	11 Inches
Screen Resolution	800x1280 FHD IPS Incell
Rear Camera	8 MP
Front Camera	5 MP
Battery Capacity	8000mAh
Charging	18W Fast Charging, Type-C
Wi-Fi	802.11ac (2.4GHz/5GHz Dual-band)
Bluetooth	Bluetooth 5.0
Dimensions (LxWxH)	10.5 x 7 x 0.1 inches
Item Weight	3.08 pounds

11 inch 800x1280 FHD



8000mAh

T606 Octa-Core



12GB



128GB



2.4G+5Ghz

Android14



Dual Camera

**5MP
8MP**



GPS



Bluetooth 5.0

Image: Key specifications of the COLORROOM C5 Tablet.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

COLORROOM products are covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official COLORROOM website. Keep your proof of purchase for warranty claims.

8.2 Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact COLORROOM customer support. Contact details can typically be found on the product packaging, the official COLORROOM website, or through your retailer.

Related Documents - C5

	<p>Aoocci 5" Motorcycle CarPlay PND DVR User Manual</p> <p>User manual for the Aoocci 5-inch Motorcycle CarPlay PND DVR, covering models C5 (P501) and C5Pro (P501DT). Includes product overview, specifications, mounting instructions, interface details, and troubleshooting.</p>
	<p>Ottocast CarPlay Lite C5 SE Motorcycle Portable Display - Wireless CarPlay & Android Auto</p> <p>The Ottocast CarPlay Lite C5 SE is a portable display for motorcycles, offering seamless wireless CarPlay and Android Auto integration, GPS functionality, and essential features for riders. This guide covers its specifications, setup, and usage.</p>
	<p>Aoocci 5" Motorcycle CarPlay PND DVR User Manual (C5 P501/P501DT)</p> <p>User manual for the Aoocci 5" Motorcycle CarPlay PND DVR, covering models C5 (P501), P501-D, and P501-DT. Includes product overview, specifications, composition list, mounting instructions, interface guide, wireless connection tutorials, and troubleshooting Q&A.</p>
	<p>Motion C5 and Motion F5 User's Guide</p> <p>Comprehensive user guide for Motion Computing C5 and F5 semi-rugged pen-based tablet computers, detailing setup, features, operation, care, and troubleshooting for professionals in healthcare, manufacturing, and field service.</p>
	<p>Motion C5 Mobile Clinical Assistant User Training Manual</p> <p>Comprehensive user training manual for the Motion C5 Mobile Clinical Assistant, covering device operation, data entry, hardware features (barcode, RFID, camera), power management, and maintenance for healthcare professionals.</p>
	<p>User's Manual: Wireless CarPlay & Android Auto Module for Peugeot/Citroen SMEG/MRN</p> <p>Installation and user manual for the CARABC wireless CarPlay and Android Auto module designed for Peugeot and Citroen vehicles with SMEG and MRN systems. Includes setup, connection, and troubleshooting guides.</p>