



Manuals.plus /

- › **LELO** /
- › LELO MIA 3 Personal Massager Instruction Manual

LELO MIA 3

LELO MIA 3 Personal Massager Instruction Manual

Model: 12007 | Brand: LELO

1. INTRODUCTION

The LELO MIA 3 is a compact and discreet personal massager designed for spontaneous satisfaction. Its ultra-smooth, petite lipstick shape makes it an ideal travel companion. This manual provides essential information for the safe and effective use of your MIA 3 device.



Image: The LELO MIA 3 Personal Massager in purple, displayed alongside its elegant black packaging.

2. KEY FEATURES

The LELO MIA 3 incorporates advanced design and functionality for an enhanced experience:

- **8 Pleasure Settings:** Choose from eight distinct vibration patterns, ranging from gentle murmurs to intense pulses, to suit your preference.
- **Travel-Ready & Discreet:** Its compact dimensions (22 x 22 x 111 mm / 0.87 x 0.87 x 4.37 in) and lipstick-inspired design ensure it can be carried discreetly.
- **Sculpted Tip:** The specifically molded shape and tip are designed to target the clitoris for precise and intense

sensations.

- **USB Rechargeable & Waterproof:** Enjoy unlimited use anytime, anywhere, including in the bath or shower, thanks to its fully waterproof design and convenient USB charging.
- **Luxurious Feel:** Crafted from upgraded, body-safe silicone material that feels warm and smooth to the touch.

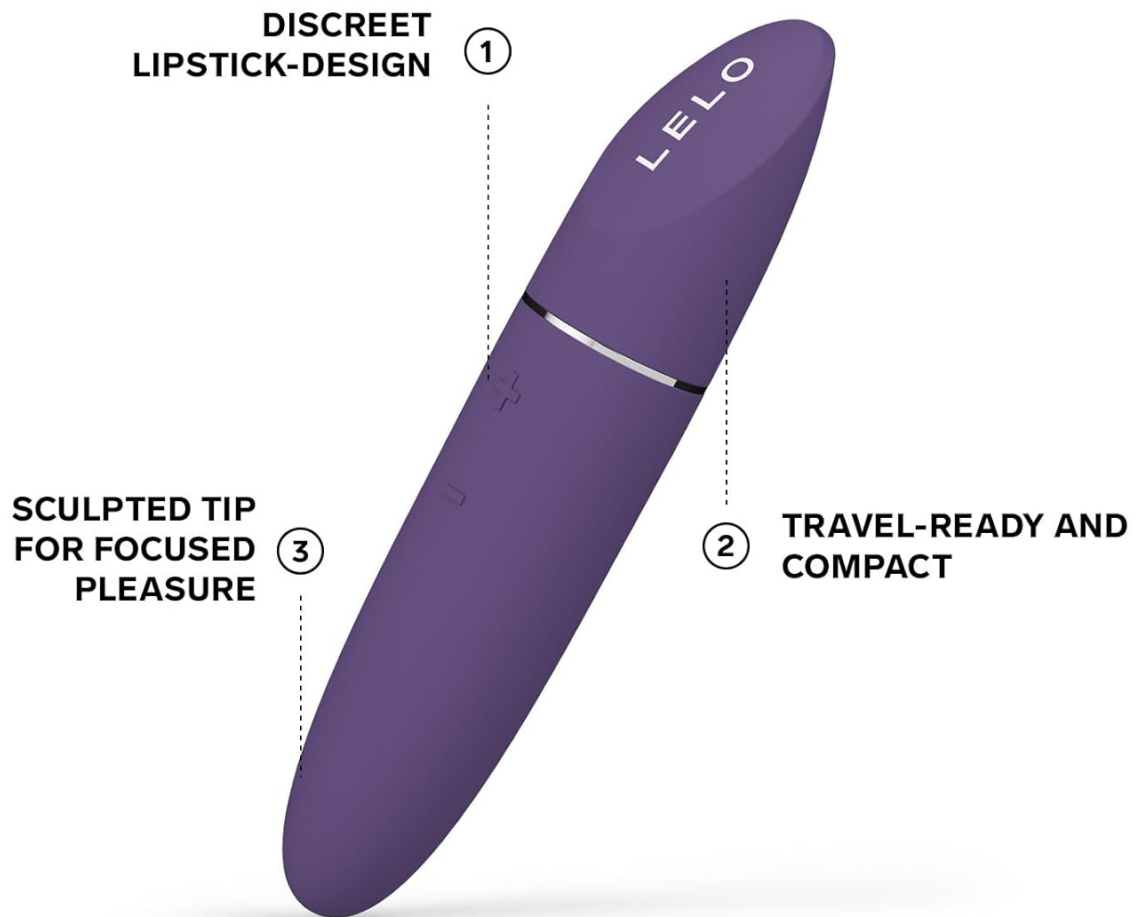


Image: Visual representation of the MIA 3's discreet lipstick design, compact size, and sculpted tip for focused pleasure.

Features



8 PLEASURE SETTINGS

powerful performance in a subtle design



LUXURIOUS FEEL WITH UPGRADED MATERIAL

that feels warm to the touch



WATERPROOF DESIGN

perfect for the bath and shower

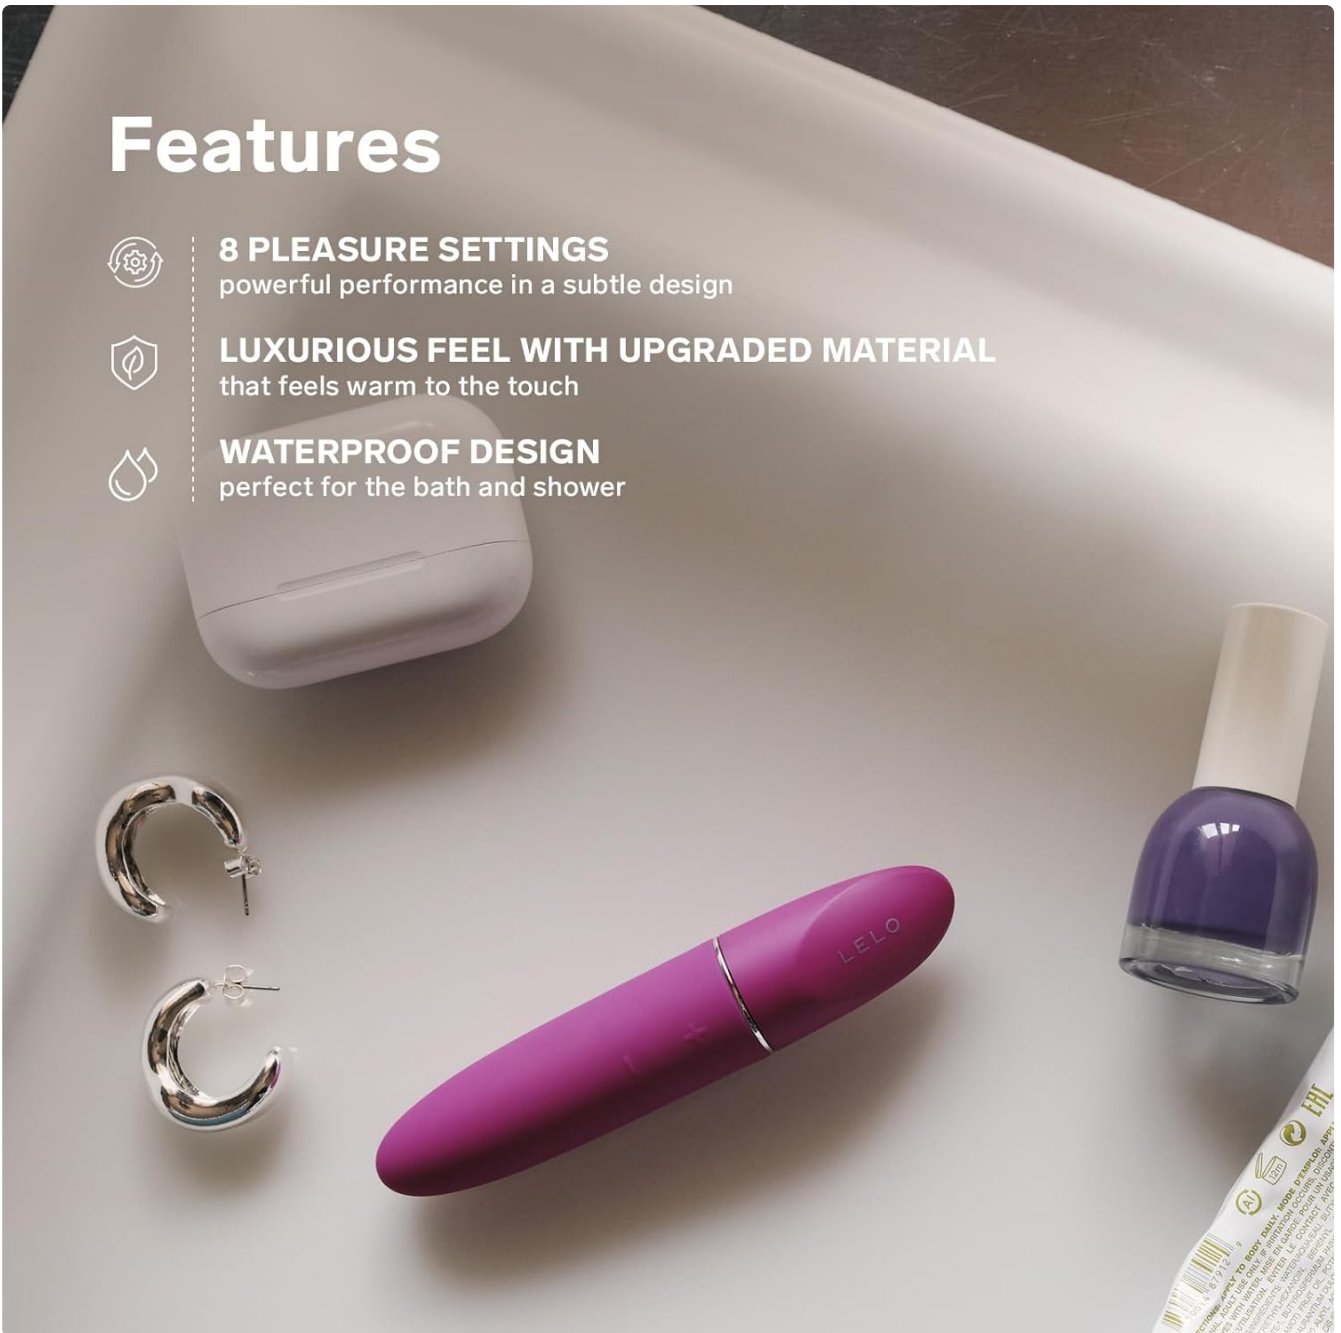


Image: The LELO MIA 3 in a lifestyle setting, emphasizing its 8 pleasure settings, luxurious feel, and waterproof capabilities.

3. SETUP

3.1 First Use & Charging

Before the first use, fully charge your LELO MIA 3 for approximately 2 hours. The device features an integrated USB charger, eliminating the need for separate cables. Simply remove the cap to reveal the USB connector and plug it into any standard USB port (e.g., computer, USB wall adapter).

A full charge provides up to 1.5 hours of continuous use and up to 90 days of standby time.

3.2 Travel Lock

To prevent accidental activation during transport, the MIA 3 features a travel lock. To lock or unlock the device, hold both the '+' and '-' buttons simultaneously for 3 seconds.

Useful information



CHARGING TIME / USE TIME

up to 2 h / up to 1.5 h



TRAVEL LOCK

to unlock, hold + and – for 3 seconds



USB RECHARGEABLE & WATERPROOF

enjoy unlimited climaxes anytime, anywhere



STAND BY

up to 90 days



Image: Key information regarding charging, use time, travel lock, and USB rechargeable feature of the MIA 3.

4. OPERATING INSTRUCTIONS

Follow these steps to operate your LELO MIA 3:

1. **To Turn On:** Press the '+' button shortly.
2. **To Switch Between 8 Modes:** Double press either the '+' or '-' button.
3. **To Decrease or Increase Intensity:** Press the '+' button to increase intensity or the '-' button to decrease intensity.
4. **To Turn Off:** Press the '-' button.

How to use

BEFORE FIRST USE

charge for 2 hours

TO TURN IT ON

press + button shortly

TO SWITCH BETWEEN 8 MODES

double press + or - button

TO DECREASE OR INCREASE INTENSITY

press the + and the - buttons

TO TURN IT OFF

press the - button



Image: Step-by-step visual guide on how to operate the LELO MIA 3, including power and mode controls.

5. MAINTENANCE

5.1 Cleaning

The LELO MIA 3 is fully waterproof, making cleaning simple. Clean the device thoroughly after each use with warm water and a toy cleaner, or a mild soap. Rinse well and pat dry with a lint-free cloth.

5.2 Storage

Store your LELO MIA 3 in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to store it in the provided satin storage pouch to protect it from dust and damage.

6. TROUBLESHOOTING

If you encounter any issues with your LELO MIA 3, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted or travel lock is active.	Charge the device for 2 hours. Deactivate travel lock by holding '+' and '-' buttons for 3 seconds.
Device does not turn off.	Incorrect button press or software glitch.	Ensure you are pressing the '-' button firmly and briefly. If issues persist, allow the battery to fully deplete and then recharge.
Cap does not stay on securely.	Misalignment or wear.	Ensure the cap is aligned correctly with the device body before pushing it on firmly.
Vibrations are weak.	Low battery or incorrect setting.	Recharge the device. Cycle through the 8 pleasure settings to find a stronger intensity.

If the problem persists after attempting these solutions, please contact LELO customer support for further assistance.

7. SPECIFICATIONS

Attribute	Detail
Model Name	MIA 3
Model Number	12007
Dimensions (L x W x H)	111 x 22 x 22 mm (4.37 x 0.87 x 0.87 inches)
Weight	36 g (1.27 ounces)
Material	Body-safe Silicone
Battery Type	1 Lithium Ion (included)
Charging Time	Up to 2 hours
User Time	Up to 1.5 hours
Standby Time	Up to 90 days
Waterproof Rating	Fully Waterproof (IPX7 standard)
Safety Certification	ISO 3533 Safety Certified, Certified Body-Safe

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The LELO MIA 3 comes with a **1-year warranty** covering manufacturing defects and a **10-year quality guarantee**, ensuring

long-term satisfaction with your product. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For further assistance, product registration, or to view the full warranty terms, please visit the official LELO website or contact their customer support team. Contact details can typically be found on the LELO packaging or website.