Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > ZEBRONICS /
- > ZEBRONICS Zeb-Escape 10 Wireless BT Earphone User Manual

ZEBRONICS ZEB-NBI 5

ZEBRONICS Zeb-Escape 10 Wireless BT Earphone User Manual

Model: ZEB-NBI 5

Introduction

Thank you for purchasing the ZEBRONICS Zeb-Escape 10 Wireless BT Earphone. This manual provides essential information for setting up, operating, and maintaining your device. Please read it carefully before use to ensure optimal performance and longevity of your earphones.



Image: The ZEBRONICS Zeb-Escape 10 Wireless BT Earphone, featuring a green and black neckband design with inear earbuds.

PACKAGE CONTENTS

The following items are included in your product package:

- 1 U Neckband Earphone
- 1 U Charging Cable (Type-C)
- 1 U QR Code Guide

SETUP

1. Charging the Earphone

Before first use, fully charge the earphone. Use the provided Type-C charging cable to connect the earphone to a USB power source (e.g., computer USB port, wall adapter). The LED indicator will show the charging status.

• Charging Time: Approximately 1.5 hours.



Image: The earphone's control module with a Type-C charging port, showing a charging cable connected.

2. Bluetooth Pairing

To connect your earphone to a Bluetooth-enabled device:

- 1. Ensure the earphone is charged and powered off.
- 2. Press and hold the multi-function button on the earphone until the LED indicator flashes red and blue, indicating it is in pairing mode.
- 3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
- 4. Select "ZEB-ESCAPE 10" from the list of found devices.
- 5. Once connected, the LED indicator will flash blue slowly or turn off, depending on the model.

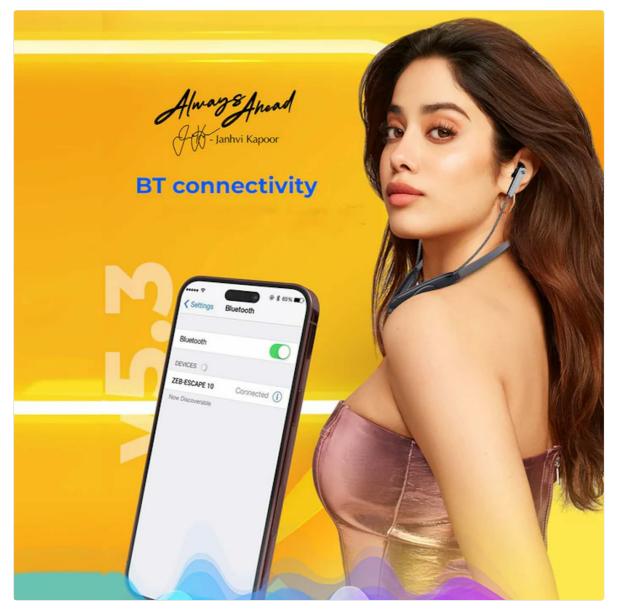


Image: A smartphone display illustrating the Bluetooth pairing process, showing the earphone model 'ZEB-ESCAPE 10' as connected.

OPERATING INSTRUCTIONS

Power On/Off

- Power On: Press and hold the multi-function button until the LED indicator lights up.
- · Power Off: Press and hold the multi-function button until the LED indicator turns off.

Volume and Media Control

The earphone features integrated controls for managing audio playback and volume.

- Volume Up: Press the '+' button.
- Volume Down: Press the '-' button.
- Play/Pause: Press the multi-function button once.
- Next Track: Press and hold the '+' button.
- Previous Track: Press and hold the '-' button.

Call Function

Manage calls directly from your earphone.

- Answer Call: Press the multi-function button once.
- End Call: Press the multi-function button once during a call.
- Reject Call: Press and hold the multi-function button.
- Redial Last Number: Double-press the multi-function button.



Image: A smartphone showing an incoming call interface, indicating the earphone's call handling capability.

Voice Assistant Support

Activate your device's voice assistant (e.g., Google Assistant, Siri) by triple-pressing the multi-function button.

Magnetic Earpiece

The earpieces are magnetic, allowing them to securely attach to each other when not in use, preventing tangling and ensuring they stay in place around your neck.



Image: A detailed view of an earbud, illustrating its design for a stable and comfortable fit.

MAINTENANCE

To ensure the longevity and optimal performance of your ZEBRONICS Zeb-Escape 10 earphones, follow these maintenance guidelines:

- Cleaning: Use a soft, dry cloth to clean the earphones. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the earphones in a cool, dry place away from direct sunlight and extreme temperatures.
- Water Resistance: The earphones are water resistant. Avoid submerging them in water or exposing them to heavy rain.
- Charging: Only use the provided charging cable or a certified Type-C cable. Avoid overcharging.

TROUBLESHOOTING

If you encounter issues with your earphone, refer to the following common problems and solutions:

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Earphone does not power on.	Ensure the earphone is fully charged.
Cannot pair with device.	Ensure the earphone is in pairing mode (flashing red/blue). Turn off and on Bluetooth on your device. Move closer to the earphone.
No sound or low volume.	Check volume levels on both the earphone and your connected device. Ensure the earphone is properly paired.
Call quality issues.	Ensure you are within Bluetooth range. Check for obstructions between the earphone and your device.

SPECIFICATIONS

Technical specifications for the ZEBRONICS Zeb-Escape 10 Wireless BT Earphone:

Feature	Detail
Model Name	ZEB-NBI 5
Bluetooth Version	v5.3
Supported BT Profiles	HSP / HFP / A2DP / AVRCP
Driver Size	10mm
Speaker Impedance	16Ω
Playback Time	Up to 20 hours (at 50% volume)
Talk Time	Up to 20 hours
Charging Time	1.5 hours
Standby Time	200 hours
Net Weight	26g
Control Type	Media Control, Touch
Water Resistance Level	Water Resistant
Special Features	Fast Charging, Foldable, Microphone Included, Sweatproof

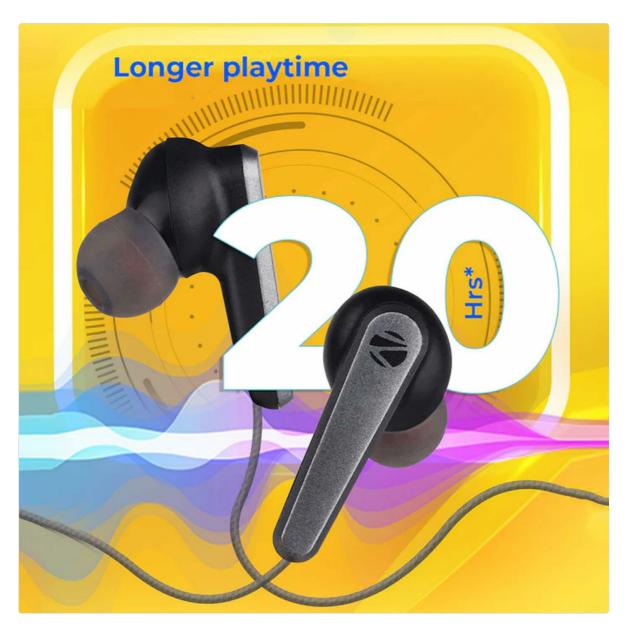


Image: Visual representation of the earphone's 20-hour playback capability.



Image: A close-up of an earbud, highlighting the 10mm audio drivers responsible for sound output.

WARRANTY INFORMATION

The ZEBRONICS Zeb-Escape 10 Wireless BT Earphone comes with a6-month warranty from the date of purchase. This warranty covers manufacturing defects. Please retain your purchase receipt as proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty claims, please contact ZEBRONICS customer service. Refer to the QR code guide included in your package or visit the official ZEBRONICS website for contact details.

© 2025 ZEBRONICS. All rights reserved.



Zebronics ZEB-LARK Wireless Neckband Earphone User Manual

User manual for the Zebronics ZEB-LARK wireless neckband earphones. Learn about features, specifications, Bluetooth pairing, music playback, calling, and charging instructions for this consumer audio product.



Zebronics ESCAPE 80 Wireless Neckband Earphone User Manual

User manual for the Zebronics ESCAPE 80 wireless neckband earphone, covering features, specifications, product representation, usage instructions, LED indications, and charging.



Zebronics ZEB-YOGA 4 Wireless Neckband Earphone User Manual

User manual for the Zebronics ZEB-YOGA 4 Wireless Neckband Earphone, detailing features, specifications, Bluetooth pairing, button usage, call functions, charging, and LED indicators.



Zebronics ZEB-YOGA 4 Wireless Neckband Earphone User Manual | Features, Specs, Pairing Guide

Comprehensive user manual for the Zebronics ZEB-YOGA 4 wireless neckband earphones. Find details on Bluetooth pairing, button functions, specifications, charging, and LED indicators.



Zebronics GIANT Wireless Neckband Earphone User Manual

User manual for the Zebronics GIANT Wireless Neckband Earphone, detailing features such as 160 hours of playback, low latency gaming mode, Type-C charging, and comprehensive button functions for calls and media control.



Zebronics ZEB-YOGA 10 Wireless Neckband Earphone User Manual | Features & Specs

User manual for the Zebronics ZEB-YOGA 10 wireless neckband earphones. Learn about features, specifications, Bluetooth pairing, button controls, voice assistant activation, and charging.