

[manuals.plus](#) /› [Panasonic](#) /› [Panasonic EH-NE85-K825 Fast Dry Ionic Hair Dryer User Manual](#)

## Panasonic EH-NE85

# Panasonic EH-NE85-K825 Fast Dry Ionic Hair Dryer User Manual

Model: EH-NE85-K825

## 1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Panasonic EH-NE85-K825 Fast Dry Ionic Hair Dryer. Please read this manual thoroughly before use and retain it for future reference.

## 2. SAFETY INFORMATION

To reduce the risk of electric shock, fire, or injury, always observe the following basic safety precautions:

- Do not use this appliance near water, such as in a bathtub, shower, or washbasin.
- Always unplug the appliance immediately after use.
- Do not use the appliance if the cord or plug is damaged.
- Keep the air inlet and outlet clear of obstructions during use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not wrap the power cord around the appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Panasonic EH-NE85-K825 Hair Dryer
- Concentrator Nozzle



Image 1: The Panasonic EH-NE85-K825 hair dryer, shown without any attachments.



Image 2: Close-up view of the concentrator nozzle accessory.

## 4. PRODUCT FEATURES

The Panasonic EH-NE85-K825 hair dryer is designed for efficient and gentle hair drying with advanced features:

- **2300W Power:** Provides strong airflow for fast drying.
- **Ionic Technology:** Helps reduce static and frizz, leaving hair smoother.
- **Air Boost Nozzles:** Designed to enhance airflow for quicker drying.
- **Heat Protection Mode:** Maintains a consistent, optimal temperature to prevent heat damage.
- **3 Speed Settings:** Allows for customized drying intensity.
- **Easy-to-Clean Filter:** Simplifies maintenance and prolongs appliance life.
- **Concentrator Nozzle:** Directs airflow for precise styling.

## 5. SETUP

- 1. Unpacking:** Carefully remove the hair dryer and all accessories from the packaging.
- 2. Attaching the Concentrator Nozzle:** Align the concentrator nozzle with the front of the hair dryer and push it firmly until it clicks into place. Ensure it is securely attached before use.
- 3. Connecting to Power:** Plug the power cord into a suitable electrical outlet. Ensure your hands are dry before handling the plug.



Image 3: The hair dryer with the concentrator nozzle correctly attached.

## 6. OPERATING INSTRUCTIONS

Follow these steps for optimal use of your hair dryer:

- 1. Power On/Off:** Use the main power switch located on the handle to turn the appliance on or off.
- 2. Adjusting Speed:** Select your desired airflow speed using the speed switch. Options typically include

low, medium, and high.

3. **Adjusting Temperature:** Select your desired temperature setting using the temperature switch. Options may include cool, warm, and hot.
4. **Using Heat Protection Mode:** Activate the heat protection mode for gentle drying that minimizes heat damage. Refer to the specific button or switch for this function on your device.
5. **Using the Concentrator Nozzle:** For precise styling or to smooth specific sections of hair, attach the concentrator nozzle. Direct the airflow downwards along the hair shaft.
6. **Cool Shot Function:** Press and hold the cool shot button (if available) to deliver a burst of cool air, which helps to set your hairstyle.

## 7. MAINTENANCE AND CLEANING

---

Regular maintenance ensures optimal performance and extends the life of your hair dryer.

- **Cleaning the Air Inlet Filter:**
  - a. Ensure the hair dryer is unplugged and cool.
  - b. Locate the air inlet filter cover at the rear of the appliance.
  - c. Gently twist or pull to remove the filter cover.
  - d. Clean any accumulated dust or hair from the filter using a soft brush or cloth.
  - e. Reattach the filter cover securely.
- **General Cleaning:** Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the hair dryer in a dry place, away from direct sunlight and moisture. Do not wrap the cord tightly around the appliance.



Image 4: Rear view of the hair dryer, highlighting the air inlet filter for cleaning.

## 8. TROUBLESHOOTING

If you encounter issues with your hair dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	No power supply.	Check if the plug is securely inserted into the outlet. Test the outlet with another appliance.

Problem	Possible Cause	Solution
Weak airflow.	Air inlet filter is blocked.	Unplug the appliance and clean the air inlet filter as described in Section 7.
Appliance overheats and shuts off.	Air inlet or outlet is blocked, or prolonged use.	Unplug the appliance and allow it to cool down. Clean the air inlet filter. Ensure air outlets are clear. Reduce usage time.

If the problem persists after attempting these solutions, please contact customer support.

## 9. SPECIFICATIONS

Feature	Specification
Model Number	EH-NE85-K825
Power	2300 Watts
Power Source	Corded Electric
Special Feature	Ionic Technology
Number of Speeds	3
Included Components	Concentrator
Dimensions (L x W x H)	9.2 x 22.2 x 23.2 cm
Weight	460 grams
Color	Black
Material	Plastic

## 10. WARRANTY AND SUPPORT

Your Panasonic EH-NE85-K825 Fast Dry Ionic Hair Dryer is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, service, or warranty claims, please contact Panasonic customer service through their official website or the contact information provided in your product documentation.