

[Manuals.plus](#) /

› [REVLON](#) /

› REVLON Ceramic Tourmaline 1" Flat Iron Instruction Manual RVST2217

REVLON RVST2217

REVLON Ceramic Tourmaline 1" Flat Iron Instruction Manual

Model: RVST2217

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your REVLON Ceramic Tourmaline 1" Flat Iron, Model RVST2217. Please read all instructions before use and retain this manual for future reference.



Figure 1: REVLON Ceramic Tourmaline 1" Flat Iron (Model RVST2217)

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** Keep away from water. As with most electrical appliances, electrical parts are electrically live even when the switch is off.
- Always unplug this appliance immediately after using it.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
- This appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the heated unit directly on any surface while it is hot or plugged in.
- Always store the appliance in a location free from moisture.
- Do not plug this appliance into a voltage converter.
- For external use only.

3. PRODUCT COMPONENTS

Familiarize yourself with the different parts of your REVLON Flat Iron:

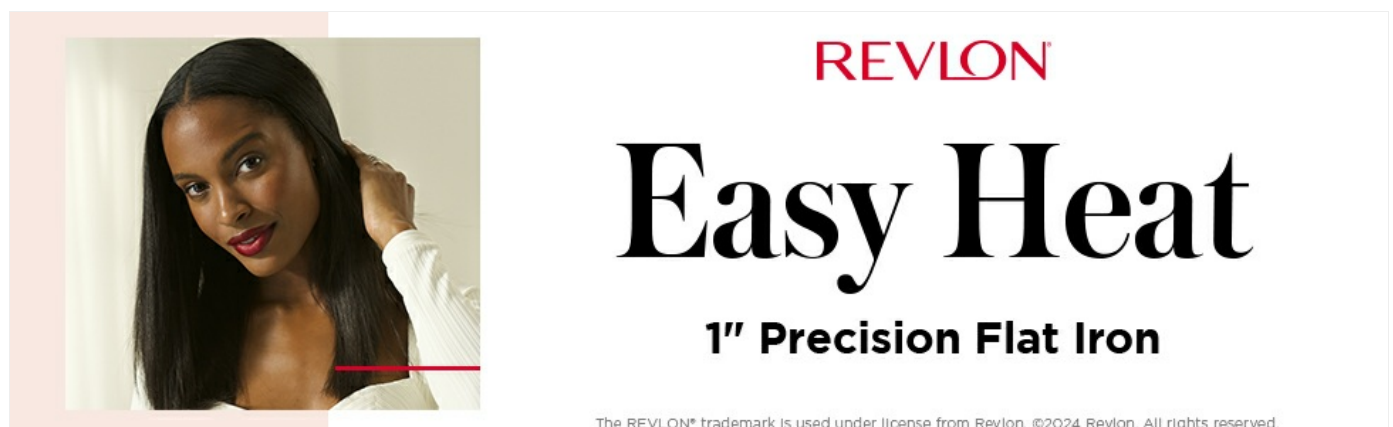


Figure 2: Key Components of the Flat Iron

1" Rounded Ceramic Tourmaline Plates: Designed for even heat distribution and creating smooth styles or curls.

5 Preset Temperature Settings: Allows selection of optimal heat for various hair types.

Plate-Locking Switch: Secures plates together for convenient storage.

Tangle-Free 6' Swivel Cord: Provides flexibility during use and prevents tangling.



Figure 3: Core Technologies

Ceramic Tourmaline Technology: Infuses shine and ensures even heat distribution for reduced damage.

TruGuard™ Technology: Helps prevent color fade in color-treated hair.

4. SETUP AND INITIAL USE

1. **Preparation:** Ensure your hair is clean, dry, and free of tangles. For best results and heat protection, apply a heat protectant spray.
2. **Plug In:** Insert the appliance plug into an electrical outlet. The flat iron features dual voltage, adjusting automatically for international use.
3. **Power On:** Slide the power switch to the "ON" position. The indicator light for the lowest temperature setting will illuminate.
4. **Select Temperature:** Use the temperature control buttons to select your desired heat setting. Refer to the table below for guidance. The selected temperature indicator light will blink until the iron reaches the set temperature, then it will glow steadily.



Figure 4: Temperature Settings

Temperature Guide:

Hair Type	Recommended Temperature	Setting Name
Fine, Damaged, or Color-Treated Hair	220°F - 330°F	Refresh, Smooth
Normal Hair	370°F - 400°F	Curl Power, Straight & Body
Thick, Coarse, or Hard-to-Style Hair	450°F	Ultra Sleek

Note: Always start with a lower temperature and increase if necessary to avoid heat damage.

5. OPERATING INSTRUCTIONS

5.1. Straightening Hair

1. Ensure the flat iron is heated to your desired temperature.
2. Divide your hair into small, manageable sections (approximately 1-2 inches wide).
3. Take one section of hair and place it between the heating plates, close to the roots.
4. Gently clamp the plates together and glide the flat iron slowly down the hair section from root to tip. Maintain a consistent speed to ensure even heat distribution.
5. Repeat on the same section if necessary, but avoid excessive passes to minimize heat exposure.
6. Continue with the remaining sections until all hair is straightened.

5.2. Creating Curls or Waves

The rounded plates of this flat iron allow for versatile styling, including curls and waves.

1. Ensure the flat iron is heated to your desired temperature.
2. Take a small section of hair.
3. Clamp the flat iron around the hair section, about an inch or two from the roots.
4. Rotate the flat iron 180 degrees (half turn) away from your face.
5. Slowly glide the flat iron down the hair shaft, maintaining the rotation. The hair will wrap around the barrel created by the rounded plates.
6. Release the hair when you reach the ends. Allow the curl to cool before touching it to set the style.
7. Repeat for all sections. For softer waves, gently brush through the curls after they have cooled.

6. CARE AND MAINTENANCE

6.1. Cleaning

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wipe the exterior surfaces and heating plates with a soft, damp cloth.
- Do not use abrasive cleaners or harsh chemicals, as these can damage the ceramic tourmaline coating.
- Ensure no water or moisture enters the appliance.

6.2. Storage

- Unplug the appliance and allow it to cool completely before storing.
- Engage the plate-locking switch to keep the plates closed for compact storage.
- Store the appliance in a cool, dry place, out of reach of children.
- Do not wrap the cord around the appliance, as this can cause damage over time.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not active.	Ensure the appliance is securely plugged into a functional electrical outlet. Check the circuit breaker if necessary.
Appliance heats up but then turns off.	Automatic shutoff feature activated.	This appliance is equipped with a 60-minute auto shutoff for safety. If you need to continue styling, turn the appliance off and then back on to reset.
Hair is not straightening effectively.	Temperature too low; sections too large; gliding too fast.	Increase the temperature setting (refer to the Temperature Guide). Use smaller hair sections. Glide the flat iron more slowly through the hair. Ensure hair is completely dry.
Hair feels damaged or burnt.	Temperature too high; excessive passes; no heat protectant.	Reduce the temperature setting. Limit passes over each hair section. Always use a heat protectant. Ensure hair is completely dry before styling.

8. PRODUCT SPECIFICATIONS

- **Model Number:** RVST2217
- **Plate Material:** Ceramic Tourmaline
- **Plate Size:** 1 inch
- **Temperature Settings:** 5 preset temperatures (up to 450°F)
- **Auto Shutoff:** 60 minutes
- **Voltage:** Dual Voltage (automatic adjustment)
- **Product Dimensions:** 15.5 x 4.6 x 4.6 inches
- **Item Weight:** 15.17 ounces
- **UPC:** 761318022176
- **Manufacturer:** Revlon

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or customer support, please refer to the warranty card included with your product or visit the official REVLON website. Do not attempt to repair the appliance yourself. Contact authorized service personnel for any repairs.

© 2024 REVLON. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D4FCP6QW>

More documents and user manuals: <https://manuals.plus/>