

Bosch PVQ711H26E

Bosch PVQ711H26E Series 6 Induction Hob with Integrated Extractor User Manual

Model: PVQ711H26E | Brand: Bosch

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Bosch PVQ711H26E Series 6 Induction Hob with Integrated Extractor. Please read these instructions carefully before first use and keep them for future reference.

SAFETY INFORMATION

Always observe the following safety precautions to prevent personal injury or damage to the appliance.

- **Electrical Safety:** Ensure the appliance is correctly installed by a qualified professional and connected to a properly grounded power supply as specified in the technical data.
- **Burn Hazard:** The hob surface remains hot after use. The residual heat indicator will illuminate until the surface is safe to touch. Do not touch hot surfaces.
- **Child Safety:** This appliance is equipped with a child safety lock to prevent accidental activation or changes to settings. Activate this function when children are present.
- **Overheating:** The PerfectFry Plus sensor helps prevent overcooking and overheating by automatically regulating temperature.
- **Flammable Materials:** Do not store flammable materials on or near the hob.
- **Integrated Extractor:** Ensure proper ventilation for the integrated extractor. Regularly clean grease filters to maintain efficiency and prevent fire hazards.

SETUP AND INSTALLATION

This induction hob with an integrated extractor requires careful installation. It is recommended that installation be performed by a qualified technician.

Dimensions and Space Requirements

The Bosch PVQ711H26E is a wider model, requiring sufficient counter space. Refer to the diagram below for

precise dimensions.

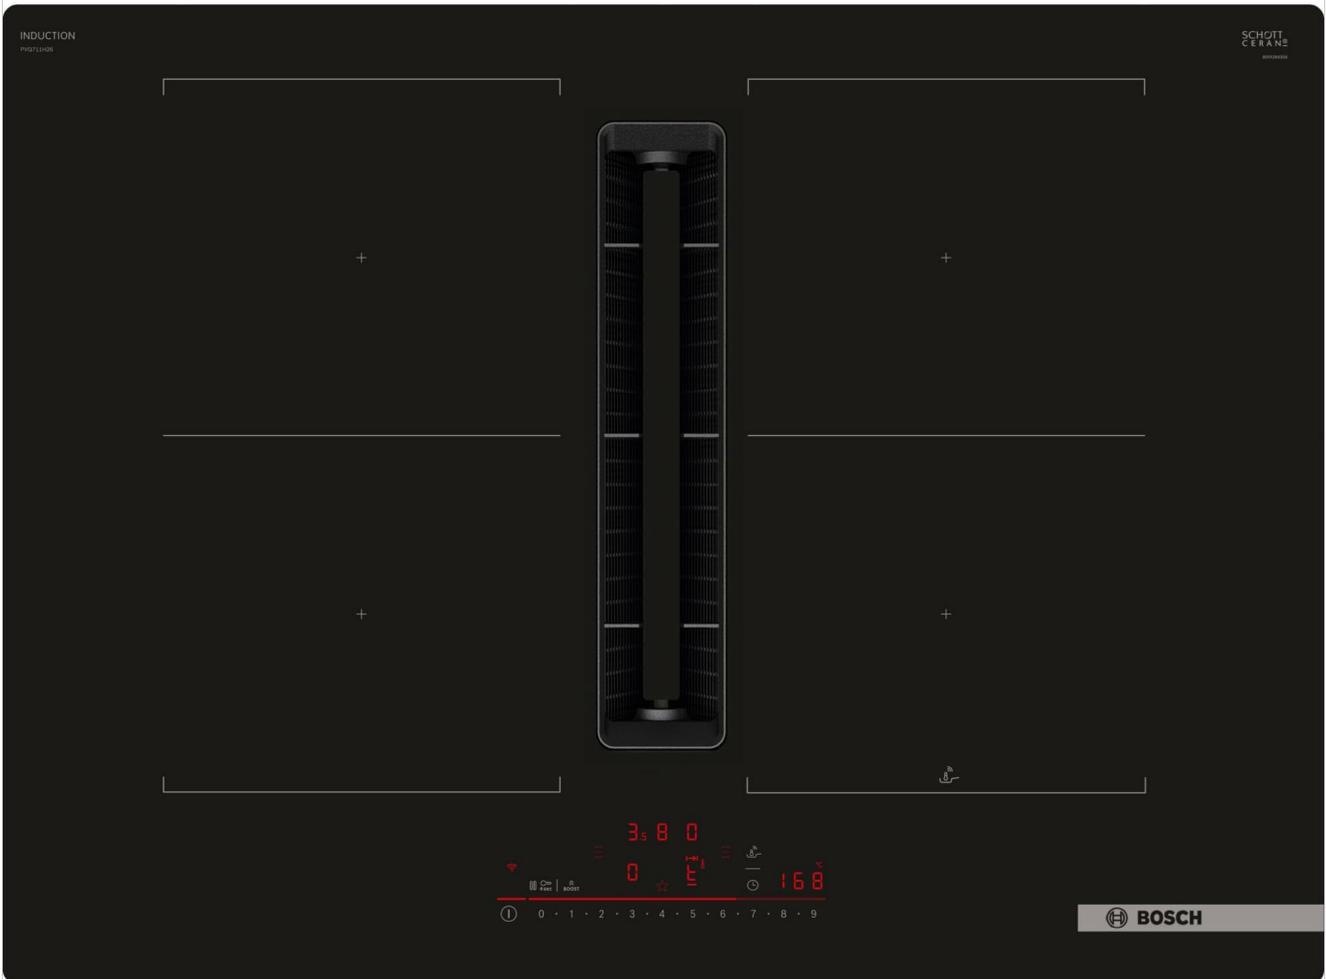


Figure 1: Appliance Dimensions. Note the overall width of 710mm and depth of 522mm. Each of the four cooking zones measures 190mm x 210mm.

Electrical Connection

The appliance operates on a supply voltage of 220-240V or 380-415V with a connected load of 7.4 kW. Ensure your electrical installation meets these requirements.

Extractor System Installation

The integrated extractor can operate in either ducted (circuit ouvert) or recirculating (circuit fermé) mode. Ensure the appropriate ducting or recirculation kit is installed correctly. The system includes a large liquid and condensate drainage system.

OPERATING INSTRUCTIONS

Your Bosch induction hob offers intuitive controls and advanced features for efficient cooking.

Control Panel and Display



Figure 2: Control Panel. The clear digital display provides real-time information on selected power levels and active functions.

The hob features DirectSelect controls and a clear digital display. You can also control the appliance remotely via the Home Connect app on your smartphone.

Cooking Zones and Power Levels

The hob has 4 induction cooking zones, each with 17 power levels for precise temperature control. The CombiZone function allows you to combine two cooking zones for larger cookware.

- **Booster Function:** Activate the Booster function for a specific zone to rapidly increase power and accelerate cooking.
- **QuickStart Function:** Automatically detects where you have placed cookware and displays the corresponding cooking zone.
- **ReStart Function:** If the hob is accidentally switched off, this function allows you to restore the last settings within a short period.
- **PerfectFry Plus Sensor:** This sensor automatically regulates the temperature of the cooking zone to prevent food from overcooking or burning.

Integrated Extractor Operation

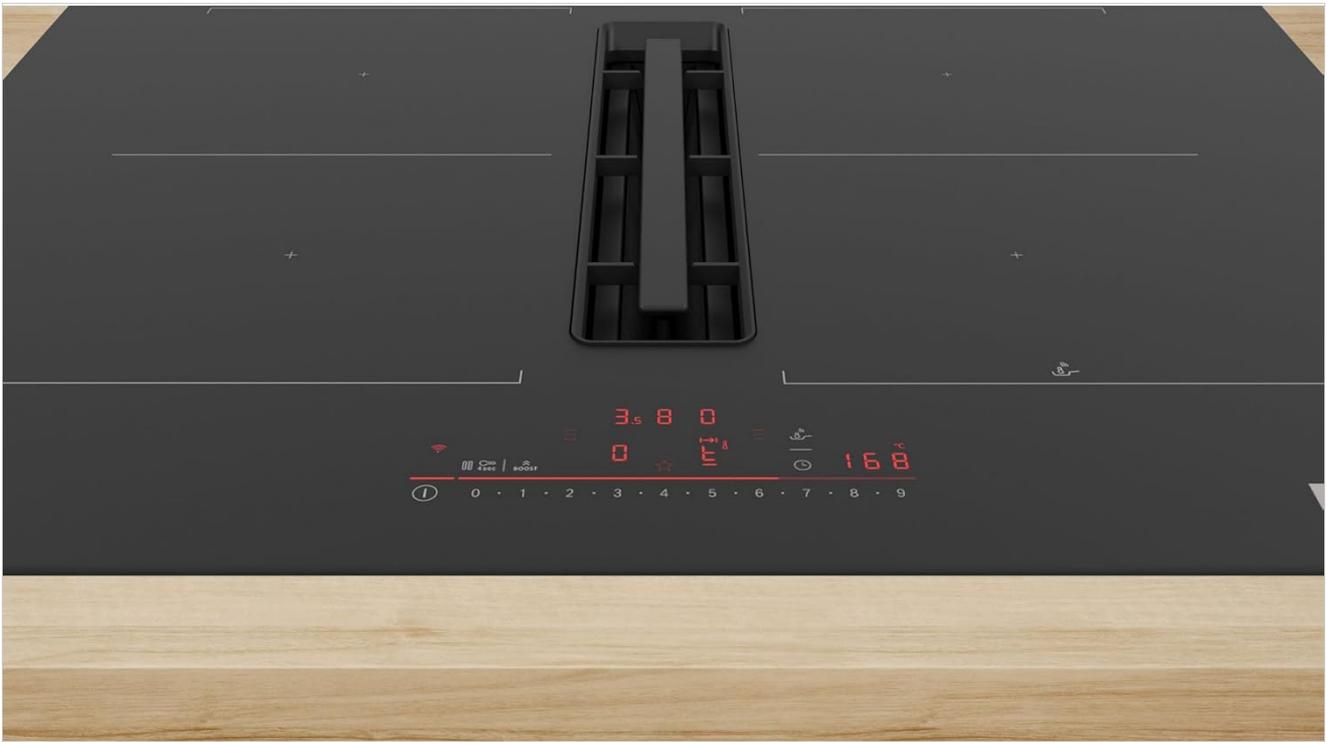


Figure 3: Integrated Extractor. The central vent efficiently removes cooking fumes and odors.

The integrated extractor features DirectSelect controls. The AutoOn function automatically activates ventilation when a cooking zone is in use. It offers an intensive mode for strong odors and steam, with a maximum extraction rate of 622 m³/h.

Timer Functions

The countdown timer allows you to set precise cooking durations. An audible signal will sound when the set time expires, and the cooking zone will automatically switch off.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and optimal performance of your appliance.

Hob Surface Cleaning



Figure 4: Ceramic Glass Surface. The smooth, scratch-resistant surface is easy to clean.

The ceramic glass surface is smooth and easy to clean. Wait for the residual heat indicator to turn off before cleaning to avoid burns. Use a soft cloth and a non-abrasive cleaner specifically designed for ceramic hobs. For stubborn stains, a hob scraper can be used carefully.

Extractor Filter Cleaning

The integrated extractor uses grease filters. These filters should be cleaned regularly according to the instructions in the full product manual to maintain optimal grease filtering efficiency (Class B) and airflow (Class A). A clean filter is crucial for effective odor and steam removal.

TROUBLESHOOTING

This section provides solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Hob does not switch on.	Child safety lock is active, or no power supply.	Deactivate the child safety lock. Check power connection and circuit breaker.
Cooking zone not heating.	Incorrect cookware, or PowerManagement function active.	Use induction-compatible cookware. Adjust power settings if PowerManagement is limiting power.
Extractor performance is low.	Grease filters are dirty, or obstruction in ducting.	Clean or replace grease filters. Check for obstructions in the ventilation system.
Error code displayed.	Specific internal fault.	Refer to the full user manual for specific error code meanings or contact customer support.

For more detailed troubleshooting, please consult the comprehensive user manual or contact Bosch customer service.

TECHNICAL SPECIFICATIONS

General	
Brand	Bosch
Model Number	PVQ711H26E
Series	Series 6
Color	Black
Hob Finish	Ceramic Glass
Dimensions (H x W x D)	223 mm x 710 mm x 522 mm
Weight	23.6 kg
Hob Features	
Number of Heating Zones	4
Number of Power Levels	17
Connected Load	7.4 kW
Supply Voltage	220-240V, 380-415V
Heating Zone Power (each)	3700 W
Zone Dimensions (each)	190 mm x 210 mm
Special Functions	Booster, QuickStart, ReStart, PerfectFry Plus Sensor, CombiZone (2 combined zones)
Control Type	DirectSelect, Remote (Home Connect)
Safety Features	Child Safety Lock, Safety Timer, Main Switch, PowerManagement, Setting Lock, Residual Heat Indicator, Automatic Shut-off
Integrated Extractor Features	
Operating Mode	Ducted (Circuit ouvert), Recirculating (Circuit fermé)
Dynamic Fluid Efficiency Class	A
Grease Filtering Efficiency Class	B
Annual Energy Consumption	61.8 kWh/year
Noise Level (Min/Max)	42 dB / 74 dB
Maximum Extraction Rate	622 m³/h
Filter Type	Grease Filter
Special Functions	Intensive Mode, AutoOn (automatic ventilation)

WARRANTY AND SUPPORT

Warranty Information

This Bosch appliance comes with a **24-month warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The availability of spare parts is guaranteed for 15 years.

Customer Support

For technical assistance, service requests, or to order spare parts, please contact Bosch customer service. You can find contact details on the official Bosch website or in the full product documentation provided with your appliance. For remote monitoring and control, download the Home Connect app and register your appliance.