

- Manuals.plus /
- › [SENSARTE](#) /
- › SENSARTE 24 Piece Nonstick Detachable Handle Cookware Set Instruction Manual

SENSARTE 24 Piece Granite Set

**SENSARTE 24 Piece Nonstick Detachable Handle Cookware Set
Instruction Manual**

1. PRODUCT OVERVIEW

The SENSARTE 24 Piece Nonstick Detachable Handle Cookware Set is designed for versatility and convenience in your kitchen. Featuring a durable granite nonstick coating, this set is suitable for all stovetops, including induction, and is oven and dishwasher safe. The innovative detachable handles allow for compact storage and seamless transition from stovetop to oven to table.



Image 1: The SENSARTE 24 Piece Nonstick Detachable Handle Cookware Set, showcasing various pots, pans, lids, and accessories.

2. PACKAGE CONTENTS

Your SENSARTE 24 Piece Cookware Set includes the following items:

- 1.5QT Sauce Pan
- 2.8QT Sauce Pan
- 8 inch Frying Pan
- 10 inch Frying Pan
- 10 inch (4QT) Saute Pan
- 10 inch Grill Pan
- 12 inch Frying Pan
- Removable Handle x 3
- 8 inch Glass Lid
- 10 inch Glass Lid
- 12 inch Glass Lid
- Pot Protector x 6
- Fridge Storage Lid x 2
- Silicone Utensils Set x 3 (Spatula, Ladle, Tongs)

24 Pieces Cookware Set



Image 2: A visual breakdown of all 24 pieces included in the SENSARTE cookware set, detailing each item and its size.

3. SETUP INSTRUCTIONS

3.1 Attaching Lid Knobs

Some glass lids may require assembly of the knob. Use the provided screwdriver to securely attach the knob to the glass lid. Ensure the screw is tightened firmly but do not overtighten.



Image 3: A hand using a small screwdriver to attach a knob to a pot lid, illustrating the assembly process.

4. OPERATING INSTRUCTIONS

4.1 Attaching and Detaching Removable Handles

The removable handles are designed for secure attachment and easy release. To attach, align the handle's grip with the pan's edge and squeeze the handle until it clicks into place. To detach, press the button on the handle while holding down the clamp, then release the handle from the pan.

Your browser does not support the video tag.

Video 1: This video demonstrates the simple process of attaching and detaching the SENSARTE removable handle to a pot, highlighting the secure click mechanism.

4.2 Stovetop Use

SENSARTE cookware is compatible with all stovetops, including gas, electric, and induction. The thick, flat bottom ensures quick and even heat distribution. Always use a heat setting appropriate for your cooking needs and the type of food being prepared.

Suitable for All Stove

Heat up Quickly & Evenly



Image 4: SENSARTE pots and pans are shown in use on different types of stovetops, including gas, ceramic, electric, and induction, demonstrating their universal compatibility.

4.3 Oven Use

All SENSARTE pots and pans are oven safe up to 480°F (250°C). Before placing cookware in the oven, ensure all removable handles are detached. Use oven mitts or the detachable handle to safely remove hot cookware from the oven.

Oven Safe (480 °F)

Oven Works Perfectly



Image 5: A SENSARTE pot containing a roasted chicken and potatoes is being carefully removed from an oven, illustrating its oven-safe feature.

4.4 Non-stick Coating Care

The cookware features a granite nonstick coating that is PFOA, lead, and cadmium free. To preserve the nonstick properties, use low to medium heat settings for most cooking. Avoid using metal utensils that can scratch the surface; silicone or wooden utensils are recommended. Cooking with a small amount of oil is sufficient for healthy cooking.

Ultra Durable Nonstick

Advanced Granite Coating



Image 6: An egg is shown effortlessly sliding out of a SENSARTE nonstick frying pan, demonstrating the effectiveness of its granite coating.

5. CARE AND MAINTENANCE

5.1 Cleaning

SENSARTE cookware is dishwasher safe. The professional wear-resistant design of the pan bottom prevents black residue even after dishwasher use. For best results and to prolong the life of your cookware, hand washing with mild soap and a soft sponge is also recommended, as food releases easily from the nonstick surface.

Dishwasher Safe

Easy to Clean



Image 7: SENSARTE pots and pans are neatly arranged inside a dishwasher, indicating their dishwasher-safe feature for easy cleaning.

5.2 Storage

The detachable handles and stackable design allow for up to 70% more space saving in your cabinets or RV. Use the included pot protectors between stacked pans to prevent scratches and maintain the cookware's pristine condition.

Optimal Storage Design

Keep your kitchen organized



Image 8: A neatly stacked SENSARTE cookware set, complete with pot protectors, is shown stored efficiently inside a kitchen cabinet, highlighting its space-saving design.

6. TROUBLESHOOTING

- **Handles feel wobbly:** Ensure the removable handle is properly aligned and squeezed until a distinct click is heard, indicating a secure lock.
- **Food sticking:** While nonstick, using a small amount of oil or butter is recommended. Avoid high heat settings, which can degrade the nonstick coating over time.
- **Stains on pan bottom:** The professional wear-resistant design helps prevent black residue. If stains occur, ensure proper cleaning and avoid excessive heat.
- **Lid knob loose:** Use the provided screwdriver to tighten the lid knob.

7. SPECIFICATIONS

Feature	Detail
Brand	SENSARTE
Model	24 Piece Granite Set
Material	Aluminum with Granite Nonstick Coating
Color	Black
Number of Pieces	24
Handle Material	Bakelite (for removable handles)
Stovetop Compatibility	Gas, Electric, Induction
Oven Safe Temperature	Up to 480°F (250°C)
Dishwasher Safe	Yes
PFOA Free	Yes

8. WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries regarding your SENSARTE cookware set, please refer to the contact information provided in your product packaging or visit the official SENSARTE website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D4GZMNTK>

More documents and user manuals: <https://manuals.plus/>