

[Manuals.plus](#) /

› [SOCICO](#) /

› SOCICO Digital Kids Watch Model 919 User Manual

SOCICO 919

SOCICO Digital Kids Watch Model 919 User Manual

INTRODUCTION

Thank you for choosing the SOCICO Digital Kids Watch Model 919. This watch is designed to be durable, easy to read, and packed with useful features for children aged 5 to 12. Please read this manual carefully to understand how to operate and maintain your new watch.

PRODUCT OVERVIEW

Familiarize yourself with the watch's buttons and display features:



This diagram illustrates the main components and buttons of the SOCICO Digital Kids Watch. The 'LIGHT' button controls the backlight, 'MODE' cycles through functions, 'START' initiates or adjusts settings, and 'RESET' resets or confirms settings.

- **LIGHT Button (Top Left):** Activates the backlight and changes backlight color.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch).
- **START Button (Top Right):** Starts/stops stopwatch, adjusts values during setting.
- **RESET Button (Bottom Right):** Resets stopwatch, confirms settings, or toggles hourly chime.

OPERATING INSTRUCTIONS

1. Setting Time and Date

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds will flash.
2. Press the **RESET** button to select the item you wish to adjust (seconds, hours, minutes, month, date, day of the week).

3. Use the **START** button to adjust the selected value.
4. Once all settings are correct, press the **MODE** button to return to normal time display.

2. Setting the Alarm

1. From the normal time display, press the **MODE** button twice to enter alarm setting mode. The hour digits will flash.
2. Press the **START** button to adjust the hour.
3. Press the **RESET** button to switch to minute setting. The minute digits will flash.
4. Press the **START** button to adjust the minutes.
5. Press the **MODE** button to exit alarm setting mode.
6. To activate/deactivate the alarm, press the **RESET** button while in alarm mode. The alarm icon will appear/disappear.

3. Using the Stopwatch

1. From the normal time display, press the **MODE** button once to enter stopwatch mode.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to zero.
5. Press the **MODE** button to return to normal time display.

4. Changing Backlight Color



The watch features a 7-color LED backlight. Press and hold the 'LIGHT' button for 3 seconds to change the backlight color.

- Press the **LIGHT** button to activate the backlight.
- To change the backlight color, press and hold the **LIGHT** button for approximately 3 seconds. The color will cycle through the available 7 options. Release the button when your desired color is displayed.

5. Activating/Deactivating Hourly Chime



To activate or deactivate the hourly chime, start from the time display mode. Press and hold the 'R' (Reset) button until the alarm time is not displayed. Then, simultaneously press the 'M' (Mode) button to toggle the hourly chime function on or off. The 'WEEK' indicator will show if the chime is active.

1. Start from the normal time display mode.
2. Press and hold the **RESET** button until the alarm time is no longer displayed.
3. While still holding **RESET**, simultaneously press the **MODE** button to toggle the hourly chime function.
4. The 'WEEK' indicator on the display will show if the hourly chime is active (highlighted) or inactive (not highlighted).

MAINTENANCE AND CARE

Water Resistance Guidelines



The SOCICO Digital Kids Watch is 50M water-resistant, making it suitable for activities like swimming, showering, and playing in the rain. Remember not to press any buttons while the watch is submerged in water.

- The watch is water-resistant up to 50 meters (5ATM). This means it is suitable for daily use, swimming, showering, and light water sports.
- **IMPORTANT: Do not press any buttons while the watch is submerged in water.** This can compromise the water resistance.
- Avoid exposing the watch to hot water or steam, as this can damage the seals.

Battery Replacement

The watch uses one LR44 battery (included). If the time becomes inaccurate or the display dims, the battery may need to be replaced. Battery replacement should ideally be performed by a qualified technician to ensure water resistance is maintained.

General Care

- Clean the watch regularly with a soft, dry cloth.
- Avoid exposing the watch to extreme temperatures or strong magnetic fields.
- Do not attempt to open the watch case yourself, as this may void the warranty and damage the watch.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the LR44 battery.
- **Time is inaccurate:** The battery may be low, or the time needs to be reset. Follow the 'Setting Time and Date' instructions.
- **Buttons are unresponsive:** Ensure the watch is not submerged in water. If the issue persists, try resetting the watch (if a reset function is available, otherwise contact support).
- **Water inside the watch:** Immediately stop using the watch and contact customer support.

SPECIFICATIONS



This image provides the physical dimensions of the watch, including strap length and watch face size, along with its weight. It is designed for children aged 5 and above.

Model Number	919
Brand	SOCICO
Water Resistance	5ATM (50 meters / 164 feet)
Battery Type	1 x LR44 (included)
Recommended Age	5 years and older
Strap Circumference (Min/Max)	15 cm (5.91 inches) / 22 cm (8.66 inches)
Package Dimensions	26.1 x 5.8 x 2 cm
Weight	30 grams
Country of Origin	China

WARRANTY AND SUPPORT

If you encounter any issues with your SOCICO Digital Kids Watch, please refer to this manual for troubleshooting steps. For further assistance or warranty inquiries, please contact our customer support. In addition to your legal right of withdrawal, you have a 30-day return right for many products. For exceptions and conditions, please consult the relevant policies on the retailer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D4HZCP5G>

More documents and user manuals: **<https://manuals.plus/>**