



Manuals.plus /

› PINDOWS /

› PINDOWS Women's Digital Sports Watch User Manual

## PINDOWS PDS-629

# PINDOWS Women's Digital Sports Watch User Manual

Model: PDS-629 | Brand: PINDOWS

## INTRODUCTION

---

Thank you for choosing the PINDOWS PDS-629 Women's Digital Sports Watch. This multi-functional timepiece is designed for active lifestyles, offering robust features and a stylish appearance. Please read this manual carefully to understand its functions and ensure optimal performance and longevity.



Image: The PINDOWS PDS-629 digital sports watch in pink, showcasing its design.

## KEY FEATURES

---

- **Multi-functional:** Equipped with automatic calendar, 50-meter water resistance, LED backlight, alarm, 12/24 hour format, hourly chime, and stopwatch.
- **Stylish Design:** Available in 8 beautiful colors with a sporty dial design, suitable for daily wear, indoor/outdoor events, and as a fashion accessory.
- **Optimal Fit:** Ideal for women, especially those who enjoy sports like running, climbing, and fishing.
- **High Quality Materials:** Features a Japanese battery with up to 2 years lifespan, high-quality TPU band, ABS case, plexiglass mirror, comfortable wear, shock resistance, and pressure resistance.

## PRODUCT OVERVIEW

---

Familiarize yourself with the watch's components and buttons for easy operation.



LED Luminous



Alarm Clock



50M Waterproof



Chronograph



Hourly Chime

Image: Diagram showing the watch's buttons and display areas, including Light, Start/Pause, Time Display, Adjustment, and Mode buttons.

**Light Button:** Activates the LED backlight for visibility in low light conditions.

**Start/Pause Button:** Used for starting and pausing the stopwatch function.

**Adjustment Button:** Used to adjust time, date, and alarm settings.

**Mode Button:** Cycles through different modes such as time display, alarm, and stopwatch.

**Time Display:** Shows the current time, date, and other relevant information.

## SETUP INSTRUCTIONS

To set up your PINDOWS watch, follow these general steps. Specific button presses may vary slightly but the principle remains the same.

### 1. Setting Time and Date:

- Press the **Mode Button** repeatedly until you reach the time setting mode (usually indicated by flashing digits).

- Use the **Adjustment Button** to change the flashing digit (hours, minutes, year, month, day).
- Use the **Start/Pause Button** to move to the next digit or setting.
- Once all settings are correct, press the **Mode Button** again to exit the setting mode.

## 2. Setting Alarm:

- Press the **Mode Button** until you reach the alarm setting mode.
- Use the **Adjustment Button** to set the desired alarm time.
- Use the **Start/Pause Button** to toggle the alarm on/off.
- Press the **Mode Button** to confirm and exit.

## 3. 12/24 Hour Format:

- In normal time display mode, press the **Adjustment Button** to switch between 12-hour (AM/PM) and 24-hour formats.

## OPERATING INSTRUCTIONS

---

Learn how to use the various functions of your PINDOWS watch.

### 1. Using the LED Backlight:

- Press the **Light Button** (top left) to illuminate the display. The backlight will stay on for a few seconds.

# LED BACKLIGHT

## FEARLESS OF DARKNESS



Image: The watch display illuminated by its LED backlight, showing clear visibility in dark conditions.

### 2. Using the Stopwatch:

- Press the **Mode Button** until you reach the stopwatch mode (usually indicated by "00:00:00").
- Press the **Start/Pause Button** (top right) to start the stopwatch.
- Press the **Start/Pause Button** again to pause/resume.
- To reset the stopwatch, press the **Reset Button** (bottom right) while the stopwatch is paused.

### 3. Hourly Chime:

- In normal time display mode, press the **Mode Button** and **Adjustment Button** simultaneously to toggle the hourly chime on or off. A small icon (e.g., bell) may appear or disappear to indicate its status.

## MAINTENANCE

---

Proper care will extend the life of your PINDOWS watch.

- **Water Resistance (50M):** Your watch is water-resistant up to 50 meters. This means it is suitable for daily use, hand washing, rain, and short periods of swimming.

- **Do NOT operate buttons underwater.**
- Avoid exposure to steam or hot water (e.g., hot showers, saunas) as this can compromise the seals.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.

# 50M PRECISION WATERPROOF



Image: The watch partially submerged in water, illustrating its 50M water resistance feature.

- **Cleaning:** Wipe the watch case and band with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** The watch uses a CR2032 battery. When the display dims or functions become erratic, it's time to replace the battery. It is recommended to have battery replacement done by a professional to ensure water resistance is maintained.
- **Storage:** Store your watch in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

---

If you encounter issues with your PINDOWS watch, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the CR2032 battery.
Time is incorrect.	Time needs to be reset.	Follow the "Setting Time and Date" instructions in the Setup section.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the alarm is turned on and the time is set correctly.
Watch band detaches easily.	Spring bar issue or band wear.	Inspect the spring bars connecting the band to the watch. If damaged or loose, replace them or consult a watch repair professional.
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, exposure to steam).	Immediately take the watch to a professional for inspection and repair to prevent further damage. Do not attempt to dry it yourself.

## SPECIFICATIONS

---

Detailed technical specifications for the PINDOWS PDS-629 watch.

Feature	Detail
Model Number	PDS-629
Brand	PINDOWS
Water Resistance	50 Meters (5 ATM)
Battery Type	1 CR2032 (included)
Battery Life	Up to 2 years (Japanese battery)
Product Dimensions	4.4 x 3.6 x 1.35 cm
Weight	110 g
Case Material	ABS
Band Material	TPU
Mirror Material	Plexiglass
Origin	China


# PRODUCT PARAMETERS



Weight: 44g	Band Material: TPU
Case Material: ABS	Bottom Cover Material: Stainless Steel

 Case Diameter: 1.7inch/43mm

 Band Width: 0.78inch/20mm

 Case Thickness: 0.65inch/16.5mm

 Band Length: 6.9inch-8.7inch

Image: Detailed diagram showing the product dimensions and material specifications.

## WARRANTY AND SUPPORT

PINDOWS offers a 12-month warranty service for this product. We are committed to providing satisfactory products and services to our customers. For any issues or inquiries, please contact our customer support.

For further assistance, please refer to the seller's contact information on the purchase platform or visit the official PINDOWS website.