

Manuals.plus /

› PINDOWS /

› PINDOWS PDS-632 Military Sports Watch User Manual

## PINDOWS PDS-632

# PINDOWS PDS-632 Military Sports Watch User Manual

Model: PDS-632 | Brand: PINDOWS

## 1. INTRODUCTION

Thank you for purchasing the PINDOWS PDS-632 Military Sports Watch. This watch combines robust design with multi-functional capabilities, making it ideal for outdoor activities and daily wear. Featuring both analog and digital displays, it offers precise timekeeping and a range of useful functions. Please read this manual carefully to understand the operation and maintenance of your new watch.



Front view of the PINDOWS PDS-632 military sports watch in clear black, displaying both analog and digital time.

## 2. PRODUCT OVERVIEW

### 2.1. Watch Components and Buttons

Familiarize yourself with the various parts and buttons of your PINDOWS PDS-632 watch:



LED Luminous



Alarm Clock



50M Waterproof



Chronograph



Hourly Chime

An annotated image illustrating the functions of each button on the PINDOWS watch: Light, Start/Pause, Time Display, Adjustment, and Mode.

- **LIGHT Button (Top Left):** Activates the LED backlight.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch).
- **START/PAUSE Button (Top Right):** Used to start/stop functions in stopwatch mode or adjust settings.
- **RESET Button (Bottom Right):** Used to reset functions or confirm settings.
- **Crown (Right Side):** Used for setting analog time.



A side profile of the watch, showing the tactile buttons for various functions like Light, Start, Reset, and Mode.

### 3. SPECIFICATIONS

Feature	Description
Model Number	PDS-632
Movement	Japanese Quartz Movement
Display Type	Analog & Digital
Water Resistance	50 meters (5 ATM)
Band Material	PU (Polyurethane)
Case Material	ABS
Crystal Material	Mineral Mirror
Battery Type	1 CR2032 (included)
Battery Life	Up to 2 years
Dimensions (Packaging)	9.5 x 9 x 6.9 cm
Weight	66 g
Country of Origin	China



Diagram showing the dimensions and key parameters of the PINDOWS watch, including case diameter, band width, and wearing size range.

## 4. INITIAL SETUP

### 4.1. Setting Analog Time

1. Pull out the crown on the right side of the watch.
2. Rotate the crown to move the analog hands to the desired time.
3. Push the crown back in to start the analog timekeeping.

## 4.2. Setting Digital Time and Date

1. From the normal time display mode, press the **MODE** button three times to enter the time setting mode. The seconds digits will start flashing.
2. Press the **RESET** button to cycle through the settings: Seconds → Hour → Minute → Month → Date → Day of Week.
3. While a digit is flashing, use the **START/PAUSE** button to increase the value. Hold the button to rapidly advance.
4. Once all settings are adjusted, press the **MODE** button to exit the setting mode and return to normal time display.

## 4.3. 12/24 Hour Format

In the normal time display mode, press the **START/PAUSE** button to toggle between 12-hour (with 'AM'/'PM' indicator) and 24-hour formats.

# 5. OPERATING MODES

## 5.1. Alarm Mode

1. From the normal time display, press the **MODE** button once to enter Alarm mode. The alarm time will be displayed.
2. Press the **RESET** button to toggle the alarm ON/OFF. An alarm icon will appear when ON.
3. To set the alarm time, press the **START/PAUSE** button. The hour digits will flash. Use the **RESET** button to adjust the hour.
4. Press the **START/PAUSE** button again to select minutes, then use the **RESET** button to adjust.
5. Press the **MODE** button to exit Alarm setting.

## 5.2. Stopwatch Mode

1. From the normal time display, press the **MODE** button twice to enter Stopwatch mode. The display will show '00:00:00'.
2. Press the **START/PAUSE** button to start the stopwatch.
3. Press the **START/PAUSE** button again to pause the stopwatch.
4. Press the **RESET** button to reset the stopwatch to '00:00:00'.
5. Press the **MODE** button to exit Stopwatch mode.

## 5.3. LED Backlight

Press the **LIGHT** button (top left) at any time to illuminate the watch face with the LED backlight. The backlight will stay on for a few seconds. This model features a 7-color LED backlight.



The PINDOWS watch face illuminated by its vibrant LED backlight in a dark environment, showcasing its visibility.

#### 5.4. Dual Time Display

The watch features both analog and digital time displays. The digital display can be set independently for a second time zone if desired, allowing you to track two different times simultaneously. Follow the digital time setting instructions in section 4.2 to adjust the digital time.

### 6. MAINTENANCE

#### 6.1. Water Resistance (50M)

Your PINDOWS PDS-632 watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for daily use, hand washing, rain, and brief immersion in water. However, it is **not** suitable for showering with hot water, diving, or prolonged underwater activities. Do not operate buttons while the watch is wet or submerged.



The PINDOWS watch submerged in water, demonstrating its 50-meter water resistance capability.

## 6.2. Cleaning and Care

- Wipe the watch regularly with a soft, dry cloth to remove dirt and sweat.
- Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.
- Do not use chemical cleaners or solvents on the watch, as they may damage the case or band.

## 6.3. Battery Replacement

The watch uses a CR2032 battery with an approximate life of up to 2 years. When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.



The reverse side of the watch, displaying the PINDOWS logo, model number (PDS-632), water resistance rating (WR 50M), and 'Stainless Steel Back' engraving.

## 7. TROUBLESHOOTING

Problem	Possible Cause / Solution
Digital display is blank or dim.	Battery may be low or depleted. Replace the battery.
Analog hands are not moving.	Check if the crown is pushed in completely. If not, push it in. If still not moving, the battery may be low or the movement requires service.
Buttons are unresponsive.	Ensure the watch is not wet. If it is, dry it thoroughly. If the issue persists, the internal mechanism may be stuck or damaged.
Time is inaccurate.	Re-set the time following the instructions in Section 4. If the problem continues, the battery may be low or the quartz movement needs inspection.

## 8. WARRANTY AND SUPPORT

### 8.1. Warranty Information

PINDOWS provides a **12-month warranty** service for this product from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

## 8.2. Customer Support

We value our customers and are committed to providing high-quality products and services. If you have any questions, concerns, or require assistance with your PINDOWS PDS-632 watch, please do not hesitate to contact our customer support team. We strive to ensure your satisfaction.

Please refer to your purchase platform or original packaging for specific contact details.