

Midea EG131BS

Midea EG131BS 31-Liter Microwave Oven with Grill Function

Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- Only qualified service personnel should adjust or repair the oven.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Always use microwave-safe cookware.
- Supervise children closely when the microwave is in use.
- Ensure proper ventilation around the appliance.

2. PRODUCT OVERVIEW

The Midea EG131BS is a versatile 31-liter microwave oven designed for countertop use, featuring both microwave and grill functions. It offers efficient cooking and reheating with a powerful 800W microwave output.

Key Features:

- **31-Liter Capacity:** Spacious interior to accommodate various dish sizes.
- **800W Microwave Power:** Provides fast and efficient heating.
- **Grill Function:** For browning and crisping food.
- **Combination Cooking:** Combines microwave and grill for optimized results.
- **315mm Turntable:** Ensures even cooking.
- **Mirror Glass Design:** Modern aesthetic.
- **Sound On/Off Function:** For quieter operation.
- **7 Pre-set Programs:** Convenient cooking options.

Components:

- Microwave Oven Unit
- Glass Turntable
- Turntable Ring
- Turntable Shaft
- Grill Rack (for grill function)



Image: The Midea EG131BS microwave oven highlighting its 31-liter large capacity and 315mm diameter turntable, designed to accommodate larger dishes.

3. SETUP

Follow these steps to set up your microwave oven before first use.

1. **Unpacking:** Carefully remove the microwave oven and all packing materials. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
2. **Placement:** Place the oven on a flat, stable surface strong enough to hold its weight. Ensure there is adequate ventilation space: at least 20 cm (8 inches) above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on both sides. Do not block any ventilation openings.
3. **Turntable Assembly:**
 - Place the turntable shaft into the center of the oven cavity.
 - Place the turntable ring on the shaft.
 - Position the glass turntable securely on the turntable ring. Ensure it sits properly and can rotate freely.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the rating label on the oven.
5. **Initial Cleaning:** Wipe the interior and exterior of the oven with a damp cloth before first use.

PRODUCT DIMENSION

31L Large Capacity



Image: The Midea EG131BS microwave oven displaying its dimensions: 523mm width, 418mm depth, and 300mm height, indicating its compact countertop design.

4. OPERATING INSTRUCTIONS

This section details how to use your Midea EG131BS microwave oven for various cooking tasks.

4.1 Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Use the control panel buttons to select the desired cooking time. The microwave operates at a fixed 800W power output.
4. Press the 'Start' button to begin cooking.



Image: The interior of the Midea EG131BS microwave oven demonstrating high power heating, suitable for fast and efficient cooking.

4.2 Grill Function

The grill function is ideal for browning and crisping food surfaces.

1. Place food on the grill rack (if provided) or a heat-resistant dish directly on the turntable.
2. Close the oven door.
3. Select the 'Grill' function and set the desired grilling time using the control panel.
4. Press 'Start'.

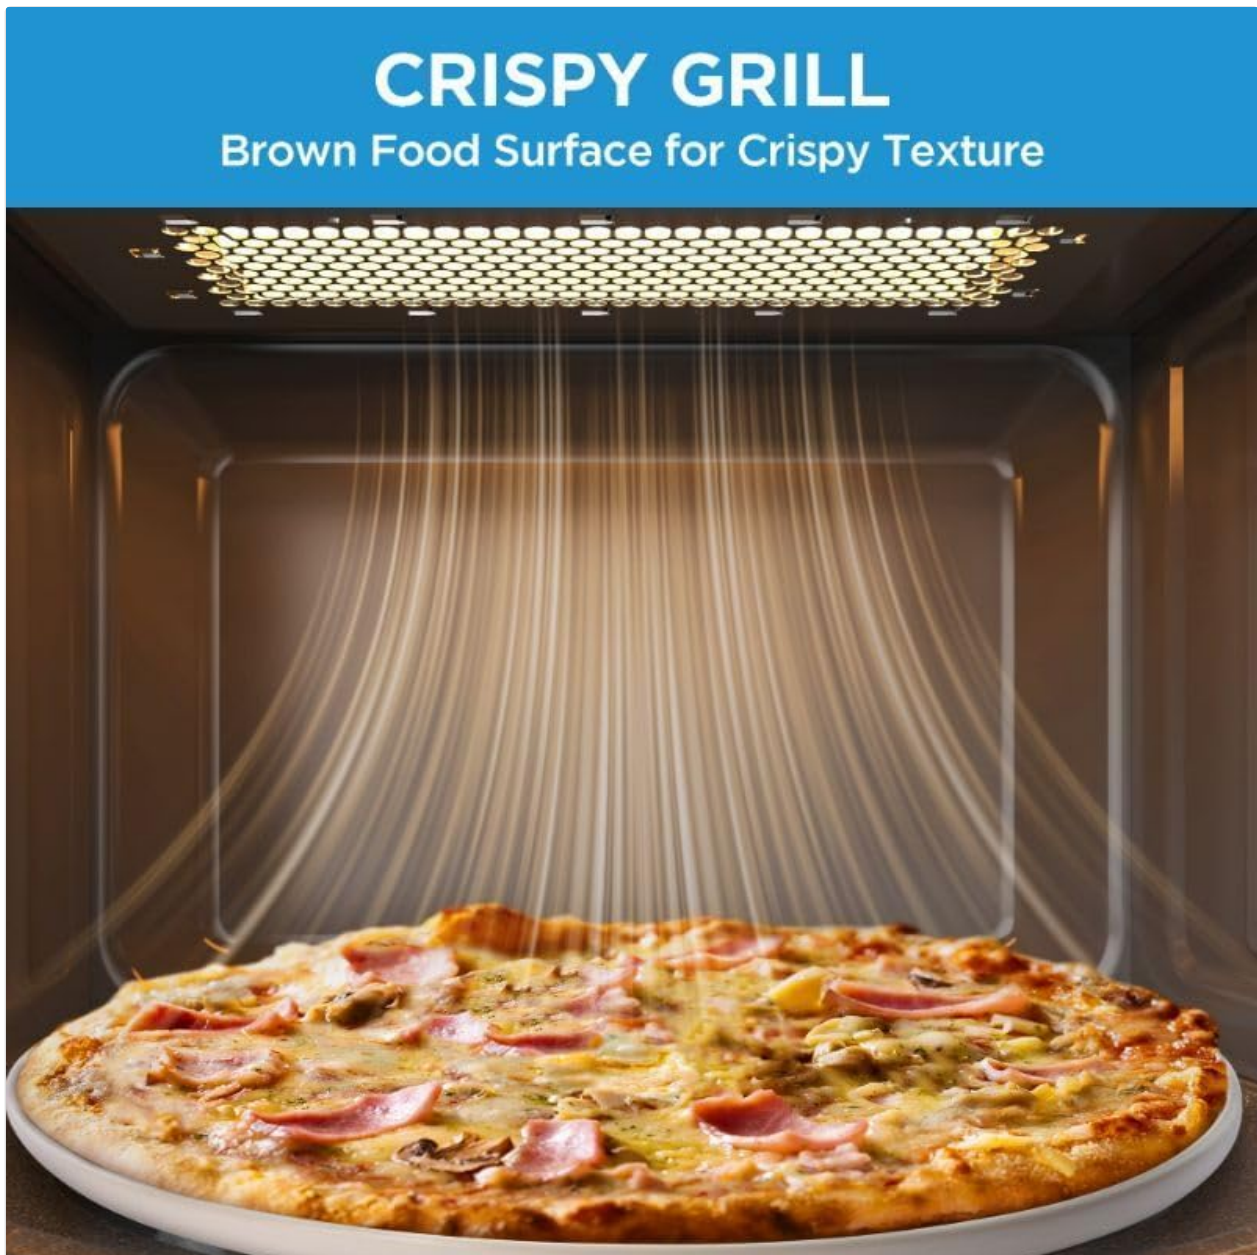


Image: The Midea EG131BS microwave oven's interior with the crispy grill function active, browning a pizza to achieve a desirable texture.

4.3 Combination Cooking (Microwave + Grill)

This mode combines microwave heating with grilling for faster cooking and browning.

1. Place food in a suitable container.
2. Close the oven door.
3. Select the 'Combination' cooking mode and set the desired time.
4. Press 'Start'.

2-IN-1 COMBINATION

Grill + Microwave Combination Cooking



Image: A visual representation of the Midea EG131BS microwave oven's 2-in-1 combination cooking feature, illustrating simultaneous microwave heating and grilling.

4.4 Defrost Function

Use the defrost function to thaw frozen foods quickly and efficiently.

1. Place frozen food in an appropriate container.
2. Close the oven door.
3. Select the 'Defrost' function. You may need to input the weight of the food or select a pre-set defrost program.
4. Press 'Start'.

4.5 Timer Function

The timer can be used for general kitchen timing or to delay the start of a cooking program.

- Refer to the control panel for specific timer setting instructions.

4.6 Sound On/Off Function

This feature allows you to mute the oven's operational beeps and alerts for quieter use.

- Locate the 'Sound' or 'Mute' button on the control panel and press it to toggle the sound on or off.



Image: The Midea EG131BS microwave oven's control panel displaying the 'Sound On/Off' function, indicating its ability for quieter operation.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

5.1 General Cleaning

- Always unplug the oven before cleaning.
- Wipe the interior and exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads.
- Clean the door seals and sealing surfaces regularly to prevent food residue buildup.

5.2 Turntable Care

- The glass turntable and turntable ring can be removed for cleaning. Wash them in warm, soapy water or in a dishwasher.

- Ensure they are completely dry before placing them back in the oven.

5.3 Odor Removal

- To remove odors, combine a cup of water with the juice of one lemon in a microwave-safe bowl. Heat on high for 5-7 minutes, then let it sit in the oven for a few minutes before wiping the interior.

6. TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time/power setting; Microwave-safe cookware not used.	Adjust cooking time; Ensure appropriate cookware is used.
Turntable not rotating	Turntable not properly seated; Obstruction under turntable.	Re-seat the turntable and ring; Check for and remove any obstructions.
Unusual noise during operation	Turntable or roller ring misaligned; Food container touching oven walls.	Adjust turntable and ring; Ensure food container is centered and not too large.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Midea EG131BS Microwave Oven.

Feature	Specification
Brand	Midea
Model Number	EG131BS
Capacity	31 Liters
Color	Stainless Steel
Microwave Power Output	800 Watts
Control Type	Button
Special Features	Turntable, Grill Function, Timer Function, Sound On/Off
Installation Type	Countertop
Frequency	50 Hz
Number of Programs	7

Feature	Specification
Interior Material	Steel
Product Dimensions (W x D x H)	523mm x 418mm x 300mm (Approximate, based on image)

8. WARRANTY AND SUPPORT

Midea products are manufactured to high-quality standards. For warranty information and customer support, please refer to the warranty card included with your product or visit the official Midea website.

- **Spare Parts Availability:** Spare parts for this model are generally available for a period of 2 years from the date of purchase in the EU. Please check local regulations and Midea's policy in your region.
- **Contact Support:** For technical assistance, service requests, or questions regarding your product, please contact Midea customer service through their official channels.