

RENAISSER Raphael 510

RENAISSER Stylus Pen User Manual

Model: Raphael 510

INTRODUCTION

The RENAISSER Raphael 510 Stylus Pen is designed to provide a smooth and precise writing and drawing experience on compatible Microsoft Surface and other devices. Featuring advanced palm rejection, 1024 pressure points, and convenient USB-C fast charging, this stylus enhances your productivity and creativity. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your stylus pen.

WHAT'S IN THE BOX

Carefully unbox your RENAISSER Raphael 510 Stylus Pen and ensure all components are present:

- 1 x RENAISSER Stylus Pen
- 2 x Replacement Tips
- Warranty Card
- No USB-C cable included (use any standard USB-C cable for charging)



Image: The RENAISSER Stylus Pen, two replacement tips, and the product packaging.

SETUP

The RENAISSER Raphael 510 Stylus Pen is designed for immediate use without complex pairing. Simply turn it on, and it's ready to go.

1. **Initial Charge:** Before first use, it is recommended to fully charge the stylus. Connect a USB-C cable (not included) to the charging port on the pen and to a power source. The indicator light will illuminate during charging.
2. **Power On:** Press and hold the eraser button (top button) for 1 second to power on the stylus. The pen will automatically connect to your compatible device.
3. **Ready to Use:** Once powered on, the pen is ready for writing, drawing, and navigation on your device's screen. No Bluetooth pairing is required for basic functionality.

Smooth Writing Experience

Ultra-Low Latency, High Precision, Ready to Use Without Pairing

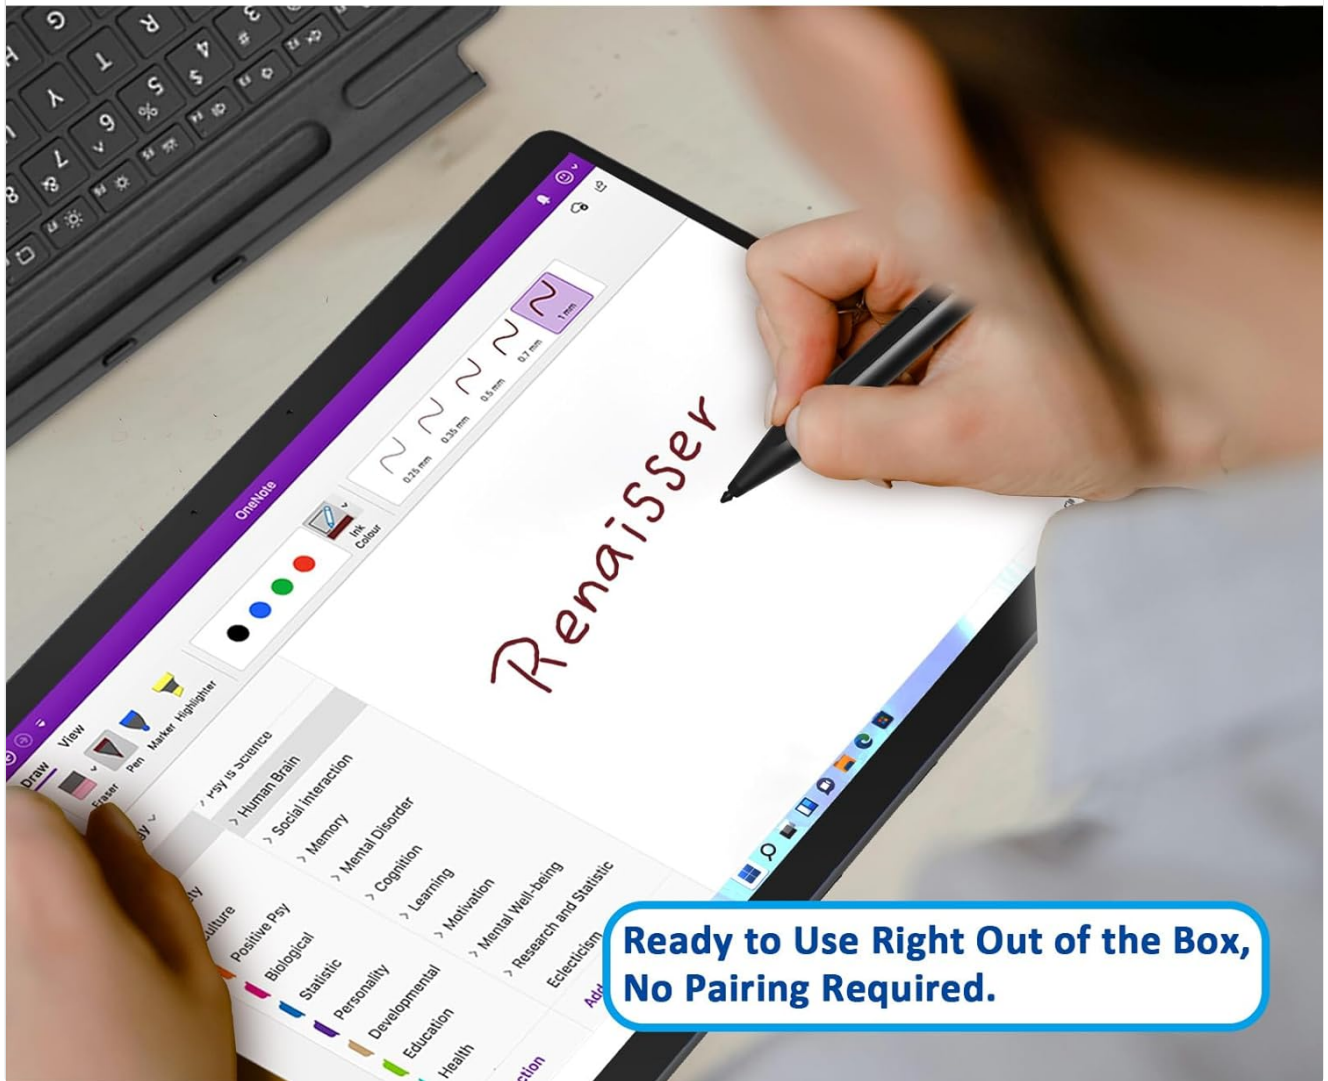


Image: The stylus in use, highlighting its ready-to-use functionality without pairing.

OPERATING INSTRUCTIONS

Smooth Writing and Pressure Sensitivity

The Raphael 510 offers a fine control with 1024 pressure points, allowing for real-time, lag-free writing and drawing. The pen flows smoothly, mimicking a natural pen-on-paper feel.

Raphael 510, The Best Value



Image: Key features of the Raphael 510 stylus, including its pressure sensitivity.

Palm Rejection Function

Rest your hand comfortably on the screen while using the stylus. The built-in palm rejection technology ensures that only the pen's input is registered, preventing accidental marks from your palm.

Palm Rejection Technology

Allows Uninterrupted Use of the Stylus Even
with Your Palm Resting on the Screen



Image: Demonstration of palm rejection technology, allowing comfortable hand placement on the screen.

Eraser and Right-Click Buttons

The stylus features two convenient side buttons. The top button functions as an eraser, allowing you to quickly correct mistakes. The lower button provides a right-click function, offering quick access to contextual menus or other assigned actions.

Sleek Design, Simple Yet Premium



Image: The stylus highlighting the location and function of its right-click and erase buttons.

CHARGING


The RENAISSER Raphael 510 Stylus Pen features USB-C ultra-fast charging and smart power management for extended use.

- **Fast Charging:** Just 15 minutes of charging provides enough power for 70 hours of use. A full 1-hour charge can last for more than 100 hours.
- **Smart Power Management:** The pen will automatically turn off after 10 minutes of non-use to conserve battery life.
- **Low Battery Alert:** An indicator light on the pen will illuminate when the battery is low, signaling that it needs to be recharged.

USB-C Fast Charging

Long-Lasting Battery Performance

Charge for Just a Few Minutes for Long-Lasting Battery Life,
No Need for Frequent Recharging

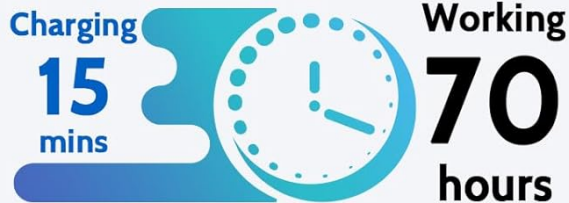

Smart Power Management:

Automatically
Shuts Down
After 10 Minutes
of Inactivity



Low Battery Alert:

Indicator Light
Will Illuminate
When Battery
is Low



Image: Details on the stylus's fast charging and smart power management features.

COMPATIBILITY

The RENAISSER Raphael 510 Stylus Pen is compatible with a wide range of Microsoft Surface devices and select models from other brands. Please refer to the list below for compatible models:

Microsoft Surface: Surface Pro 11th Edition, Surface Pro 10, Surface Pro 9, Surface Pro 8, Surface Pro 7+, Surface Pro 7, Surface Pro 6, Surface Pro 5, Surface Pro 4, Surface Duo/Duo 2, Surface Pro X, Surface Go/Go 2/Go 3, Surface Book/Book 2/Book 3, Surface Studio 1st Gen, Surface Studio 2, Surface Studio 2+, Surface Laptop 1/Laptop 2/Laptop 3/Laptop 4/Laptop 5/Laptop 6, Surface Laptop Studio.

Note: The Surface Laptop Go and Surface Laptop Go 2 are not compatible with this stylus. Not compatible with Android/iOS/other smart devices.

REANISSER Stylus Compatibility List

Microsoft Surface	
Surface Pro 11 / X / 10 / 9 / 8 / 7+ / 7 / 6 / 5 / 4 Surface Duo / 2 Surface Go / 2 / 3 Surface Book / 2 / 3	Surface Studio 2/ 2+ Surface Laptop / 2 / 3 / 4 / 5 / 6 Surface Laptop Studio / 2
HP	
Envy x360 - 13-agxxx/ayxxx/13-arxxx/bfxxx Envy x360 - 14-esxxx Envy x360 - 15-arxxx/bpxxx/bqxxx/cnxxx/cpxxx/drxxx/dsxxx/ewxxx/eyxxx/fexxx Pavilion x360 - 11-adxxx/11-apxxx Pavilion x360 - 14-baxxx/cdxxx Pavilion x360 - 14-ddxxx/dhxxx/dyxxx/dwxxx/ekxxx	Pavilion x360 - 15-brxxx/crxxx/dqxxx/erxxx Spectre x360 - 13-acxxx/aexxx/apxxx Spectre x360 - 14-eaxxx Spectre x360 - 15-blxxx/chxxx/dfxxx Spectre x360 - 16-flxx Spectre Folio - 13-akxxx
Kobo Sage , Kobo Elipsa	

Image: Comprehensive compatibility list for the RENAISSER Stylus.

MAINTENANCE

To ensure the longevity and optimal performance of your RENAISSER Stylus Pen, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the pen's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the pen in a cool, dry place away from direct sunlight and extreme temperatures.
- **Tip Care:** Avoid applying excessive force to the pen tip. Replace the tip if it becomes worn or damaged to maintain writing precision.
- **Avoid Liquids:** Do not expose the pen to water or other liquids.

TROUBLESHOOTING

If you encounter issues with your RENAISSER Stylus Pen, try the following solutions:

Problem	Possible Solution
Pen not responding	<ul style="list-style-type: none">◦ Ensure the pen is charged.◦ Press the eraser button for 1 second to turn it on.◦ Restart your device.◦ Check device compatibility.
Inconsistent lines or skipping	<ul style="list-style-type: none">◦ Ensure the pen tip is securely installed.◦ Try replacing the pen tip.◦ Clean the screen of your device.
Buttons not working	<ul style="list-style-type: none">◦ Ensure the pen is powered on.◦ Check if the buttons are physically stuck.◦ Restart your device.

Problem	Possible Solution
Pen not charging	<ul style="list-style-type: none">◦ Ensure the USB-C cable is properly connected.◦ Try a different USB-C cable and power adapter.◦ Check the charging port for debris.

If the issue persists after trying these steps, please contact RENAISSER customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	Raphael 510
Brand	RENAISSER
Item Weight	14 Grams (0.494 ounces)
Material	Aluminum
Color	Dark
Pressure Sensitivity	1024 Levels
Charging Type	USB-C
Charging Time	1 Hour (for full charge)
Battery Life	Up to 100+ hours on a full charge
Auto-off	After 10 minutes of non-use

WARRANTY AND SUPPORT

RENAISSER stands behind the quality of its products. The Raphael 510 Stylus Pen comes with a **1-Year Worry-free Warranty**. If you encounter any defects or issues with your RENAISSER product, our customer service team is available to assist you.

For support, please refer to the contact information provided on your warranty card or visit the official RENAISSER website. We are committed to ensuring your satisfaction and providing the best customer service possible.

