

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MIRADOR](#) /

› [Mirador 10Ft Side Shade Screen User Manual](#)

MIRADOR 80CS10FTS

Mirador 10Ft Side Shade Screen User Manual

Model: 80CS10FTS

Brand: MIRADOR

1. PRODUCT OVERVIEW

The Mirador 10Ft Side Shade Screen is an accessory designed to enhance your outdoor living space by providing privacy, sun protection, and wind resistance. This pull-down screen is specifically engineered for seamless integration with Mirador 80S and 88S series pergolas. It features UV-resistant material and is operated via a crank mechanism (crank not included, shares the pergola's crank) allowing you to adjust the screen to any desired height.



Image: The Mirador 10Ft Side Shade Screen fully extended, providing privacy and shade for an outdoor seating area under a pergola.

2. SAFETY INFORMATION

- **Compatibility:** This accessory is exclusively designed for MIRADOR 80/88S series pergolas. It is not compatible with MIRADOR 111S/111DA series pergolas.
- **Assembly:** Assembly may require two people for safe and proper installation.
- **Manufacturer's Instructions:** Always follow the manufacturer's instructions provided with the product for installation and use.
- **Environmental Conditions:** Do not use the shade screen in thunderstorms or during periods of high winds. Retract the screen fully during adverse weather conditions to prevent damage.
- **Secure Installation:** Ensure the pergola and all its accessories, including this shade screen, are securely anchored to a stable foundation.
- **Avoid Damage:** Keep the screen away from heat sources and sharp objects to prevent material damage.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. The package for the 10Ft Side Shade Screen typically includes:

- 1 x 10Ft Side Shade Screen Assembly

- Mounting Hardware (screws, brackets, etc.)
- Instruction Manual

Note: The crank mechanism for operating the shade screen is **not included** with this accessory. It is designed to share the same crank that operates your Mirador 80S or 88S series pergola.

4. SETUP AND INSTALLATION

Installation of the Mirador 10Ft Side Shade Screen requires attachment to a compatible Mirador 80S or 88S series pergola. Refer to your pergola's original assembly manual for specific attachment points and procedures. Ensure all mounting hardware is securely fastened.

1. Identify the designated side of your Mirador 80S/88S pergola where the shade screen will be installed.
2. Carefully align the top rail of the shade screen with the corresponding attachment points on the pergola frame.
3. Secure the top rail using the provided mounting hardware. Ensure it is level and firmly attached.
4. Attach the side rails or guides to the pergola uprights, ensuring they are plumb and allow for smooth vertical movement of the screen.
5. Once installed, test the screen's operation by manually pulling it down and retracting it to ensure it moves freely within the guides.

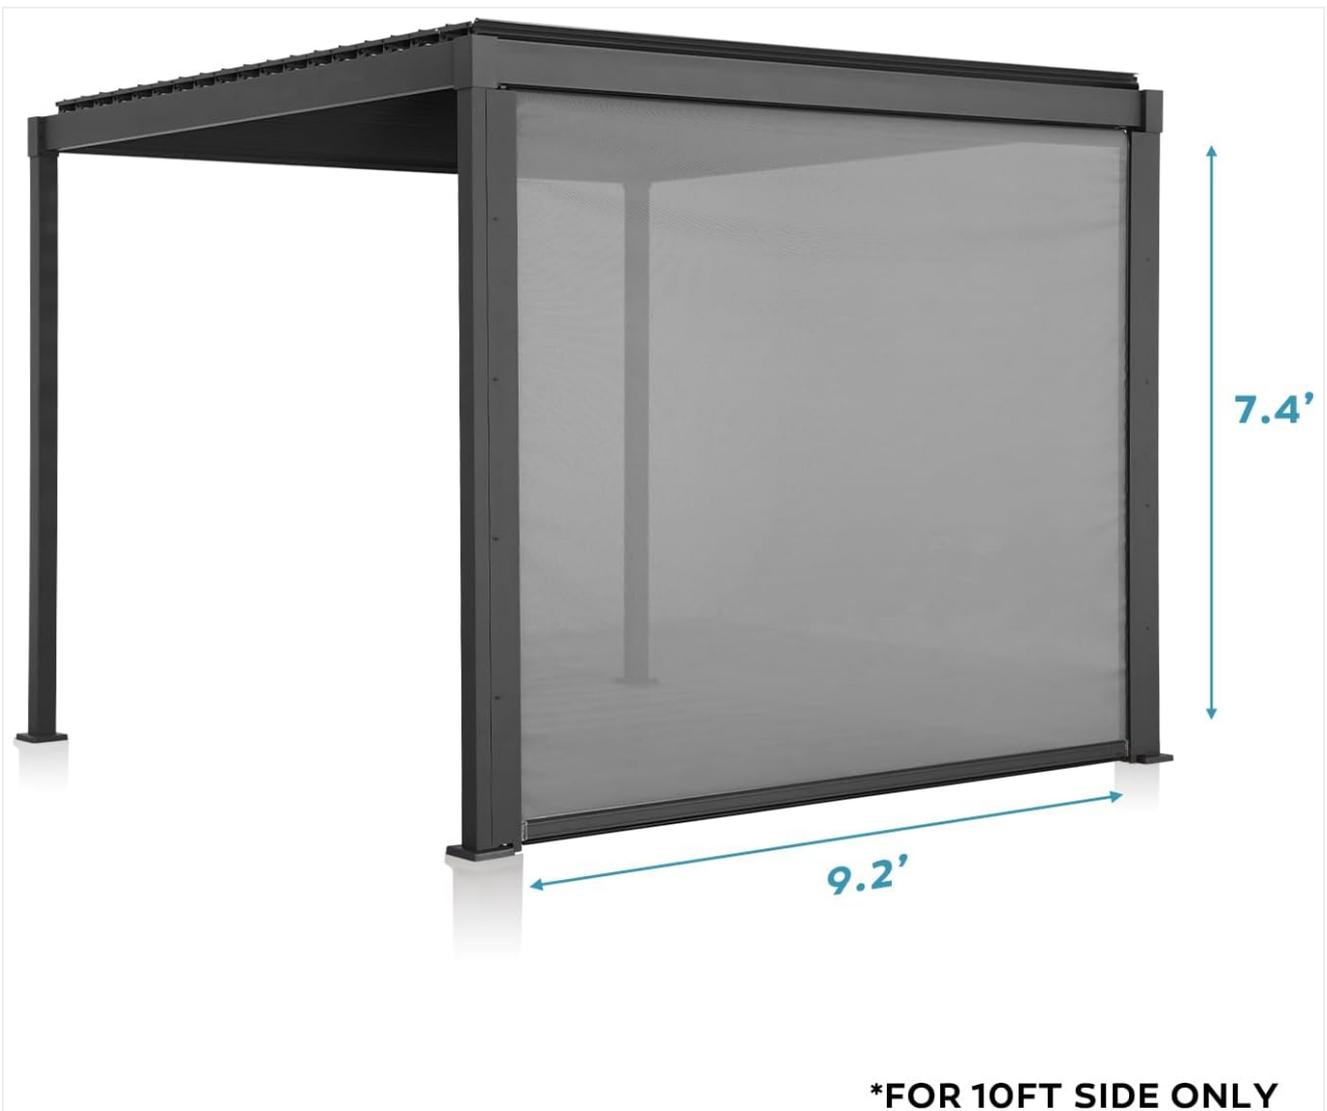


Image: Diagram showing the approximate dimensions of the 10Ft Side Shade Screen, indicating a length of 110 inches (9.2 feet) and a height of 88.4 inches (7.4 feet).



Image: A Mirador Side Shade Screen installed on a pergola, illustrating how the accessory integrates. A note clarifies that the pergola itself is not included with the shade screen.

5. OPERATING INSTRUCTIONS

The Mirador Side Shade Screen is designed for easy operation using the crank mechanism of your compatible Mirador pergola. This allows for smooth and precise control over the screen's position.

1. **To Lower the Screen:** Insert the pergola's crank handle into the designated crank receiver on the side shade screen. Rotate the crank handle clockwise to smoothly lower the screen to your desired height.
2. **To Raise the Screen:** Rotate the crank handle counter-clockwise to smoothly raise the screen.
3. **Stopping at Any Height:** The screen can be stopped and held securely at any point along its vertical travel, allowing for customized shade and privacy.

SHADE CONTROL

**CRANK OPERATION
STOP AT ANY HEIGHT**



***CRANK NOT INCLUDED.
SHARES SAME CRANK WITH THE PERGOLA.**

Image: A close-up view of a hand using a crank to adjust the height of the shade screen, demonstrating the "Shade Control" feature and the ability to stop at any height.



Image: Two illustrative panels. One shows a hand reaching towards the screen with text "Bugs Out - Uninterrupted outdoor moments," indicating insect protection. The other shows a gentle breeze passing through the screen with text "Breeze Through - Privacy without compromise," highlighting ventilation and privacy.

6. MAINTENANCE AND CARE

Proper maintenance will ensure the longevity and optimal performance of your Mirador Side Shade Screen.

- **Cleaning:** Clean the aluminum frame and Textilene fabric regularly with mild soap and water. Use a soft cloth or sponge. Rinse thoroughly with clean water and allow to air dry. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically inspect all moving parts, fasteners, and the screen material for any signs of wear, damage, or loose connections. Tighten any loose screws as needed.
- **Weather Protection:** In anticipation of severe weather conditions (e.g., strong winds, heavy snow, hail), fully retract the shade screen to protect it from potential damage.
- **Lubrication:** If the crank mechanism or screen movement becomes stiff over time, apply a silicone-based lubricant to the moving parts as recommended by the manufacturer (refer to pergola manual).

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Screen does not move smoothly.	Obstruction in the side guides; dirty guides; misaligned installation; lack of lubrication.	Check for debris in guides and clean them. Verify alignment of side rails. Apply silicone lubricant to moving parts.
Screen appears wrinkled or uneven.	Improper installation; tension issues; material settling.	Ensure the screen is installed level and tensioned correctly. Some minor wrinkles may naturally occur with fabric products. If severe, re-check installation or contact support.
Screen does not stay at desired height.	Crank mechanism issue; internal spring tension.	Ensure the crank is fully engaged. If the issue persists, contact Mirador customer support.
Screen damaged by wind.	Screen left extended during high winds.	Always retract the screen during strong winds or adverse weather conditions. Damage from improper use is not covered by warranty.

8. SPECIFICATIONS

Attribute	Detail
Brand	MIRADOR
Model Number	80CS10FTS
Material	Aluminum frame, Textilene fabric
Color	Charcoal
Product Dimensions (L x W x H)	110"L x 88.4"W x 3.1"H
Style	Outdoor
Water Resistance Level	Not Water Resistant (screen material allows breeze)
Shape	Rectangular
UV Protection	Yes
Assembly Required	Yes

9. WARRANTY AND SUPPORT

For detailed warranty information regarding your Mirador 10Ft Side Shade Screen, please refer to the warranty card included with your purchase or visit the official MIRADOR website. Warranty terms typically cover manufacturing defects. If you encounter any issues or require technical assistance, please contact Mirador customer support. Have your product model number (80CS10FTS) and purchase details ready when contacting support.

MIRADOR Official Store: [Visit the MIRADOR Store on Amazon](#)

