

[Manuals.plus](#) /

> [AIDITIYMI](#) /

> AIDITIYMI RAS-07BKV-E Replacement AC Remote Control User Manual for Toshiba Air Conditioners

AIDITIYMI RAS-07BKV-E

AIDITIYMI RAS-07BKV-E Replacement AC Remote Control User Manual

Model: RAS-07BKV-E | Brand: AIDITIYMI

INTRODUCTION

This manual provides instructions for the AIDITIYMI RAS-07BKV-E replacement infrared remote control, designed for use with various Toshiba Air Conditioner models. This remote offers essential functions for controlling your air conditioning unit. Please read this manual thoroughly before use to ensure proper operation.



Image: The AIDITIYMI RAS-07BKV-E remote control shown in a room with an air conditioner, illustrating its intended use.

SETUP

Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Open the battery compartment cover located on the back of the remote control.
2. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
3. Close the battery compartment cover securely.

Important: No programming or pairing is required. Once batteries are installed correctly, the remote control is ready for use with compatible Toshiba Air Conditioner models.



Image: Rear view of the remote control with the battery cover removed, showing the battery slots for two AAA batteries.

OPERATING INSTRUCTIONS

This remote control operates in Celsius only. Point the remote control directly at the air conditioner's receiver when operating.





Image: Front view of the remote control, highlighting the button layout and display area.

Button Functions:

- **POWER (On/Off):** Press to turn the air conditioner unit on or off.
- **MODE:** Cycles through operating modes (e.g., Auto, Cool, Dry, Fan, Heat).
- **TEMP ▲ / ▼:** Adjusts the temperature setting up or down.

- **FAN:** Adjusts the fan speed (e.g., Auto, Low, Med, High).
- **SWING:** Controls the louver swing function for air direction.
- **FIX:** Adjusts the louver position to a fixed angle.
- **Hi POWER:** Activates maximum cooling/heating for rapid temperature change.
- **ECO:** Activates energy-saving mode.
- **▼ OFF:** Sets the off-timer function.
- **CHECK:** Used for checking operational status or error codes (refer to your AC unit's manual for details).
- **CLEAR:** Clears settings or error indications.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's display becomes dim or the remote becomes unresponsive. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Confirm you are within the operational range (up to 32 feet) and pointing the remote directly at the unit.
- **Air conditioner not responding to specific functions:**
 - Some functions may not be available on all Toshiba AC models. Refer to your specific air conditioner's user manual.

SPECIFICATIONS

Feature	Detail
Brand	AIDITIYMI
Model Number	RAS-07BKV-E
Connectivity Technology	Infrared
Battery Type	2 x AAA (not included)
Maximum Range	32 Feet

Controller Type	Button Control
Button Quantity	9
Color	White
Item Weight	0.18 Pounds
Item Dimensions (L x W x H)	8"L x 2"W x 0.6"H

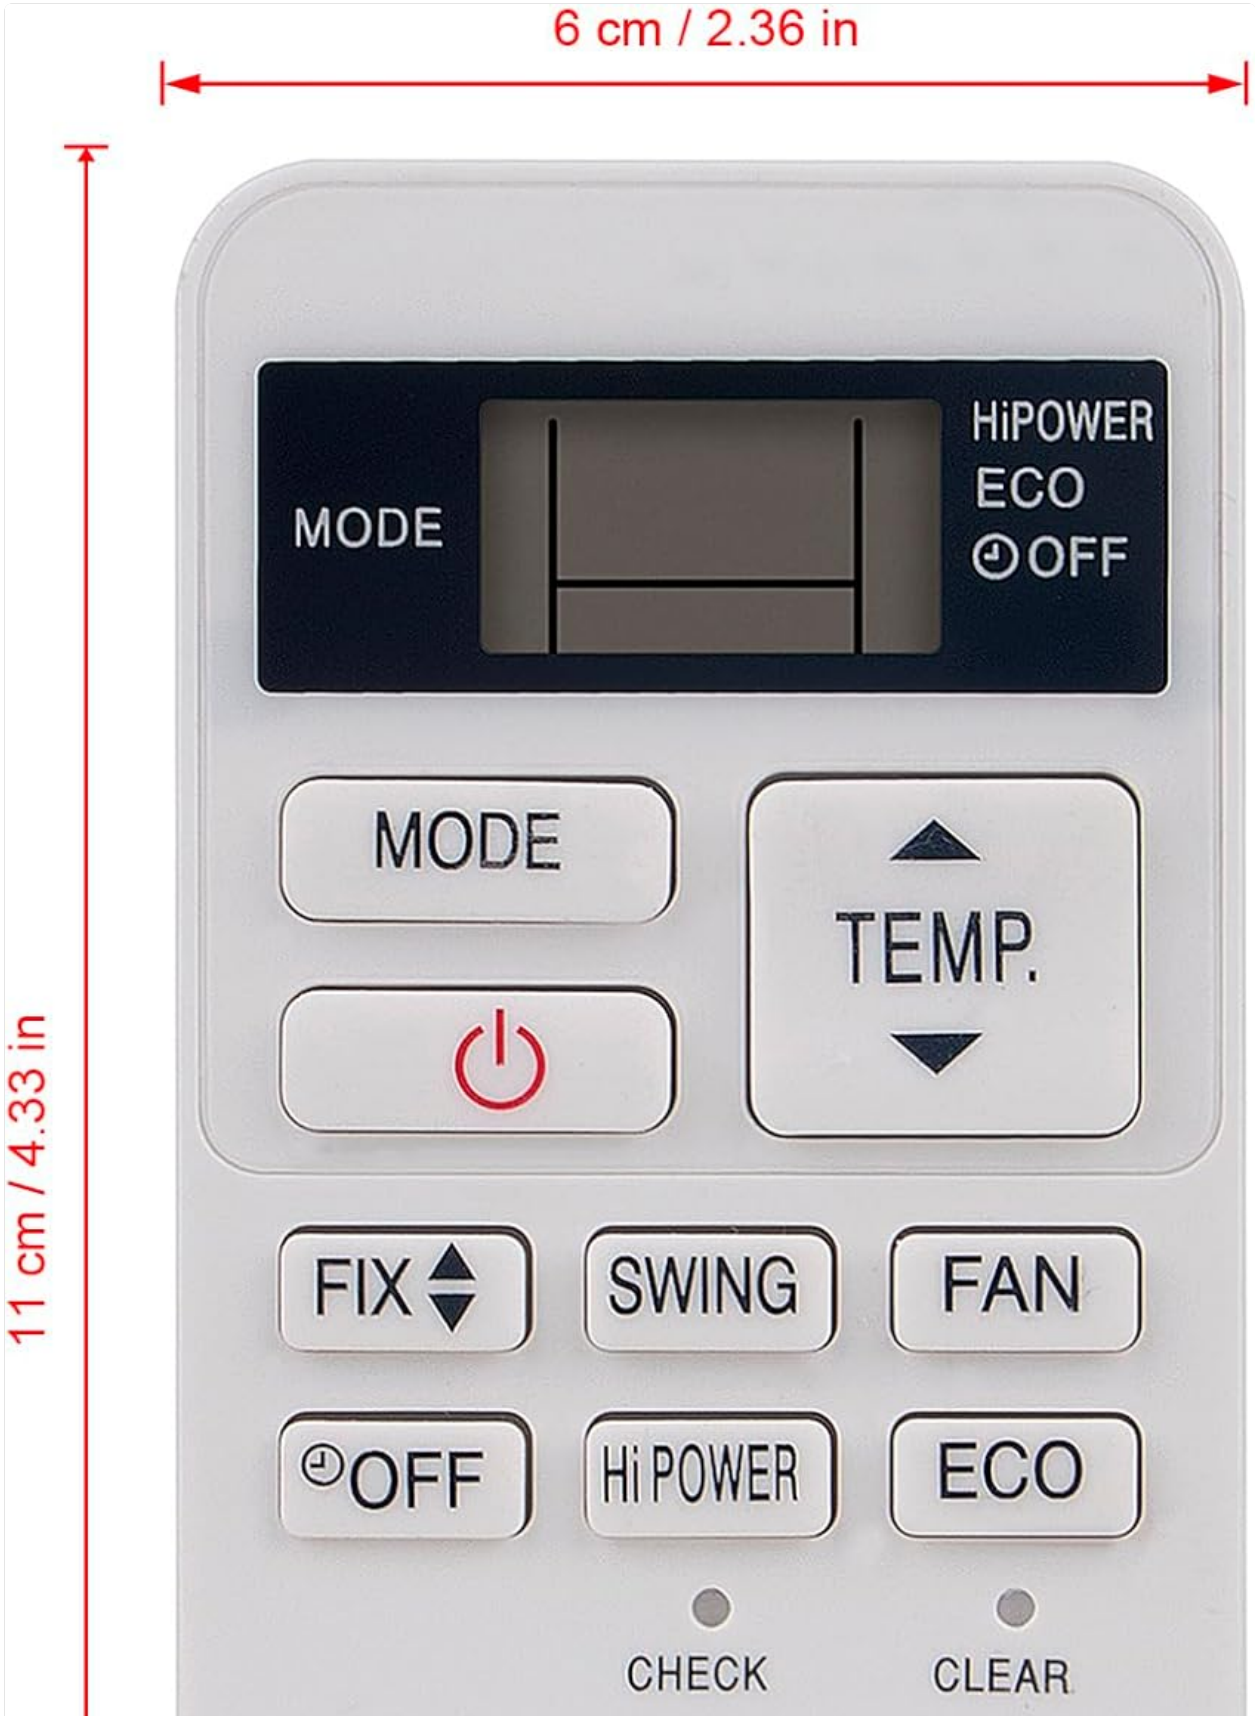




Image: Remote control with its approximate dimensions indicated in centimeters and inches.

COMPATIBLE TOSHIBA AIR CONDITIONER MODELS

This replacement remote control is compatible with a wide range of Toshiba Air Conditioner models, including but not limited to:

- RAS-077SKV-E6, RAS-107SKV-E6, RAS-13BAV-E, RAS-13BKV-E Series
- RAS-07, RAS-077, RAS-10, RAS-107, RAS-137, RAS-167SAV, RAS-167SKV
- RAS-137SKV-E7, RAS-10BAV-E1, RAS-10BAVG-E
- RAS-077SAV-E6, RAS-107SAV-E6, RAS-137SKV-E6, RAS-137SAV-E6
- RAS-077SKV-E5, RAS-077SAV-E5, RAS-137SAV-E5, RAS-107SKV-E5, RAS-107SAV-E5, RAS-137SKV-E5
- SVM-13028-3, RAS-077SKV-E7, RAS-107SKV-E7
- RAS-077SAV-E6, RAS-107SAV-E6, RAS-137SAV-E6
- RAS-10BKV-E1, RAS-13BKV-E1, RAS-13BAV-E1
- RAS-07EKV-EE, RAS-07EAV-EE, RAS-10EKV-EE, RAS-10EAV-EE, RAS-13EKV-EE, RAS-13EAV-EE
- RAS-07BKVG-E, RAS-05BKVG-E, RAS-05BAVG-E, RAS-10BKVG-E, RAS-07BAVG-E, RAS-13BAVG-E, RAS-16BAVG-E, RAS-13BKVG-E, RAS-16BKVG-E

WARRANTY

This product comes with a 1-Year Warranty from the manufacturer.

SUPPORT

For further assistance or if you encounter issues not covered in this manual, please refer to the user manual of your specific Toshiba Air Conditioner unit or contact the product seller for support.

