

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Belkin](#) /

› [Belkin SoundForm Rhythm True Wireless Earbuds \(AUC012btWH\) Instruction Manual](#)

Belkin AUC012btWH

Belkin SoundForm Rhythm True Wireless Earbuds

Model: AUC012btWH

PRODUCT OVERVIEW

The Belkin SoundForm Rhythm True Wireless Earbuds are designed to provide a seamless audio experience with clear call quality and extended battery life. Featuring Bluetooth 5.3, Environmental Noise Cancellation (ENC), and multipoint connectivity, these earbuds are suitable for various daily activities.



Image: Belkin SoundForm Rhythm True Wireless Earbuds and their compact charging case.

WHAT'S IN THE BOX

- SoundForm Rhythm True Wireless Earbuds and charging case
- USB-C charging cord

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case. Connect the provided USB-C charging cord to the charging case and a compatible USB power source. The LED indicators on the case will show the charging status. A 10-minute charge provides approximately 90 minutes of playtime.

Engineered to deliver premium listening.

Belkin Signature Sound is engineered to deliver full, balanced high-fidelity audio.



Image: The charging case connected via USB-C for fast charging.

The earbuds offer 8 hours of playtime per charge, with an additional 20 hours available from the charging case, totaling up to 28 hours of battery life.

Extended playtime.

8h
Per earbud

20h
In charging case



Image: Visual representation of 8 hours per earbud and 20 hours in the charging case.

2. Bluetooth Pairing

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, laptop), go to Bluetooth settings.
3. Select "SoundForm Rhythm" from the list of available devices to connect.
4. Once connected, you will hear an audio prompt, and the device will show the earbuds as paired.

Equipped with Bluetooth multipoint.

Easily pair and connect to
your Bluetooth devices within
a 30 ft. /10m range.



Image: Hands holding the charging case with earbuds, illustrating Bluetooth pairing with a phone and tablet.

OPERATING INSTRUCTIONS

Controls

The SoundForm Rhythm earbuds feature intuitive media controls. Refer to the quick start guide for specific touch gestures for play/pause, skip tracks, answer/end calls, and activate voice assistant. An accompanying app may offer additional control customization.

Bluetooth Multipoint Connection

These earbuds support Bluetooth Multipoint, allowing simultaneous connection to two devices. This enables seamless transitions between audio sources, such as listening to music on your phone and then taking a call on your laptop without manually re-pairing.

Clear Call Quality with ENC

Environmental Noise Cancellation (ENC) technology is integrated into the earbuds' microphones. This feature reduces background noise during calls, ensuring your voice is transmitted clearly to the person you are speaking with.

Clear Call Quality technology.

Built-in Environmental Noise
Cancellation for clearer calls.

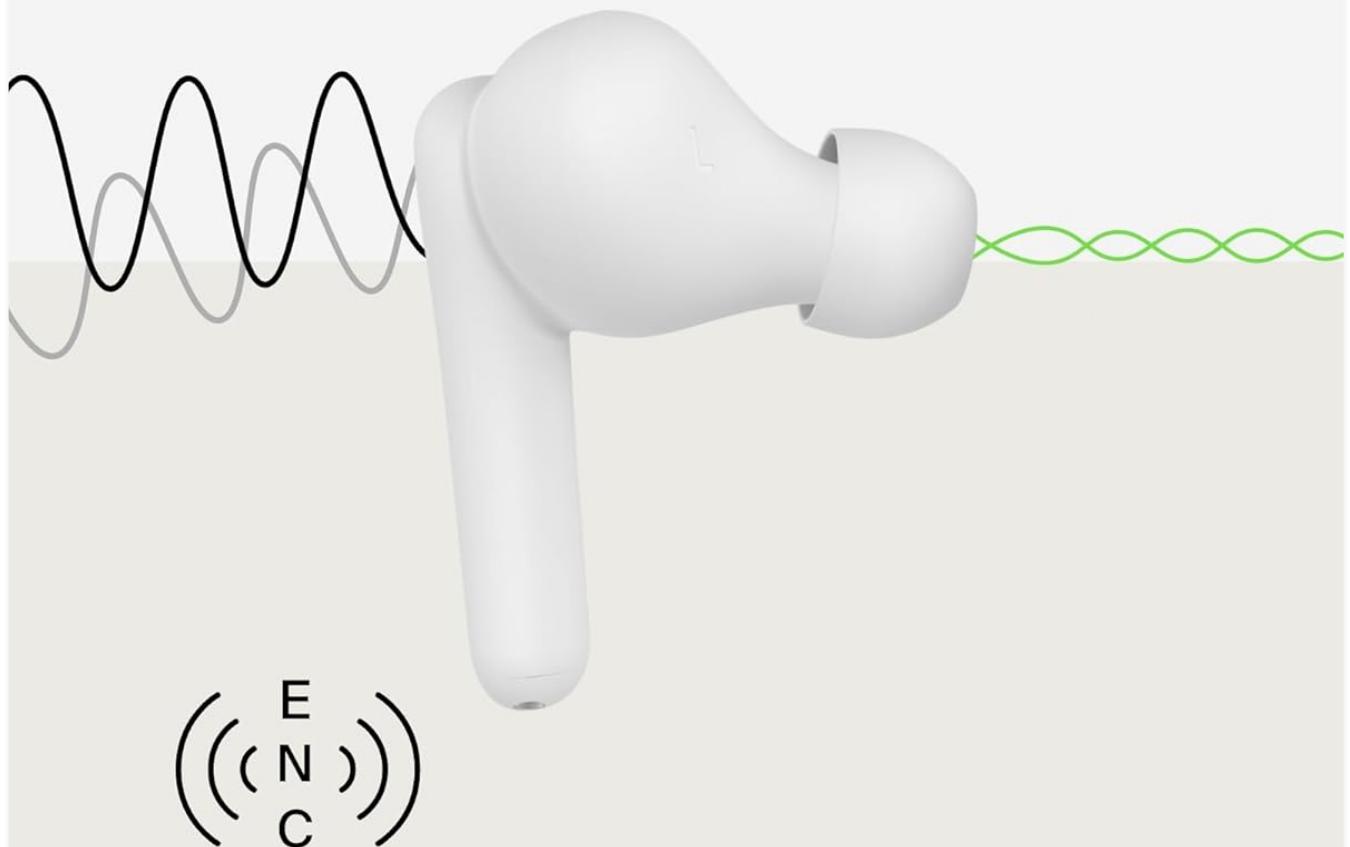


Image: Diagram illustrating how Environmental Noise Cancellation (ENC) filters out background noise for clearer calls.

Belkin Signature Sound

The SoundForm Rhythm earbuds are engineered to deliver full, balanced high-fidelity audio, providing a premium listening experience across various music genres and content.

MAINTENANCE

Cleaning

To maintain optimal performance and hygiene, regularly clean your earbuds and charging case. Use a soft, dry, lint-free cloth. Avoid using abrasive materials, solvents, or spray cleaners. Ensure no moisture enters any openings.

Water Resistance

The earbuds are IPX5 compliant, meaning they are resistant to sweat and splashes of water. This makes them suitable for workouts and light rain. However, they are not designed for submersion in water or exposure to pressurized water jets.

TROUBLESHOOTING

- No Sound:** Ensure earbuds are charged, properly paired, and the volume on both the earbuds and your device is turned up.
- Pairing Issues:** Turn off Bluetooth on your device, then turn it back on. Try resetting the earbuds (refer to the quick start guide for specific reset instructions). Ensure no other devices are trying to connect simultaneously.
- Poor Call Quality:** Check for obstructions around the microphone. Ensure Environmental Noise Cancellation is active. Move closer to your connected device to improve signal strength.
- Earbuds Not Charging:** Verify the USB-C cable is securely connected to both the case and the power source. Check if the charging port is clean and free of debris.

SPECIFICATIONS

Model Name	Belkin SoundForm Rhythm
Model Number	AUC012btWH
Connectivity Technology	Wireless (Bluetooth 5.3)
Bluetooth Range	Up to 30 feet (10 meters)
Battery Life (Earbuds)	Up to 8 hours
Battery Life (with Case)	Up to 28 hours total
Fast Charging	10 minutes charge for 90 minutes playtime
Water Resistance	IPX5 (Sweat and water resistant)
Microphones	1 mic in each earbud with Environmental Noise Cancellation (ENC)
Audio Driver Type	Dynamic Driver
Included Components	Earbuds, Charging Case, USB-C Charging Cord

Product Dimensions	1.1 x 4.02 x 4.09 inches
Item Weight	0.353 ounces (10 Grams)

WARRANTY AND SUPPORT

Belkin SoundForm Rhythm True Wireless Earbuds come with a 2-year warranty. For warranty claims, technical support, or further assistance, please visit the official Belkin support website or contact their customer service. Keep your proof of purchase for warranty validation.

Official Belkin Support: www.belkin.com/support/

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official Belkin branding story video showcasing various Belkin products, including earbuds, and their integration into daily life. This video highlights the brand's commitment to connectivity and innovation.