

[Manuals.plus](#) /

› [Dpofirs](#) /

› Dpofirs Digital Peephole Door Camera User Manual - Model Dpofirmqu917dcgi

Dpofirs Dpofirmqu917dcgi

Dpofirs Digital Peephole Door Camera User Manual

MODEL: DPOFIRMQU917DCGI

Brand: Dpofirs

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your Dpofirs Digital Peephole Door Camera. This device enhances door security by offering a wide-angle view of your doorstep, high-definition video, and night vision capabilities. Please read this manual thoroughly before use to ensure proper functionality and longevity of the product.

Package Contents

Verify that all items listed below are present in your package:

- 1 x Indoor Monitor (4.3 inch LCD screen)
- 1 x Outdoor Doorbell Unit (Peephole Camera)
- 1 x Instruction Manual
- 6 x Expansion Tubes
- 6 x Screws
- 1 x Small Screws
- 2 x Adhesive Pads
- 2 x Clips
- 1 x USB Cable



Image: All components included in the Dpofirs Digital Peephole Door Camera package, laid out for inspection.

Product Overview

The Dpofirs Digital Peephole Door Camera consists of two main parts: the outdoor camera unit and the indoor monitor unit.

Outdoor Doorbell Unit

- **Camera Lens:** 8MP HD camera with 170-degree wide-angle view.
- **Infrared LEDs:** For automatic night vision.
- **Doorbell Button:** Activates the indoor monitor.
- **Microphone:** For audio capture.

Indoor Monitor Unit

- **4.3-inch LCD Screen:** Displays the view from the outdoor camera.
- **Control Buttons:** For navigation, viewing, and settings.
- **Speaker:** For audio output.
- **Microphone:** For two-way audio communication.

- **Memory Card Slot:** Supports up to 256G memory card (not included).
- **USB Port:** For charging and power supply.



Image: The indoor monitor and outdoor camera unit of the Dpofirs Digital Peephole Door Camera.



Image: A close-up view of the side of the indoor monitor, showing various ports and control buttons.

Setup

1. Charging the Device

Before initial use, ensure both the indoor monitor and outdoor doorbell unit are fully charged. Connect the provided USB cable to the respective charging ports and a 5V 2A power adapter (not included). The charging indicator will illuminate during charging and turn off when complete.

2. Installing the Outdoor Doorbell Unit

1. **Remove Existing Peephole:** Unscrew and remove your current peephole from the door.
2. **Insert Camera Cable:** Pass the cable from the outdoor doorbell unit through the peephole hole in the door.
3. **Position Outdoor Unit:** Place the outdoor unit flush against the exterior of the door, ensuring the camera lens is centered.

3. Installing the Indoor Monitor Unit

1. **Attach Mounting Plate:** Secure the mounting plate to the interior side of the door, aligning it with the peephole hole. Use the provided screws and expansion tubes if necessary.
2. **Connect Cable:** Connect the cable from the outdoor unit to the corresponding port on the indoor monitor.
3. **Mount Monitor:** Slide the indoor monitor onto the mounting plate until it clicks securely into place.



Image: The rear view of the indoor monitor and outdoor unit, illustrating their respective mounting mechanisms.

Operating Instructions

1. Power On/Off

Press and hold the power button on the indoor monitor to turn the device on or off.

2. Viewing Outside

When someone presses the doorbell button on the outdoor unit, the indoor monitor will automatically display the live view. You can also manually press the view button on the indoor monitor to see outside at any time.

Large 170 degree wide field of view

Large field of view wide angle, clearly visible from top to bottom, left to right



Image: An illustration demonstrating the extensive 170-degree wide-angle field of view provided by the camera.

3. Two-Way Intercom

When the doorbell rings, or you are viewing the live feed, press the intercom button on the indoor monitor to initiate two-way communication with the visitor outside.

4. Night Vision

The device features LED dark scene fill light, which automatically activates in low-light conditions to provide clear visibility at night.

5. Recording and Storage

To record video or take photos, a memory card (up to 256G, not included) must be inserted into the indoor monitor's slot. The device supports automatic recording upon doorbell press or motion detection (if enabled in settings). Refer to the on-screen menu for specific recording and playback options.

Maintenance

Cleaning

Wipe the camera lens and monitor screen with a soft, dry cloth. Avoid using abrasive cleaners or solvents that could damage the surfaces.

Battery Care

Recharge the device regularly to maintain optimal battery performance. For long-term use, it is recommended to connect an external power supply to the monitor. The built-in battery is primarily for temporary use.

Memory Card Management

Periodically check the memory card for available space. Format the card through the monitor's settings menu if necessary to ensure continuous recording. Back up important recordings before formatting.

Troubleshooting

- No image on screen:**
Solution: Ensure the outdoor unit cable is securely connected to the indoor monitor. Check if the device is powered on and fully charged.
- Poor image quality:**
Solution: Clean the camera lens. Ensure there are no obstructions. Check for sufficient lighting; night vision should activate automatically in dark conditions.
- Doorbell not ringing:**
Solution: Verify the outdoor doorbell button is functioning. Check the volume settings on the indoor monitor.
- Battery not holding charge:**
Solution: Ensure the USB cable and power adapter are working correctly. If the issue persists, contact customer support.
- Cannot record video/take photos:**
Solution: Ensure a compatible memory card is inserted and has sufficient free space. Format the memory card if necessary.

Specifications

Item Type	Video Doorbell Camera
Material	ABS
Viewing Angle	170 Degrees
Display Screen	4.3 inches
Camera Resolution	8MP HD (1080P video)
Memory Card Support	Maximum 256G (Not Included)
Night Vision Type	LED Auxiliary Lighting
Power Supply	DC 5V 2A
Doorbell Battery	800mAh (Included)
Screen Battery	400mAh (Included)

Operating Temperature

-10°C to 50°C (14°F to 122°F)

Warranty Information

This Dpofirs product is covered by a limited warranty. Please refer to the warranty card included in your package or contact customer support for specific details regarding warranty terms and conditions.

Customer Support

For technical assistance, troubleshooting, or any inquiries regarding your Dpofirs Digital Peephole Door Camera, please contact our customer support team. Contact information can typically be found on the product packaging or the official Dpofirs website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D4MK52VD>

More documents and user manuals: <https://manuals.plus/>