

- Manuals.plus /
- > Nispira /
 - > Nispira Replacement Water Filter Instruction Manual for Whisker City Pet Fountains (Model HBCWF-008)

Nispira HBCWF-008

Nispira Replacement Water Filter Instruction Manual

COMPATIBLE WITH WHISKER CITY AUTOMATIC PET FOUNTAINS

Model: HBCWF-008

1. Product Overview

The Nispira Replacement Water Filter is designed for use with Whisker City automatic pet drinking fountains. This filter utilizes a multi-stage filtration process to enhance water quality for pets.

Each filter is crafted with activated carbon to effectively reduce impurities, odors, and pollutants from your pet's drinking water. This process aims to provide cleaner and fresher-tasting water, contributing to your pet's hydration and well-being.

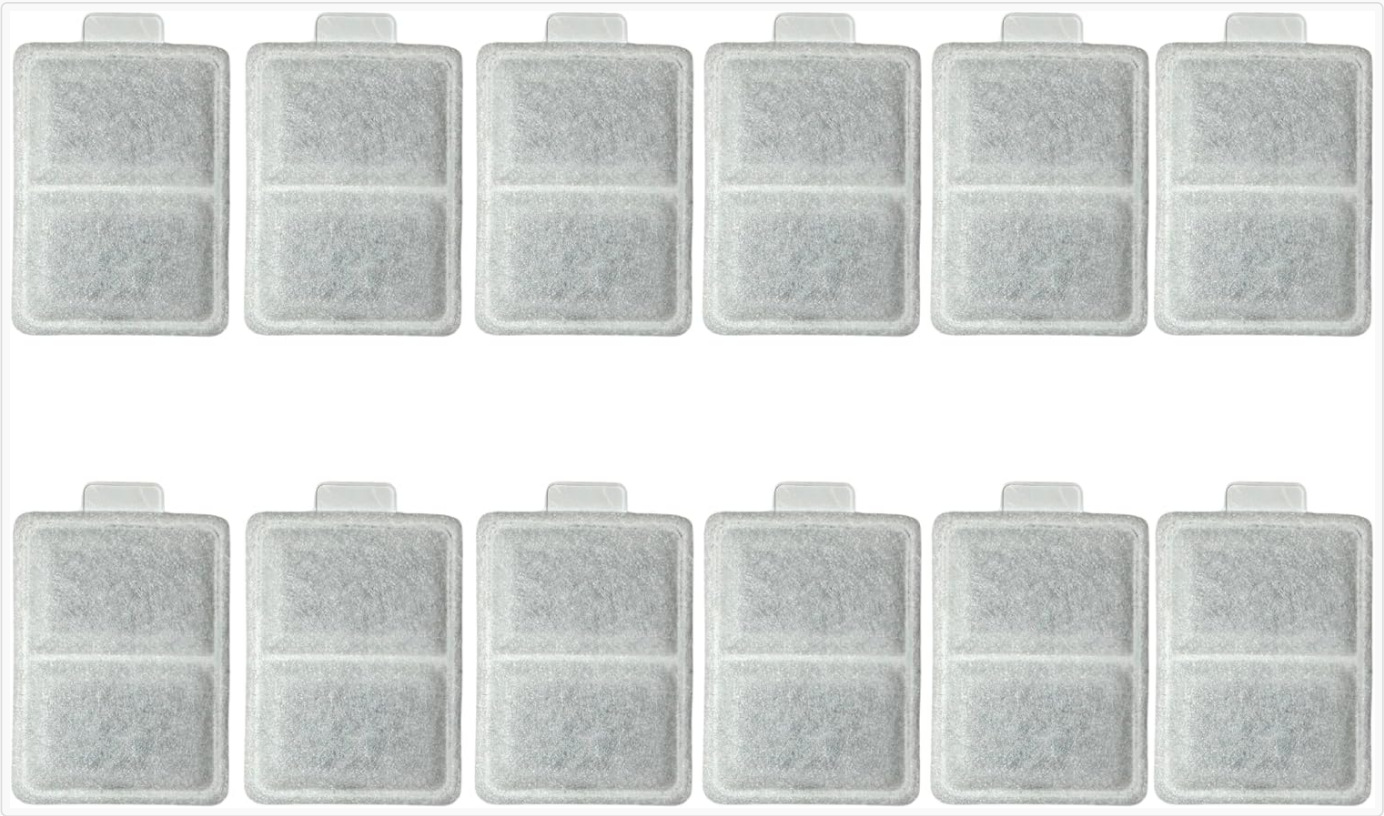


Image 1.1: A pack of twelve Nispira replacement water filters.

2. Product Features

- **Activated Carbon Filtration:** Contains high-quality activated carbon granules designed to absorb toxins, chemicals, chlorine, and heavy metals.
- **Multi-Stage Purification:** Employs a comprehensive filtration process for thorough water purification.
- **Improved Water Quality:** Aims to provide clean, fresh-tasting water for pets.
- **Compatibility:** Specifically designed to fit Whisker City automatic pet drinking fountains.



Image 2.1: Illustration of the activated charcoal filtration within the filter.

3. Specifications

Specification	Detail
---------------	--------

Material	Activated Charcoal
Product Dimensions (L x W x H)	2.75" x 1.75" x 0.25"
Item Model Number	HBCWF-008
Unit Count	12 Filters per pack
Product Benefits	Removes Impurities, Improves Taste
UPC	810135624459

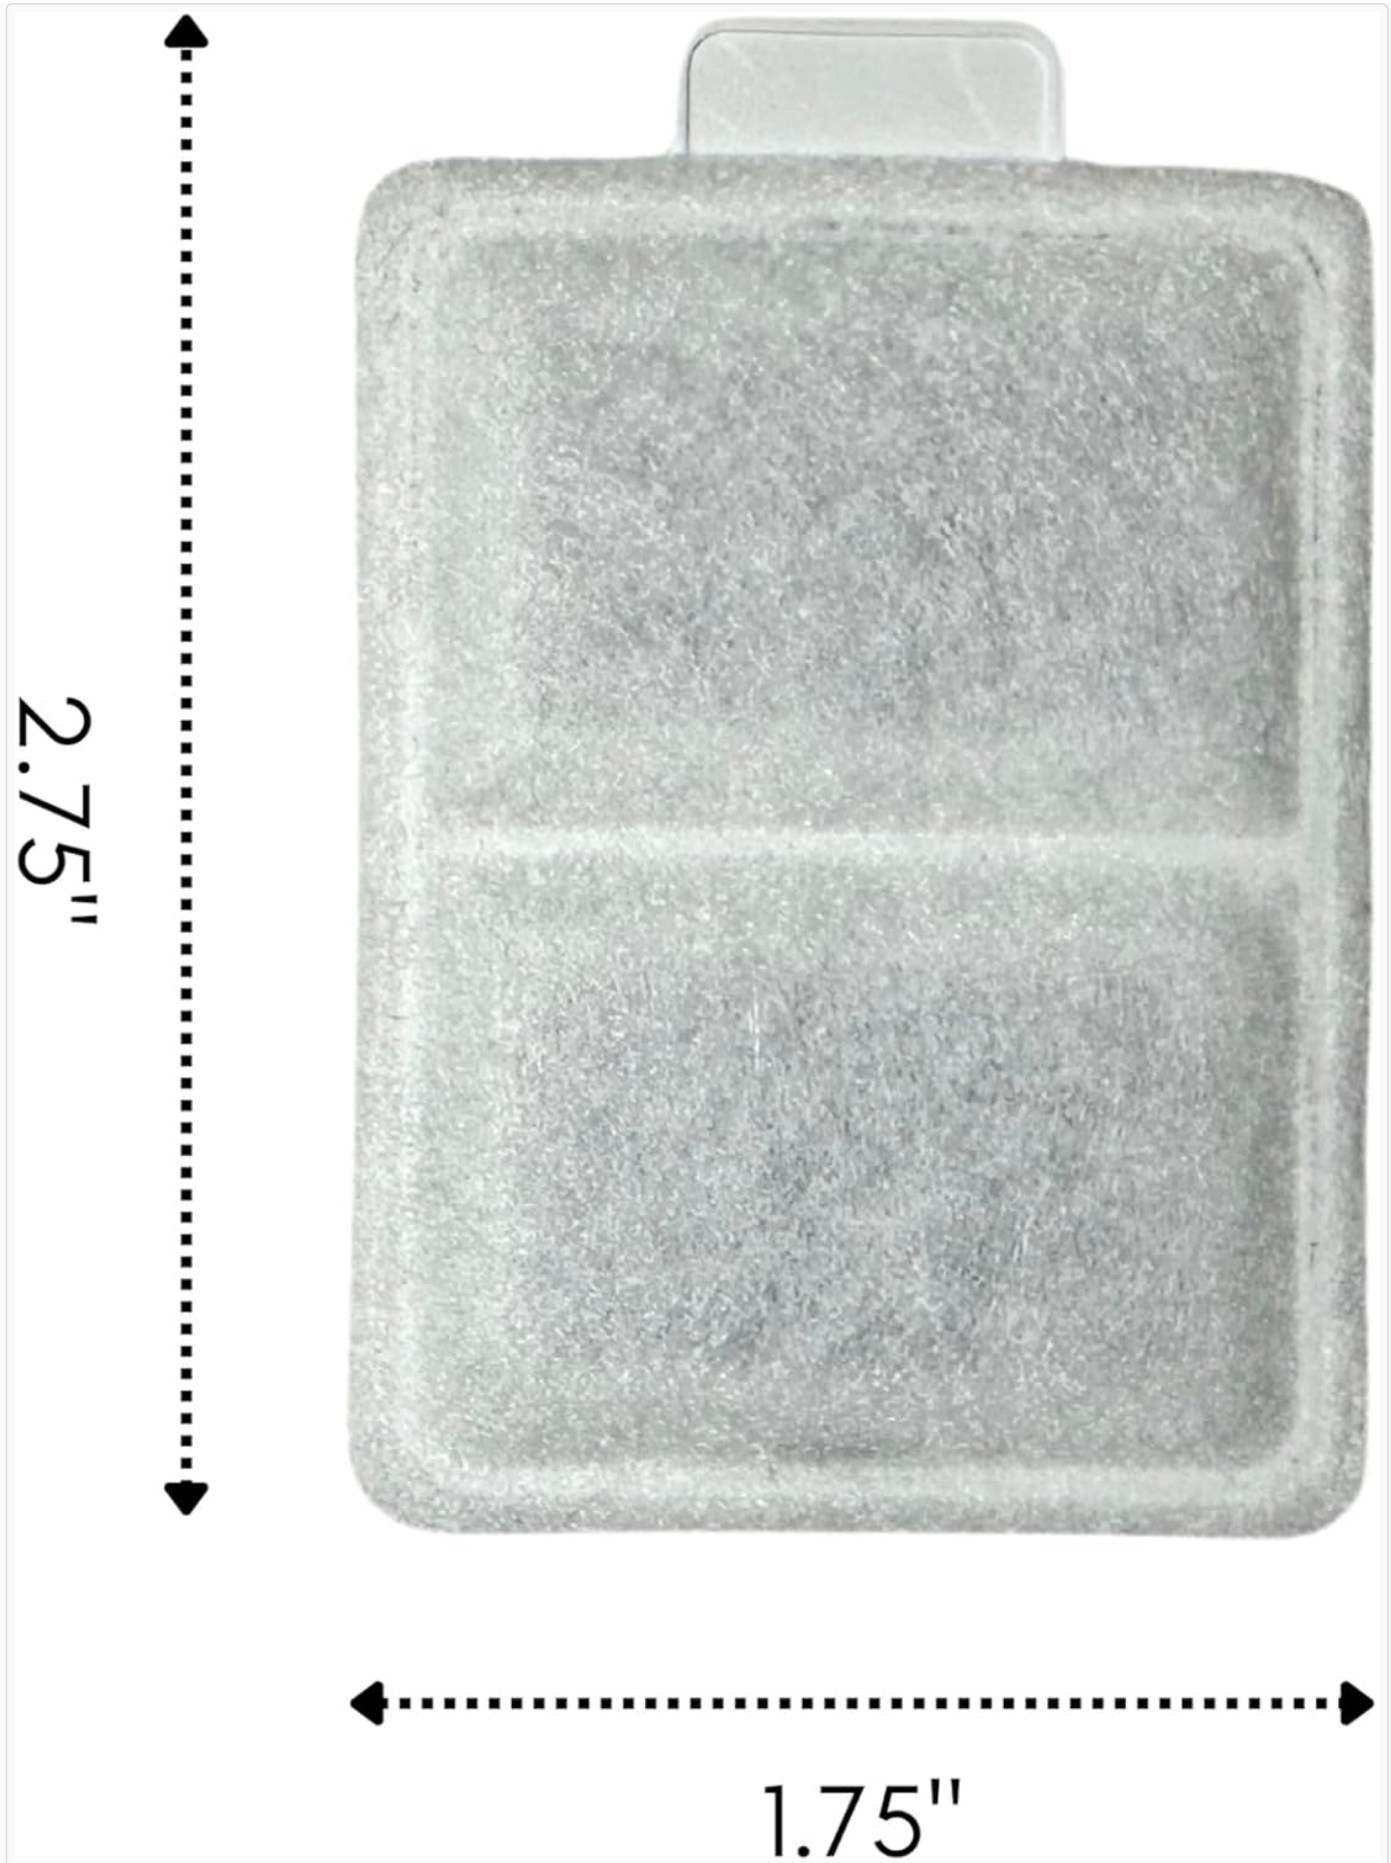


Image 3.1: Dimensions of the Nispira replacement water filter.

4. Setup and Installation

Follow these general steps to install the Nispira replacement filter in your Whisker City automatic pet fountain. Always refer to your specific pet fountain's manual for detailed instructions.

1. **Disassemble Fountain:** Unplug the pet fountain and disassemble it according to its manufacturer's instructions. This typically involves removing the top cover and water reservoir.
2. **Remove Old Filter:** Locate the existing filter compartment. Carefully remove and discard the old filter.
3. **Rinse New Filter:** Rinse the new Nispira filter thoroughly under cool running water for approximately 30 seconds. This helps to remove any loose carbon dust.
4. **Insert New Filter:** Place the rinsed Nispira filter into the designated filter compartment of your pet fountain. Ensure it is seated correctly and securely.
5. **Reassemble and Fill:** Reassemble the pet fountain components. Fill the fountain with fresh water to the recommended level.
6. **Plug In:** Plug the pet fountain back into a power outlet.

5. Operating Instructions

Once the filter is installed and the fountain is filled with water and powered on, the Nispira filter will begin its purification process. No further action is required for the filter itself during operation.

Ensure the water level in the fountain is maintained above the minimum fill line to prevent the pump from running dry, which can cause damage.

6. Maintenance

Regular maintenance of your Nispira filter and pet fountain is essential for optimal performance and water quality.

- **Filter Replacement:** It is recommended to replace the Nispira water filter every **2 to 4 weeks**. The exact frequency may vary depending on your pet's usage, the number of pets, and the hardness of your local water. Regular replacement ensures continuous optimal filtration.
- **Fountain Cleaning:** When replacing the filter, it is also advisable to thoroughly clean the pet fountain itself. This includes cleaning the pump, reservoir, and all other components to prevent mineral buildup and bacterial growth.
- **Water Changes:** Change the water in the fountain daily to maintain freshness, even with a filter installed.

7. Troubleshooting

If you encounter issues with your pet fountain's water quality or flow, consider the following:

- **Reduced Water Flow:** Check if the filter is clogged. If it has been in use for more than 2-4 weeks, replace it. Also, ensure the fountain pump is clean and free of debris.
- **Unpleasant Odor/Taste:** This indicates the filter may be saturated with impurities. Replace the filter immediately. Ensure the fountain is also thoroughly cleaned.
- **Filter Not Fitting:** Verify that you have the correct Nispira replacement filter for your specific Whisker City pet fountain model. Refer to the dimensions in Section 3.

8. Warranty and Support

For questions regarding the Nispira Replacement Water Filter or for support, please contact Nispira customer service. Specific warranty details may be available on the product packaging or the official Nispira website.

You can typically find contact information for Nispira through their official brand store or product listings.

© 2025 Nispira. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B0D4NGZ77G>
More documents and user manuals: <https://manuals.plus/>