

JOYBOS LVH30

JOYBOS 50-inch Rubber Floor Squeegee Instruction Manual

Model: LVH30

INTRODUCTION

Thank you for choosing the JOYBOS Rubber Floor Squeegee. This manual provides essential information for the proper assembly, operation, and maintenance of your new cleaning tool. Designed for versatility and efficiency, this squeegee is ideal for a wide range of surfaces, ensuring a clean and streak-free finish.

PRODUCT FEATURES

- **Durable Silicone Blade:** The 11.81-inch flexible, soft rubber blade is designed for effective water removal and sweeping of hair and dust without sticking.
- **Adjustable Long Handle:** Features a four-section extended handle, adjustable from 4.53 inches to 50 inches, allowing access to high ceilings, shower doors, and various floor types.
- **180° Rotating Head:** The squeegee head rotates 180 degrees, making it easy to clean hard-to-reach spaces and corners.
- **Multi-Surface Cleaning:** Suitable for floors (tile, epoxy, cement), shower doors, windows, mirrors, sinks, countertops, driveways, garages, and industrial areas.
- **Streak-Free Finish:** Engineered to tightly adhere to surfaces, providing superior cleaning power and leaving no marks or streaks.
- **Easy Storage:** Includes a hanger hole on the handle for convenient, space-saving storage.


PACKAGE CONTENTS

- 1 x JOYBOS Rubber Floor Squeegee Head (11.81 inches wide)
- 4 x Stainless Steel Handle Sections

SETUP AND ASSEMBLY

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure you have the squeegee head and all four handle sections.

2. **Assemble Handle:** Screw the stainless steel handle sections together clockwise until they are securely connected. You can use fewer sections to adjust the handle length as needed for different tasks.
3. **Attach Squeegee Head:** Align the squeegee head with the end of the assembled handle. Press the head firmly onto the handle until it clicks into place. Ensure it is securely attached before use.

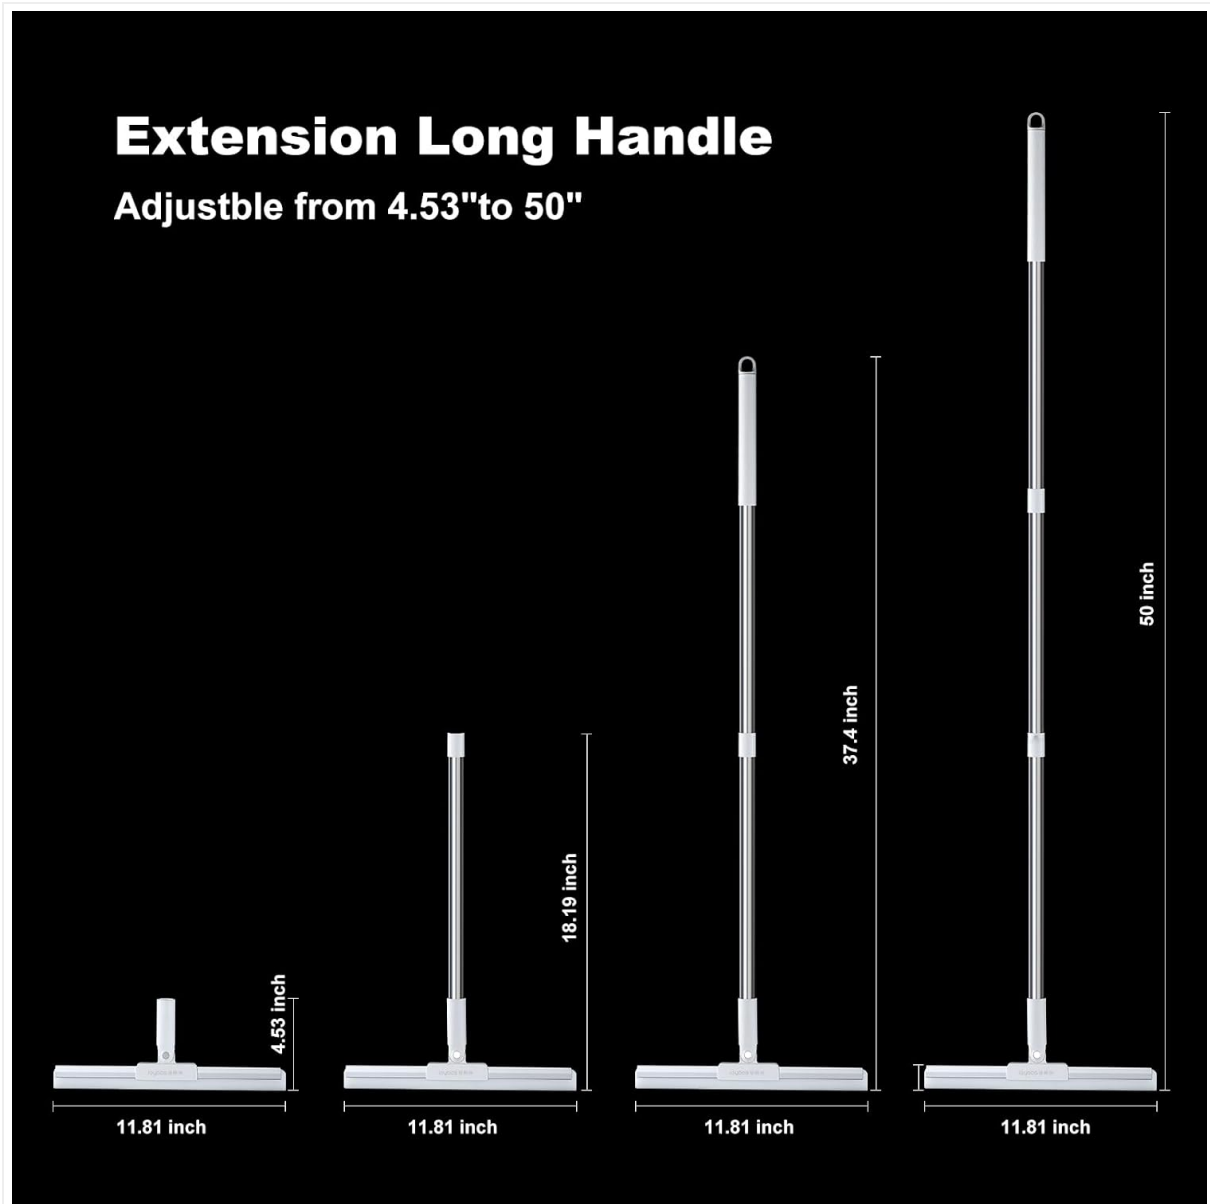

The squeegee's handle is adjustable, extending from 4.53 inches to 50 inches, providing flexibility for various cleaning tasks.

OPERATING INSTRUCTIONS

General Use

- Apply your preferred cleaning solution to the surface.
- Hold the squeegee firmly and place the silicone blade against the surface at a slight angle.
- Apply even pressure and pull the squeegee across the surface in a continuous motion. Overlap strokes slightly to avoid leaving gaps.
- Wipe the blade clean after each stroke with a cloth to prevent streaks.

Specific Applications

- **Floor Cleaning:** Use the long handle to push water, slush, or debris from large floor areas like garages,

basements, or industrial spaces. The 180° rotating head helps reach under furniture or into corners.

- **Window and Glass Cleaning:** For windows, mirrors, and shower doors, use the squeegee to remove cleaning solution and water for a streak-free shine. The flexible blade ensures tight adherence to glass surfaces.
- **Pet Hair Removal:** The silicone blade effectively sweeps pet hair from various floor types, including laminate, tile, and wood, without sticking.
- **Countertop Cleaning:** For smaller tasks, detach the handle to use the squeegee head as a handheld tool for cleaning kitchen countertops or bathroom sinks.



The JOYBOS squeegee is versatile, effectively cleaning various surfaces such as sinks, mirrors, glass, tiles, and tables.

180° Rotating Head

Easy to clean hard-to-reach spaces



The squeegee features a 180-degree rotating head, allowing for easy cleaning in tight spaces and efficient collection of hair and dust.

Easy to Clesn,No Dust



Experience effortless cleaning with the JOYBOS squeegee, designed to remove dust effectively without scattering it.



Achieve streak-free windows with the JOYBOS squeegee, perfect for glass cleaning.



The silicone blade ensures a streak-free finish, making it ideal for drying wet floors.

Official product video demonstrating the features and use of the JOYBOS Rubber Floor Squeegee, including handle extension, glass cleaning, and easy maintenance.

MAINTENANCE

- **Cleaning the Blade:** After each use, rinse the silicone blade thoroughly with water to remove any residue, dirt, or cleaning solution. This prevents buildup and maintains optimal performance.
- **Drying:** Allow the squeegee blade to air dry completely before storing to prevent mildew or odor.
- **Storage:** Utilize the integrated hanger hole on the handle to hang the squeegee in a dry, accessible location. This keeps it neat and saves space.
- **Inspecting for Wear:** Periodically check the silicone blade for any signs of wear, tears, or damage. A worn blade may not provide a streak-free finish and should be replaced if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Leaves streaks on surfaces	Dirty blade; uneven pressure; worn blade	Clean the blade thoroughly; apply consistent, even pressure; inspect blade for damage and replace if worn.
Ineffective water removal	Blade not making full contact; insufficient pressure; surface too dry	Ensure blade is flat against the surface; increase pressure slightly; ensure surface is adequately wet for effective squeegeeing.
Handle feels loose	Handle sections not fully tightened	Twist handle sections clockwise until securely tightened.

SPECIFICATIONS

- **Brand:** JOYBOS
- **Model Number:** LVH30
- **Color:** White
- **Style:** Minimalist
- **Product Dimensions (W x H):** 11.81" x 48.43" (Adjustable up to 50" length)
- **Item Weight:** 0.34 Kilograms
- **Blade Material:** Silicone
- **Handle Material:** Plastic, Stainless Steel

WARRANTY AND SUPPORT

JOYBOS products are manufactured to high-quality standards. For specific warranty information or technical support, please refer to the product packaging or contact JOYBOS customer service directly through their official website or the retailer where the product was purchased. Please retain your proof of purchase for warranty claims.