

[manuals.plus](#) /› [Denash](#) /

› Denash 30MP 2.7K Digital Camera User Manual (Model: Denashuxanqbvmgs)

Denash Denashuxanqbvmgs

Denash 30MP 2.7K Digital Camera User Manual

Model: Denashuxanqbvmgs

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Denash 30MP 2.7K Digital Camera. Designed for ease of use, this camera features a 30-megapixel sensor for high-resolution photos and records video in 2.7K HD. Its 180-degree rotatable 3-inch LCD screen is ideal for various shooting angles, including selfies. The camera also includes an automatic flash for low-light conditions and can function as a webcam when connected to a computer.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Denash Digital Camera
- 1 x User Manual
- 1 x Shoulder Strap
- 1 x USB Cable



Image 2.1: Contents of the Denash Digital Camera package.

3. PRODUCT OVERVIEW

The Denash Digital Camera is designed for capturing high-quality images and videos with ease. Key features include:

- **30MP Photo Resolution:** Capture detailed still images.
- **2.7K HD Video Recording:** Record clear and vibrant videos.
- **180° Rotation 3-inch LCD Screen:** View your shots and compose selfies with flexibility.
- **Automatic Flash:** Ensures proper illumination in various lighting conditions.
- **Webcam Functionality:** Connect to a computer for video calls.
- **Built-in 800mAh Battery:** Provides extended usage time.
- **USB 2.0 Interface:** For charging and data transfer.
- **Multi-language Support:** English, Chinese, Japanese, German, French, Spanish, Italian, Portuguese, Dutch.

**2.7K camera +
30MP high definition**



Image 3.1: Denash Digital Camera highlighting 2.7K video and 30MP photo capabilities.



Image 3.2: Multi-language support for the camera interface.

4. SETUP

4.1 Charging the Battery

The camera has a built-in 800mAh lithium battery. Before first use, fully charge the battery.

1. Connect the provided USB cable to the camera's USB port.
2. Connect the other end of the USB cable to a USB power adapter (DC 5V 1A, not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once charging is complete, the indicator light will turn off or change color (refer to camera display for exact status).

4.2 Inserting a Memory Card

The camera requires a memory card (up to 128GB, not included) to store photos and videos.

1. Locate the memory card slot on the camera.
2. Insert the memory card with the metal contacts facing the correct direction (usually towards the front of the camera or as indicated by a diagram near the slot) until it clicks into place.

3. To remove, gently push the card in until it springs out.

4.3 Attaching the Shoulder Strap

Attach the included shoulder strap to the camera's strap lugs for secure carrying.

1. Thread the strap through the lug on the camera body.
2. Secure the strap according to the standard camera strap attachment method.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press and hold the Power button (usually marked with an ON/OFF symbol) to turn the camera on or off.

5.2 Using the LCD Screen

The 3-inch TFT color LCD screen can be rotated 180 degrees. This allows for flexible viewing angles, including facing forward for selfies or vlogging.



Image 5.1: The camera's rotatable LCD screen in use.

5.3 Capturing Photos and Videos

To switch between photo and video modes, use the dedicated mode button or navigate through the on-

screen menu.

- **Taking a Photo:** In photo mode, press the Shutter button halfway to focus, then press fully to capture the image.
- **Recording a Video:** In video mode, press the Record button (often marked with a red dot) to start recording. Press it again to stop.

5.4 Flash Settings

The camera features an automatic flash. You can adjust flash settings (Automatic, 100, 200, 400 ISO equivalent) via the menu to suit different lighting conditions.

5.5 Shooting Modes and Scenarios

The camera supports various shooting modes and scenarios to optimize your photos:

- **Mode:** Single photo, multiple snapshots.
- **Scenarios:** Auto, Night, Landscape, People, Sports, Beach.

Support multiple scenarios

Auto, night, landscape, people, sports, beach



Image 5.2: Supported shooting scenarios.



Image 5.3: Camera in a landscape setting, illustrating scenario modes.

5.6 Timer Settings

Set a delay before taking a photo using the timer function: 2 seconds, 5 seconds, or 10 seconds.

5.7 White Balance

Adjust white balance to ensure accurate color reproduction under different light sources:

- Automatic
- Daylight
- Cloudy
- Incandescent
- Fluorescent

5.8 Exposure Compensation

Adjust the exposure level from +3 to -3 to make your photos brighter or darker as needed.

5.9 Connecting to a Computer (Webcam Function)

Connect the camera to a computer using the USB cable. The camera supports Windows and OS X systems. Once connected, you can select the webcam function from the camera's menu to use it for video

chat.

6. MAINTENANCE

- **Cleaning the Camera Body:** Use a soft, dry cloth to wipe the camera body. Do not use harsh chemicals or solvents.
- **Cleaning the Lens:** Use a lens cleaning cloth or brush specifically designed for camera lenses. Avoid touching the lens surface with your fingers.
- **Cleaning the LCD Screen:** Gently wipe the screen with a soft, lint-free cloth.
- **Storage:** When not in use for extended periods, store the camera in a cool, dry place, away from direct sunlight and extreme temperatures. Remove the memory card if not needed.
- **Battery Care:** Recharge the battery periodically if the camera is stored for a long time to maintain battery health.

7. TROUBLESHOOTING

If you encounter issues with your camera, please refer to the following common solutions:

- **Camera does not power on:**
 - Ensure the battery is fully charged.
 - Verify the power button is pressed and held sufficiently.
- **Cannot take photos/record videos:**
 - Check if a memory card is inserted correctly.
 - Ensure the memory card has sufficient free space.
 - Format the memory card (*Note: This will erase all data on the card. Back up important files first.*).
- **Images are blurry:**
 - Ensure the lens is clean.
 - Check lighting conditions; use flash if necessary.
 - Hold the camera steady during capture.
- **Camera not recognized by computer:**
 - Ensure the USB cable is securely connected to both the camera and the computer.
 - Try a different USB port on your computer.
 - Restart both the camera and the computer.

8. SPECIFICATIONS

Feature	Description
Model Name	Denashuxanqbvmgs
Pixel	30MP
Image Size	30M (6400x4800), 24M (5600x4200), 20M (5200x3900), 12M (4000x3000), 8M (3264x2448), 5M (2592x1944)

Feature	Description
Video Size	2.7K (2688x1520), FHD (1920x1080), HD (1280x720)
Storage Method	Memory card, up to 128G (not included)
File Format	JPEG (Image), AVI (Video)
Mode	Single photo, multiple snapshots
Timer	2S, 5S, 10S
White Balance	Automatic, daylight, cloudy, incandescent, fluorescent
Exposure Compensation	+3, +2, +1, 0, -1, -2, -3
Flash	Automatic, 100, 200, 400
Interface	USB2.0
Screen	3.0 inch TFT color LCD
Languages	English, Chinese, Japanese, German, French, Spanish, Italian, Portuguese, Dutch
Input Voltage	DC 5V 1A
Battery	Built-in lithium battery, 800mAh
Brand	Denash
Connectivity Technology	USB
Exposure Control Type	Automatic
Image Stabilization	Digital

9. WARRANTY AND SUPPORT

Specific warranty information is typically provided with your purchase documentation or on the product packaging. Please refer to those resources for details regarding your product's warranty period and terms. For technical support or customer service inquiries, please contact your retailer or refer to the contact information provided with your purchase.