

## Soobest SO1001

# Soobest Digital Alarm Clock for Seniors User Manual

Model: SO1001

## INTRODUCTION

The Soobest Digital Alarm Clock for Seniors is designed to provide clear, easy-to-read time, date, and day information, along with customizable reminders, making daily routines simpler for elderly individuals. Its large HD display and user-friendly interface ensure important information is always visible and understandable.



Image: The Soobest Digital Alarm Clock showing the current time, day, date, and year, along with visual reminder icons for

## SETUP

1. **Unpacking:** Carefully remove the clock and all accessories from the packaging. Ensure all components are present: the digital clock, power adapter, and Type-C wired adapter.
2. **Power Connection:** Plug the Type-C wired adapter into the DC 5V input port on the back of the clock. Connect the power adapter to a standard electrical outlet. The clock will power on automatically.
3. **Initial Settings:** Upon first power-on, you may need to set the time, date, and language. Use the 4-direction buttons (Up, Down, Left, Right) and the OK/MENU button on the back of the clock to navigate and confirm selections.
4. **Placement:** Place the clock on a stable surface or mount it on a wall using the integrated keyhole slot. Ensure it is in a location where the display is easily visible.

### Cross Designed Buttons Offers Better Touch Response



Image: The rear panel of the clock, highlighting the power input and control buttons for setup and adjustments.

## OPERATING INSTRUCTIONS

### Display Modes

The clock offers 4 customizable display modes to suit different preferences and visibility needs:

- **White Digits:** Standard digital display with white numbers.
- **Yellow Digits:** Digital display with yellow numbers, often preferred for enhanced contrast.
- **Analog Dial:** A traditional clock face with hands.
- **Color Display:** Features a colorful background (red, white, or blue) for visual distinction.

To change the display mode, navigate through the settings menu using the control buttons on the back of the clock.

## 4 Kinds of Screen Display Mode Suit For Multiple Use



Image: Examples of the four available screen display modes, including digital and analog options with different color schemes.

## Time Period Display

The clock intelligently displays 6 different time periods to help users orient themselves throughout the day, preventing confusion between AM and PM:

- **Pre-Dawn**
- **Morning**
- **Afternoon**
- **Evening**

- Night
- Mid-Night

For example, at 6:00 AM, the display will show "Morning" to clarify the time of day.

## Clock Shows 6 Different Time Period for Corresponding Time

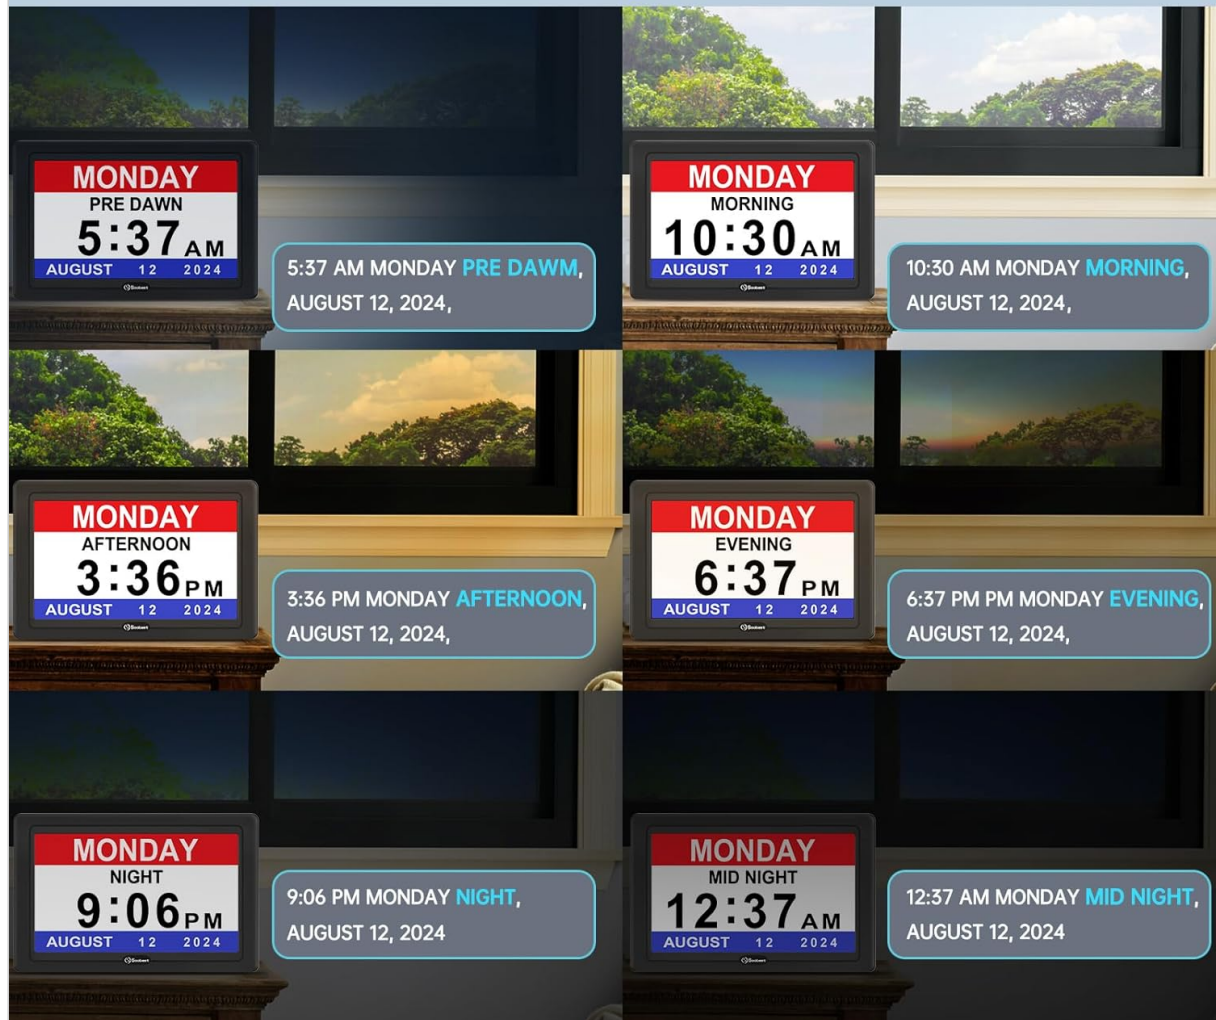 


Image: The clock displaying various time periods like 'Pre Dawn', 'Morning', 'Afternoon', 'Evening', 'Night', and 'Mid Night' to aid time orientation.

## Alarms and Reminders

The clock supports up to 20 sets of alarms, which can be customized for various reminders such as:

- Medication reminders
- Meal reminders
- Shower reminders
- Gardening reminders
- Walking the dog reminders

When an alarm triggers, a clear, colored icon with specific text will appear on the screen, helping to prevent misunderstandings. To set or modify alarms, access the alarm settings through the menu.



## Different Reminders with Colorful Icons

### Make Your Loved Life Easier



And 4 More Reminders Waiting You to Use

Image: The clock displaying various reminder types with colorful icons, such as 'Medicine', 'Meal', 'Gardening', and 'Walk Dog'.

### Sound Settings

The alarm volume is adjustable from level 1 to 10. You can choose from three distinct ringtones:

- **Wave Purling Sound:** A calming sound reminiscent of ocean waves.
- **Birds Chirping Sound:** A natural and pleasant sound of birds.
- **Original Beeping Sound:** The standard alarm sound.

Select a comfortable volume and sound for your alarms and reminders via the sound settings menu.

## Choose A Comfortable or Attractive Sound and Volume for your Alarm/Reminder



Image: Visual representation of the three available alarm sounds: birds chirping, wave purling, and a standard beeping sound.

### **Dimmer Function**

The clock features an automatic dimming function that reduces screen brightness between 9:30 PM and 6:59 AM. Alternatively, you can manually adjust the brightness to one of 5 levels (L1 to L5) through the settings menu or by using the dedicated dimmer button on the back of the clock.

## 6 Level Adjustable Dimmer Offers You a Sweet Dream at Night

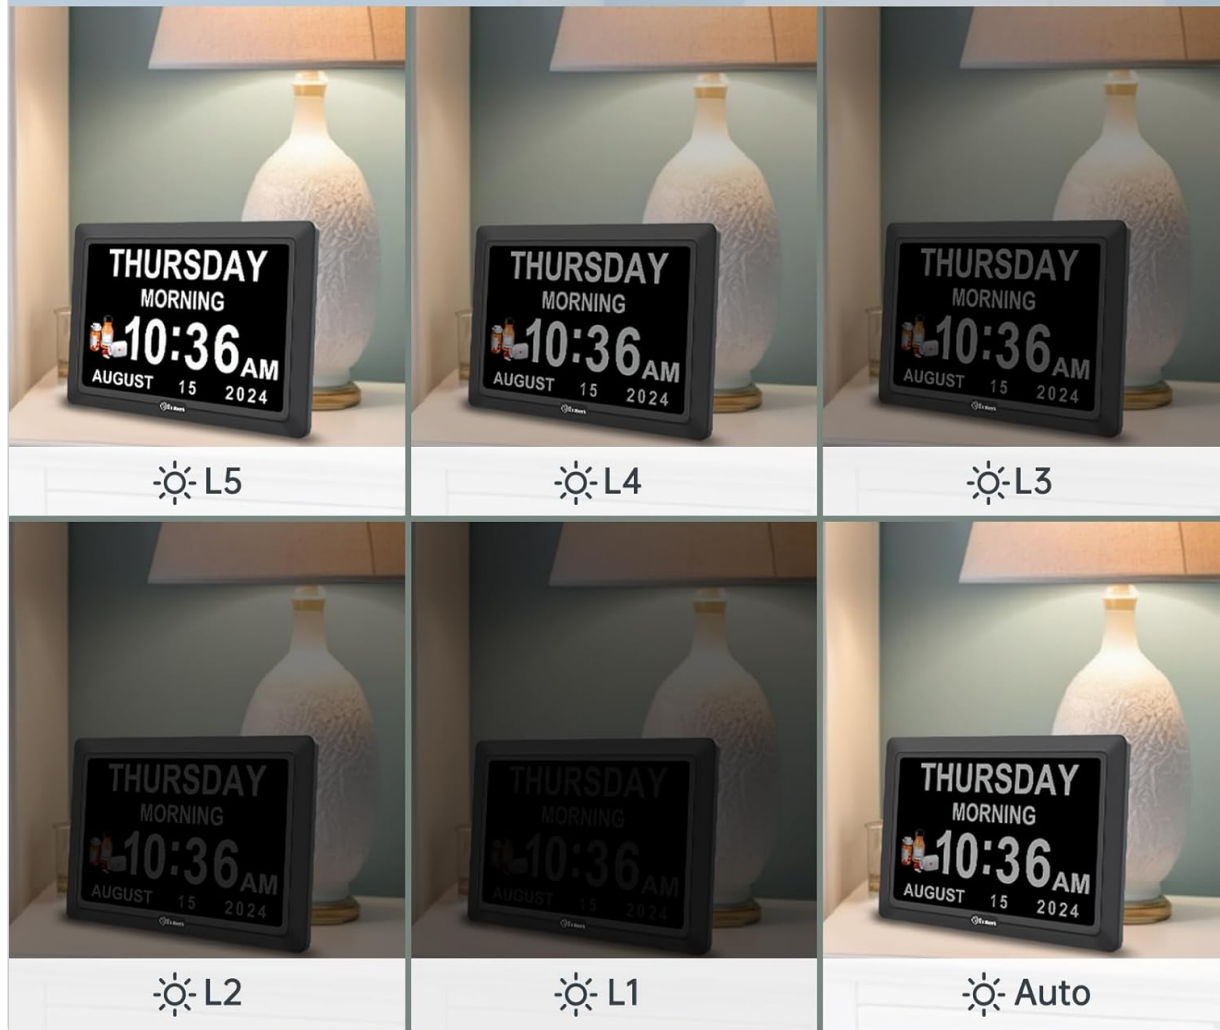 



Image: The clock display at various brightness levels (L5 to L1) and in automatic dimming mode, illustrating the adjustable dimmer feature.

### Language Settings

 The clock supports 8 different languages for its display and menu options, ensuring accessibility for a wider range of users. To change the language, navigate to the language settings in the menu.



# Multilingual Alarm Clock with 8 Languages

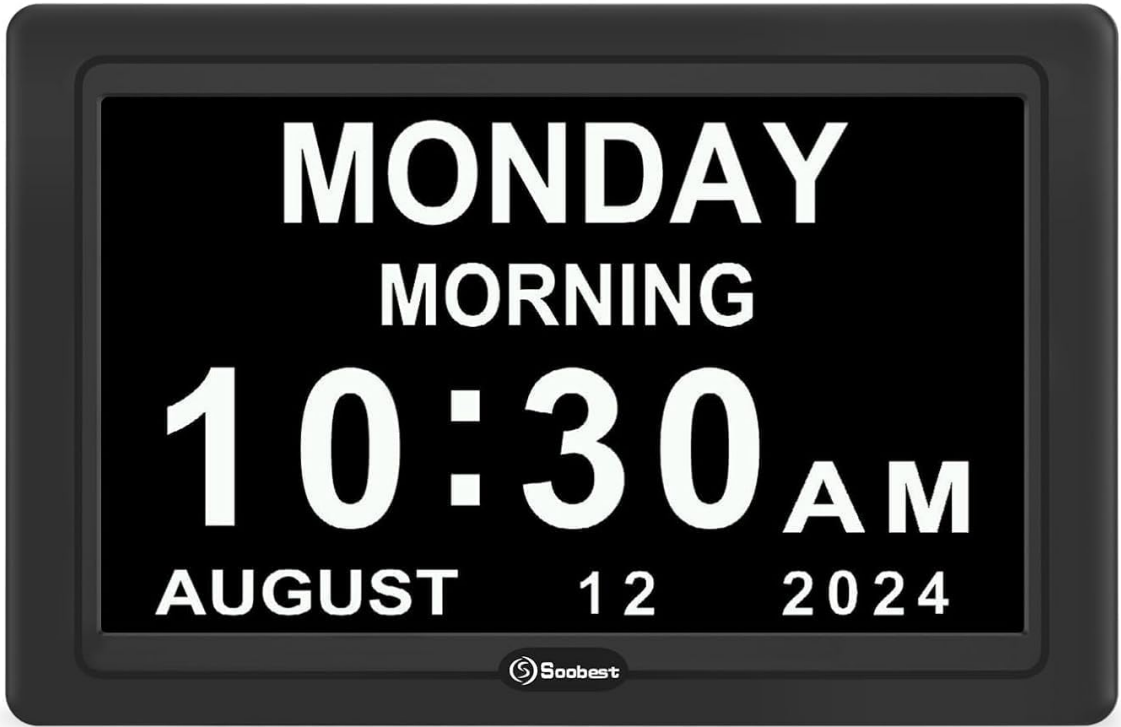

English



Deutsch



Francais



Italiano



Polski



Espanol



Nederlands



Svenska

Image: The clock displaying time and date, with flags indicating support for 8 different languages.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and body of the clock. Avoid abrasive cleaners or solvents that could damage the display or finish.
- **Environment:** Keep the clock in a dry environment, away from direct sunlight, extreme temperatures, and excessive humidity.
- **Power:** Always use the provided power adapter. Disconnect power during electrical storms or if the clock will be unused for an extended period.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock does not turn on.	No power or loose connection.	Ensure the power adapter is securely plugged into both the clock and a working electrical outlet.



Problem	Possible Cause	Solution
Settings are lost after a power outage.	Battery memory function not active or depleted.	The clock has a battery memory function to save settings. If settings are lost, ensure the internal battery is functional (it's included). Re-enter settings if necessary.
Alarm does not sound.	Alarm not enabled or volume too low.	Check alarm settings to ensure it is enabled. Increase the alarm volume (levels 1-10).
Display is too bright or too dim.	Dimmer setting is incorrect.	Adjust the dimmer manually using the button on the back or through the settings menu. Ensure "Auto" dimming is set correctly if desired.

## SPECIFICATIONS

Feature	Detail
Brand	Soobest
Model Number	SO1001
Color	Black with colored icon
Display Type	Large display digits
Screen Size	7 inches (17.8 cm) HD
Resolution	1024 x 480p
Product Dimensions (L x W x H)	18.54 x 3.81 x 12.19 cm
Item Weight	236 g
Material	HD Plastic
Power Source	Corded Electric (Type-C adapter included)
Alarms	Up to 20 sets of alarms
Special Features	Calendar display, Multiple reminder types with icons, Adjustable volume, DST/Auto Dimmer, Battery memory function
Supported Languages	8 languages (English, German, French, Italian, Polish, Spanish, Dutch, Swedish)

## Choose from 2 sizes according to your loved one's vision needs

**12 inch** Recommended for 60+ years old users

**7 inch** Recommended for 50-59 years old users

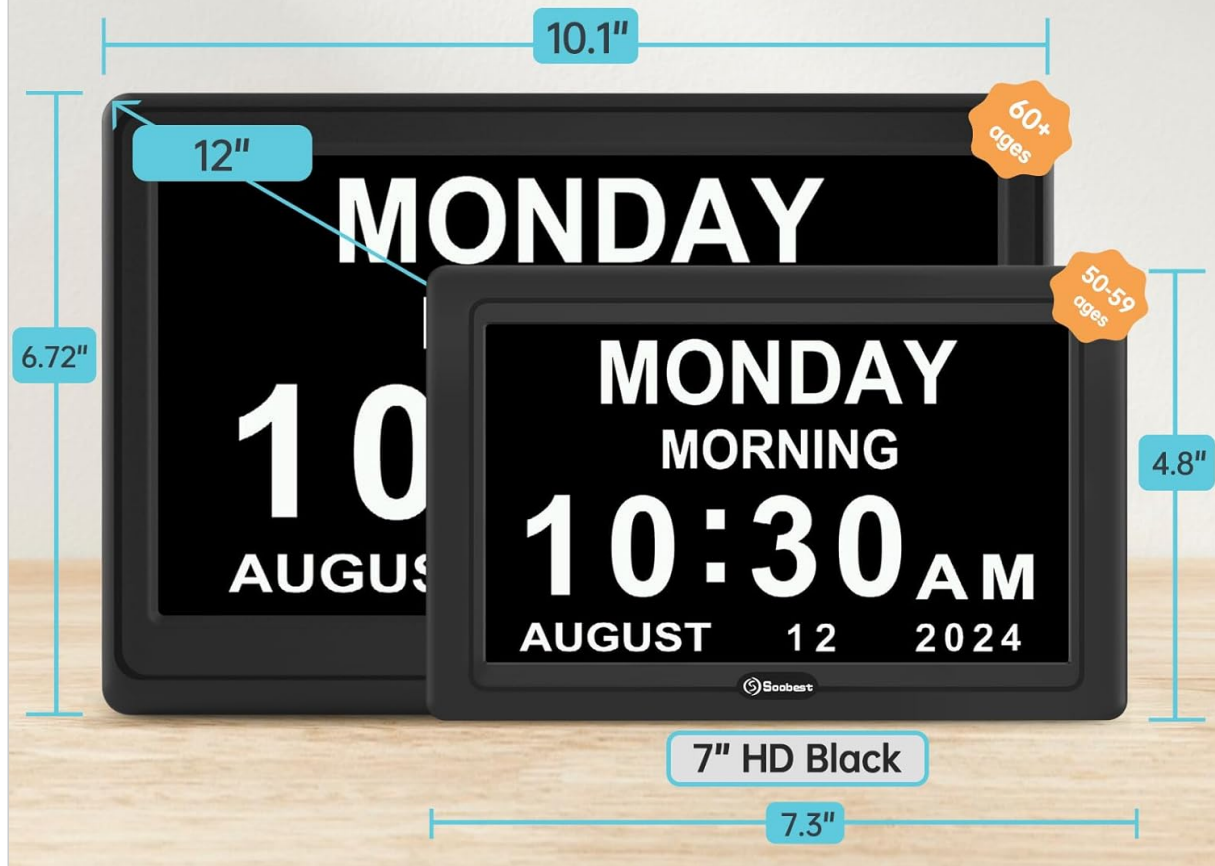 


Image: A visual comparison of the 7-inch and 12-inch models, indicating recommended age groups and dimensions.

### WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact Soobest customer service directly. You can often find support contact details on the manufacturer's official website or through the retailer where the product was purchased.