

MAIMEIMI Universal Motorcycle Digital Speedometer

MAIMEIMI Universal Motorcycle Digital Speedometer Instruction Manual

Model: Universal Motorcycle Digital Speedometer

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your MAIMEIMI Universal Motorcycle Digital Speedometer. Please read this manual thoroughly before use to ensure proper functionality and safety.

2. PRODUCT OVERVIEW

The MAIMEIMI Universal Motorcycle Digital Speedometer is a multi-functional gauge cluster designed for motorcycles. It integrates several essential functions into a single, compact unit, providing clear digital readouts for various parameters.

Key Features:

- **Integrated Display:** Combines speedometer, tachometer, and gear indicator.
- **Comprehensive Data:** Displays oil level, steering indicators, and mileage (ODO/TRIP).
- **Universal Compatibility:** Adjustable for various tire sizes (8-22 inch wheels) and compatible with 2-stroke and 4-stroke motorcycles (1, 2, and 4 cylinders).
- **Waterproof Design:** Constructed from high-quality, rugged ABS material for durability in various weather conditions.
- **Clear LCD Screen:** Provides excellent visibility for data reading day or night.


Package Contents:

- 1 x Digital Speedometer Unit
- 1 x Speed Sensor Cable
- 2 x Magnets



Image 2.1: The MAIMEIMI Universal Motorcycle Digital Speedometer unit with its speed sensor cable and magnets.

Interface display

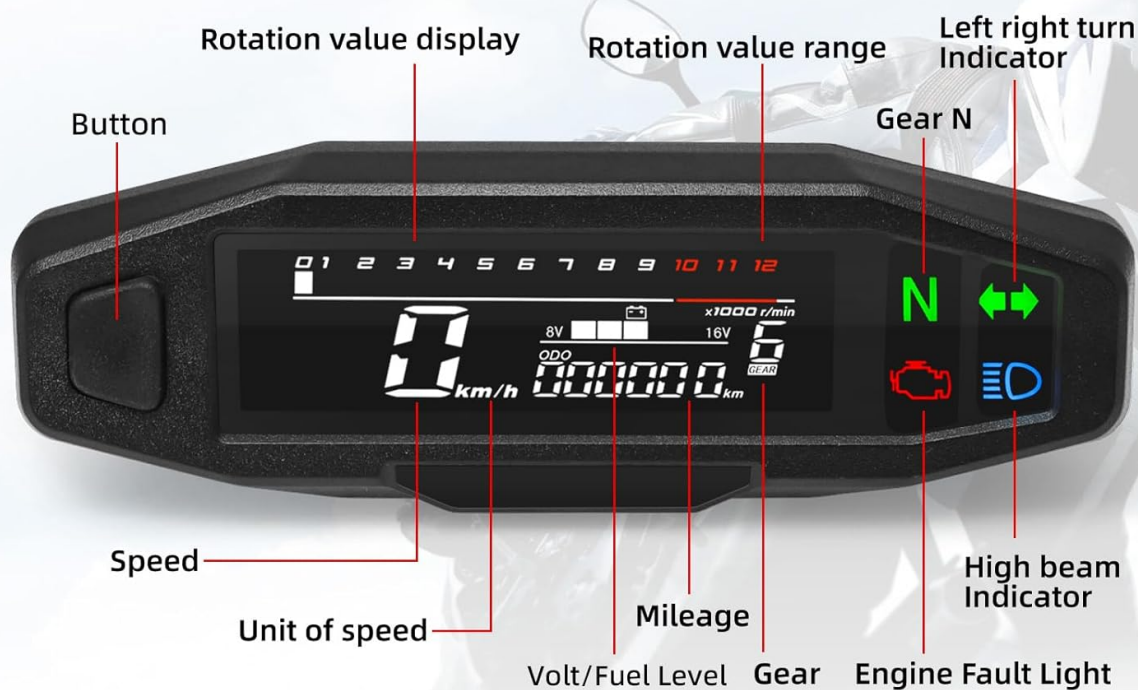

Note: If you find no instructions after receiving the package, please ask us for an electronic version.

Image 2.2: Labeled interface display showing speed, unit, mileage, gear, voltage/fuel, engine fault light, and indicators.

3. SPECIFICATIONS

Product Dimensions	6.33 x 1.4 x 1.81 inches
Item Weight	0.42 Pounds (6.72 ounces)
Material	Metal, Plastic (ABS)
Operating Voltage	9-16V
Wheel Size Compatibility	8-22 inches (adjustable)
Engine Type Compatibility	2-stroke and 4-stroke (1, 2, 4 cylinders)
RPM Functionality	Works with carburetor motors; does not work with Electric Fuel Injection (EFI) engines.

4. SETUP AND INSTALLATION

Careful installation is crucial for the correct operation of the speedometer. It is recommended that installation be performed by a qualified technician if you are unfamiliar with motorcycle electrical systems.

4.1 Wiring Diagram

Refer to the following diagram for proper wiring connections. Ensure all connections are secure and insulated.



Image 4.1: Wiring connections for the speedometer unit and speed sensor.

4.2 Speed Sensor Installation

1. Mount the speed sensor cable securely near the wheel.
2. Attach the two provided magnets to the brake disc, ensuring they are positioned 180 degrees apart. This spacing is critical for accurate speed readings.
3. Ensure the sensor is aligned with the magnets and has a consistent, small gap for reliable detection.

4.3 Initial Power-Up and Wheel Size Adjustment

After wiring, turn on the ignition. The speedometer is adjustable for various wheel sizes (8-22 inches). Refer to the 'Parameter Settings' section for instructions on how to configure the tire circumference.



Image 4.2: Product dimensions for installation planning.



Image 4.3: Examples of compatible motorcycle types.

5. OPERATING INSTRUCTIONS

The speedometer features a single button for most operations and settings.

5.1 Operating Interface

- **Short Press:** Switch between ODO (total mileage) and TRIP (trip mileage).
- **Long Press in ODO Mode:** Switch between metric (km/h) and imperial (mph) units for speed.
- **Long Press in TRIP Mode:** Reset the trip mileage.

5.2 Background Parameter Settings

To access advanced settings:

1. Press and hold the button while turning on the ignition switch. Keep it pressed for 5 seconds.
2. The screen will display "SETUP". Release the button.
3. **Short Press:** Enter the background parameter settings.
4. **Speed Sensor Magnet Number Setting:** The interface "E - 2" will flash (factory setting is 2 magnets). Short press to increase the number by 1 (1 to 9). Long press to save and switch to the next parameter.
5. **Tire Circumference Setting:** The interface will jump to "C - 1902" and flash (factory set tire circumference is 1902 mm). Short press to increase the value. Long press to move the cursor. After setting the fourth digit, long press to switch to the next parameter.
6. **Engine Stroke Setting:** The interface "IP" will flash (factory setting is 1). Short press to switch between 1 - 4.
7. After completing all parameter settings, long press the button to exit the parameter setting interface.

If there is no operation on the parameter setting interface for 20 seconds, it will automatically exit and return to the operating interface.



Image 5.1: Detailed instructions for parameter settings.

6. MAINTENANCE

The MAIMEIMI Digital Speedometer is designed for durability and minimal maintenance.

6.1 Waterproof Design

The unit features a waterproof design, allowing normal operation in rainy conditions. However, avoid prolonged submersion or high-pressure water jets directly on the unit.



Image 6.1: The speedometer's waterproof capability.

6.2 General Care

- Clean the screen and housing with a soft, damp cloth. Avoid abrasive cleaners.
- Regularly check wiring connections for security and signs of wear.

Hub end view

Blue Red 2 Gear	Powder 1 Gear	Yellow White Oil level	Red Speed	Blue White tachometer	Green Red N Gear	Orange Turn left	Light Blue Turn right	Green Negative pole
Green Black 3 Gear	Yellow Red 4 Gear	Brown White 5 Gear	Brown 6 Gear	Yellow 5V output	Blue High beam	Black Positive pole		Black Red EFI

Split end view

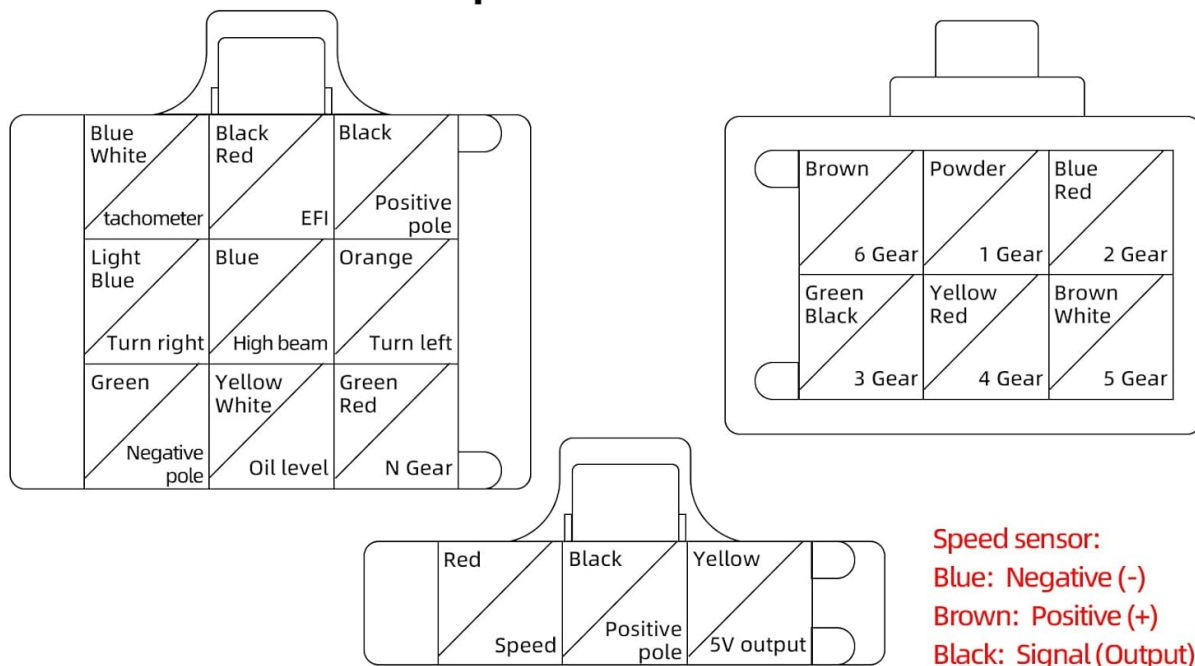


Image 6.2: Display visibility in varying light conditions.

7. TROUBLESHOOTING

7.1 Common Issues

- **RPM not working:** The RPM function is designed for carburetor motors and is not compatible with Electric Fuel Injection (EFI) engines. Verify your engine type.
- **Inaccurate Speed Reading:** Check the speed sensor and magnet placement. Ensure magnets are 180 degrees apart and the sensor gap is consistent. Verify the tire circumference setting in the parameter menu.
- **No Display/Intermittent Power:** Check all wiring connections according to the diagram in Section 4.1. Ensure the operating voltage is within the 9-16V range.

7.2 Reset Procedure

The unit includes a reset function for mileage. Note that once a reset is initiated, it cannot be undone.

1. Press and hold the button while turning on the ignition switch and keep it pressed for 5 seconds.

- 2. The screen will display "SETUP". Release the button.
- 3. **Long Press:** Enter the reset procedure.
- 4. **Short Press:** This will reduce the total mileage by 200 kilometers. The number of resets will increase by 1.
- 5. **Long Press:** Exit the reset procedure.

There are a total of three reset opportunities. If the total mileage is less than 200 kilometers, it will be directly reset. If it exceeds 200 kilometers, each press will reduce it by 200 kilometers.
If there is no action on the setting parameter buttons for 20 seconds, the system will automatically exit.



Image 7.1: Detailed instructions for the reset procedure.




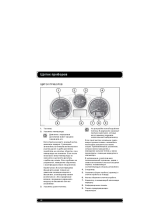

8. WARRANTY AND SUPPORT

For warranty information and technical support, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase.

© 2024 MAIMEIMI. All rights reserved.

Related Documents - Universal Motorcycle Digital Speedometer

[MT0061 MAIMEIMI Motorcycle Speedometer User Manual](#)
User manual for the MAIMEIMI MT0061 LED Digital Motorcycle Speedometer, detailing its features, display indicators, and wiring connections. Compatible with Honda CG125, Fan 125, and Titan 125 models (2000-2013).

 <p>Car Smart Digital Meter P8 User Manual - OBD2+GPS HUD</p>	<p>Car Smart Digital Meter P8 User Manual - OBD2+GPS HUD</p> <p>Comprehensive user manual for the MAIMEIMI P8 Car Smart Digital Meter, featuring OBD2 and GPS functionality. Learn about installation, settings, functions, troubleshooting, and FAQs for this Head-Up Display.</p>
 <p>User Guide for 85mm GPS Speedometer with Tire Pressure Multi-Function Gauge</p>	<p>User Guide for 85mm GPS Speedometer with Tire Pressure Multi-Function Gauge</p> <p>This user guide provides instructions for installing and operating the 85mm GPS Speedometer with Tire Pressure Multi-Function Gauge. It covers parameter settings, wiring diagrams, and important notes for proper usage.</p>
 <p>KAOLALI Motorcycle Speedometer User Guide and Functions</p>	<p>KAOLALI Motorcycle Speedometer User Guide and Functions</p> <p>A comprehensive guide to the KAOLALI Motorcycle GPS Speedometer, detailing its functions, interface indicators, and wiring connections for optimal use.</p>
 <p>Vehicle Instrument Cluster Explained</p>	<p>Vehicle Instrument Cluster Explained</p> <p>A comprehensive guide to understanding the instrument cluster of a vehicle, including the tachometer, temperature gauge, fuel gauge, speedometer, odometer, trip meter, gear indicator, information display, and warning lights.</p>
 <p>Vehicle Instrument Panel Overview and Indicators Explained</p>	<p>Vehicle Instrument Panel Overview and Indicators Explained</p> <p>A comprehensive guide to understanding the instrument panel, gauges, and warning indicators in a vehicle. Learn about the tachometer, speedometer, fuel gauge, temperature gauge, and various warning and information signals.</p>