

[Manuals.plus](#) /

› [WONNIE](#) /

› WONNIE 10.1-Inch WiFi Digital Picture Frame User Manual (Model 102KZ)

WONNIE 102KZ

WONNIE 10.1-Inch WiFi Digital Picture Frame User Manual

Model: 102KZ

Brand: WONNIE

1. INTRODUCTION

Welcome to the WONNIE 10.1-Inch WiFi Digital Picture Frame user manual. This guide provides comprehensive instructions for setting up, operating, and maintaining your digital picture frame. Enjoy sharing and displaying your cherished memories with family and friends, no matter where they are.



The WONNIE 10.1-Inch WiFi Digital Picture Frame, showcasing a family picture.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1 x WONNIE 10.1-Inch WiFi Digital Picture Frame
- 1 x User Manual
- 1 x AC Adapter
- 1 x Stand



3. PRODUCT OVERVIEW AND FEATURES

The WONNIE Digital Picture Frame is designed for ease of use and versatile display of your photos and videos. Key features include:

- **10.1-Inch IPS Touch Screen:** A high-definition 1280x800 resolution display with intuitive touch controls for easy navigation.
- **WiFi Connectivity:** Connects to your home Wi-Fi network for instant photo and video sharing.
- **Uhale App Integration:** Use the dedicated Uhale app (available for iOS and Android) to securely share media from your mobile device or computer.
- **32GB Built-in Memory:** Ample storage for over 100,000 photos, with support for up to a 32GB Micro SD card for expanded capacity.
- **Unlimited User Connections:** Allows multiple users to connect and share photos and videos to the frame.
- **Auto-Rotate Function:** Automatically adjusts the display orientation (landscape or portrait) based on how the frame is positioned.
- **Personalized Wishes:** Send personalized messages and blessings through the Uhale app.

WiFi digital photo frame



WiFi



IPS Touchscre



Built-in 32GB



Unlimited
User Connect



Auto-Rotate



Send Wishes



Support PC
Web Tansfer



Slide Show



Show Caption



Adjustable
Brightness

Visual representation of the frame's core features.

Auto-Rotate Function

place the frame how you like



The auto-rotate function allows flexible placement in portrait or landscape mode.

4. SETUP

4.1 Powering On

1. Connect the AC adapter to the power port on the back of the frame.
2. Plug the AC adapter into a power outlet.
3. The frame will automatically power on. Follow the on-screen prompts for initial setup.

4.2 Connecting to Wi-Fi

1. On the frame's touch screen, navigate to the 'Settings' menu.
2. Select 'Wi-Fi' and choose your desired network from the list.
3. Enter your Wi-Fi password and tap 'Connect'.

WiFi & Uhale App Connection

A digital frame can connect with many users



The frame connects to Wi-Fi and integrates with the Uhale app for seamless photo management.

4.3 Downloading and Pairing the Uhale App

The Uhale app allows you to easily send photos and videos to your frame from anywhere.

1. Download the 'Uhale' app from the App Store (iOS) or Google Play Store (Android). You can scan the QR code provided in the manual or on the frame's screen during setup.
2. Create an account or log in.
3. Follow the in-app instructions to pair your mobile device with your digital picture frame. This typically involves entering a unique code displayed on your frame.

**Share Instantly, Privately, and Securely via
"Uhale" App or PC Web**



Download the Uhale app using the provided QR code or app store links.

5. OPERATING THE FRAME

5.1 Navigating the Touch Screen

The frame features a responsive touch screen for intuitive control. Tap to select options, swipe to navigate through photos, and pinch to zoom (if supported by the software).

Unlimited User Connections

Anyone In The Family Can Send Photos To The Frame




The 10.1-inch HD IPS touchscreen offers easy navigation and interaction.

5.2 Uploading Photos and Videos

You can upload media using the Uhale app or a Micro SD card:

- **Via Uhale App:** Open the app on your smartphone or use the PC web transfer feature. Select the photos/videos you wish to send and choose your frame as the destination. Media will transfer instantly over Wi-Fi.
- **Via Micro SD Card:** Insert a Micro SD card (up to 32GB) containing your media files into the designated slot on the frame. The frame will detect the card, and you can then import files to the internal memory.

Share Special Moments Via APP

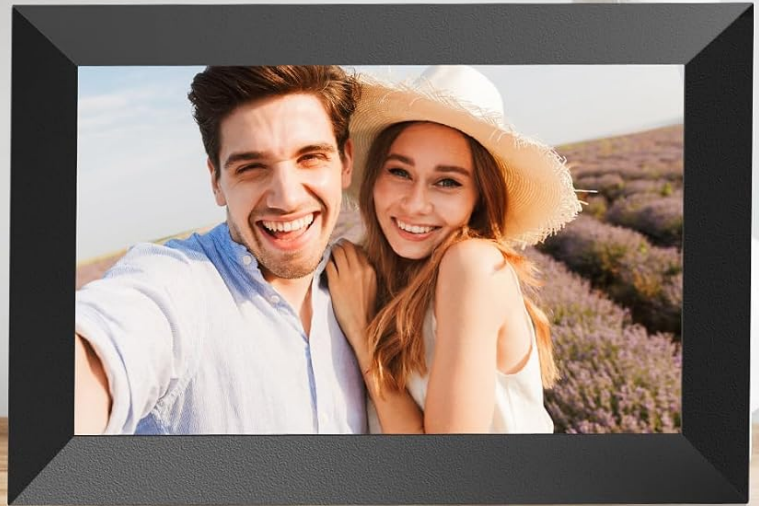

Share special moments instantly via the Uhale app.

10.1" HD IPS Touchscreen

1280x800P HD Display
Easy-Use Touchscreen



Secure and private sharing of photos is possible via the PC web interface.

5.3 Slideshow Settings

Customize your slideshow experience:

- Access 'Slideshow Settings' in the menu.
- Adjust photo display duration, transition effects, and playback order.
- Enable or disable background music for your slideshows.

5.4 Adjustable Brightness

Adjust the screen brightness to suit your environment:

- Go to 'Display Settings' on the frame.
- Use the slider to increase or decrease brightness.

Secure and Private Sharing Photos via PC Web



Adjust the screen brightness for optimal viewing in any lighting condition.

5.5 Sleep Mode

Set a schedule for the frame to automatically enter and exit sleep mode to save energy and avoid disturbance.

- Navigate to 'Sleep Mode' settings.
- Configure the start and end times for sleep mode.



Utilize sleep mode to conserve energy and ensure undisturbed rest.

6. MAINTENANCE

To ensure the longevity and optimal performance of your digital picture frame, follow these maintenance guidelines:

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals or abrasive materials.
- **Cleaning the Frame:** Wipe the frame's exterior with a dry, soft cloth.
- **Avoid Liquids:** Do not spray liquids directly onto the frame or screen.
- **Ventilation:** Ensure the frame has adequate ventilation and is not placed in an enclosed space that could lead to overheating.
- **Storage:** When not in use for extended periods, store the frame in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

If you encounter any issues with your WONNIE Digital Picture Frame, please refer to the following common problems and solutions:

Problem	Solution
Frame does not power on.	Ensure the AC adapter is securely connected to both the frame and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi.	Verify your Wi-Fi password. Ensure the frame is within range of your Wi-Fi router. Restart your router and the frame.
Photos/videos not appearing.	Check if the media files are in a supported format. Ensure successful transfer via the Uhale app or correct insertion of the SD card. Restart the frame.
Touch screen is unresponsive.	Restart the frame. Ensure the screen is clean and free of debris.
Frame is overheating.	Ensure proper ventilation around the frame. Avoid placing it in direct sunlight or enclosed spaces.

If the problem persists after trying these solutions, please contact WONNIE customer support.

8. SPECIFICATIONS

Feature	Detail
Screen Size	10.1 Inches
Resolution	1280*800
Internal Memory	32GB
External Storage	Supports up to 32GB Micro SD Card
Connectivity	WiFi

Feature	Detail
Compatible Devices	Smartphone (via Uhale App)
Product Dimensions	7.2 x 10.5 x 0.99 inches
Item Weight	1.7 pounds
Model Number	102KZ

9. WARRANTY AND SUPPORT

WONNIE offers a **hassle-free replacement service for a full year** from the date of purchase. If you experience any issues with your smart photo frame, our dedicated after-sales team is committed to providing prompt and effective assistance within 24 hours.

Contacting Support

For technical support, warranty claims, or any questions regarding your WONNIE Digital Picture Frame, please refer to the contact information provided in your product packaging or visit the official WONNIE website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D4QSZNP9>

More documents and user manuals: <https://manuals.plus/>