

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Flipo](#) /

› [Flipo Maximus F-MAXI Dual LED Cliplight Instruction Manual](#)

## Flipo F-MAXI

# Flipo Maximus Dual LED Cliplight

Model: F-MAXI

## 1. INTRODUCTION

---

Welcome to your new Flipo Maximus Dual LED Cliplight. This compact and versatile lighting tool is designed for various tasks, offering both a powerful flood light and a focused spotlight. Its magnetic swivel clip provides hands-free convenience, making it an ideal companion for work, emergencies, or everyday use.

## 2. PRODUCT FEATURES

---

- **Dual Illumination:** Provides a 400-lumen wide area task light and a 200-lumen focused flashlight beam.
- **Magnetic Swivel Clip:** Equipped with an articulating pocket clip and integrated magnet for convenient, hands-free attachment to metal surfaces and directional lighting.
- **Durable Construction:** Built with high-quality ABS plastic to withstand daily use.
- **Compact Design:** Measures approximately 7.25" x 1.4" x 1" for easy portability and storage.
- **Battery Powered:** Operates on 3 AAA batteries (included).



Image 1: Key features of the Flipo Maximus Dual LED Cliplight, highlighting the flashlight, work light, magnet, and clip.

### 3. PACKAGE CONTENTS

- 1 x Flipo Maximus Dual LED Cliplight (Model F-MAXI)
- 3 x AAA Alkaline Batteries (included)







Image 2: The Flipo Maximus Dual LED Cliplight in blue.

## 4. SETUP: BATTERY INSTALLATION

---

The Flipo Maximus requires 3 AAA batteries for operation. Follow these steps to install or replace batteries:

1. Locate the battery compartment cover on the back of the cliplight.
2. Open the battery compartment.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

*Note: Batteries are typically included and may be pre-installed. Remove any protective tabs if present before first use. Always replace all 3 batteries at the same time with new ones.*

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Power On/Off and Mode Selection

The Flipo Maximus features a single power button to cycle through its lighting modes:

1. **First Press:** Activates the 400-lumen wide area work light.
2. **Second Press:** Switches to the 200-lumen focused flashlight beam.
3. **Third Press:** Turns the cliplight off.

### 5.2 Using the Magnetic Swivel Clip

The integrated magnetic swivel clip offers versatile hands-free operation:

- **Attachment:** Securely attach the cliplight to any ferrous metal surface using the integrated magnet.
- **Directional Lighting:** The clip swivels, allowing you to adjust the angle of the light beam to illuminate your work area precisely.
- **Pocket Carry:** Use the clip to secure the cliplight to a pocket, belt, or backpack for easy access.



Image 3: Demonstrating the focused spotlight function of the cliplight.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the features and uses of the Flipo Maximus LED Flashlight. This video shows the dual light modes, magnetic clip, and various applications in dark environments.

## 6. MAINTENANCE

---

- **Cleaning:** Wipe the cliplight with a soft, damp cloth. Do not use abrasive cleaners, harsh chemicals, or solvents.
- **Battery Replacement:** Replace all 3 AAA batteries simultaneously when the light dims or stops functioning. Do not mix old and new batteries or different battery types.
- **Storage:** If storing the cliplight for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place away from direct sunlight.

*Caution: This product is not water resistant. Avoid exposure to water or high humidity to prevent damage.*

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Light does not turn on.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Light is dim.	Low battery power.	Replace batteries with new AAA batteries.
Light turns off unexpectedly.	Loose battery connection or low battery.	Check battery compartment for secure fit. Replace batteries if needed.

## 8. SPECIFICATIONS

---

**Model:** F-MAXI

**Brand:** Flipo

**Light Source:** Dual COB LED

**Work Light Brightness:** 400 Lumens

**Spotlight Brightness:** 200 Lumens

**Power Source:** 3 x AAA Alkaline Batteries (included)

**Material:** ABS Plastic, Metal

**Product Dimensions:** 7.25"D x 1"W x 1.4"H (approximate)

**Item Weight:** 3.84 ounces

**Special Features:** Rotating Magnetic Clip

**Water Resistance:** Not Water Resistant

**UPC:** 768824453166

## 9. WARRANTY AND SUPPORT

---

For warranty information or technical support, please contact Flipo Group LTD directly. Refer to the product packaging or the official Flipo website for the most current contact details and warranty terms. Keep your purchase receipt as proof of purchase.

*This product is from a small business brand. Your support is appreciated.*