

Sokany SK-5119

Sokany SK-5119 Single Burner Electric Hot Plate Instruction Manual

Model: SK-5119

1. INTRODUCTION

Thank you for choosing the Sokany SK-5119 Single Burner Electric Hot Plate. This compact and versatile appliance is designed to provide efficient cooking for various needs. Please read this manual carefully before using the hot plate to ensure safe operation and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the hot plate is placed on a stable, heat-resistant surface.
- Provide adequate ventilation around the appliance during use.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Sokany SK-5119 Electric Hot Plate.



Figure 1: Detailed view of the Sokany SK-5119 Electric Hot Plate, highlighting its main components. These include the power indicator light, the non-slip heating plate, the anti-corrosion coated body, and the temperature control knob.

- **Heating Plate:** The primary cooking surface, designed for efficient heat transfer. It features a non-slip surface.
- **Temperature Control Knob:** Used to adjust the heat settings (Low, Med, High).
- **Power Indicator Light:** Illuminates when the hot plate is powered on and heating.
- **Body:** The main housing of the appliance, featuring an anti-corrosion coating.

- **Stable Feet:** Ensures the hot plate remains steady during use.

4. SETUP

Before first use, follow these steps:

1. **Unpack:** Carefully remove the hot plate and all packaging materials. Retain packaging for storage or disposal.
2. **Placement:** Place the hot plate on a flat, stable, heat-resistant surface. Ensure there is sufficient space around the appliance for proper ventilation (at least 10-15 cm from walls or other objects).
3. **Initial Cleaning:** Wipe the heating plate and body with a damp cloth to remove any dust or manufacturing residues. Ensure the appliance is completely dry before plugging it in.
4. **First Use Burn-off:** For the first use, turn the hot plate to the highest setting for approximately 5-10 minutes without any cookware. This will burn off any protective coatings and may produce a slight odor or smoke, which is normal. Ensure the area is well-ventilated during this process.

5. OPERATING INSTRUCTIONS

Using your Sokany SK-5119 Electric Hot Plate is straightforward:

1. **Connect Power:** Plug the hot plate into a standard electrical outlet.
2. **Place Cookware:** Place your desired cookware (pot, pan, kettle) directly onto the heating plate. Ensure the cookware has a flat bottom for optimal contact and heat transfer. The hot plate is compatible with various types of cookware.
3. **Select Heat Setting:** Turn the temperature control knob to your desired heat setting: **LOW**, **MED**, or **HIGH**. The power indicator light will illuminate, indicating that the hot plate is heating.
4. **Cooking:** Allow the hot plate to heat up. The 500W power provides efficient and even heating for boiling, simmering, or grilling.
5. **After Use:** Once cooking is complete, turn the temperature control knob to the 'OFF' position. The power indicator light will turn off.
6. **Unplug and Cool:** Unplug the hot plate from the electrical outlet and allow it to cool completely before cleaning or storing. The heating plate will remain hot for some time after use.



Figure 2: The Sokany SK-5119 Electric Hot Plate in use, demonstrating its suitability for heating a teapot. Its compact design makes it ideal for various settings.

سخان بلاط متعدد الإستخدامات

تصميم أنيق وعصري، يضيف إلى مطبخك قطعة من الجمال والعمليّة



Figure 3: The versatile Sokany SK-5119 Electric Hot Plate heating a glass pot, showcasing its ability to handle various types of cookware for different cooking tasks.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your hot plate:

- **Always Unplug:** Before cleaning, ensure the hot plate is unplugged from the power outlet and has cooled down completely.
- **Wipe Surfaces:** Use a soft, damp cloth to wipe the heating plate and the exterior body. For stubborn stains, a mild detergent can be used, but ensure no liquid enters the internal components.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or metal brushes, as these can damage the non-stick coating and the appliance's finish.
- **Do Not Immerse:** Never immerse the hot plate, cord, or plug in water or any other liquid.
- **Storage:** Store the hot plate in a dry place when not in use. Ensure it is clean and dry before storing.

7. TROUBLESHOOTING

If you encounter issues with your hot plate, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hot plate does not heat up.	Not plugged in; power outlet not working; temperature knob set to 'OFF'.	Ensure the hot plate is securely plugged into a working outlet. Check the circuit breaker. Turn the temperature knob to a heat setting (LOW, MED, HIGH).
Food cooks unevenly.	Cookware not flat-bottomed; incorrect heat setting.	Use cookware with a flat bottom for even heat distribution. Adjust the heat setting as needed for your recipe.
Smoke or odor during first use.	Protective coating burning off.	This is normal for the first use. Ensure good ventilation. If smoke/odor persists after initial burn-off, discontinue use and contact support.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	SK-5119
Power	500 Watts
Material	Metal
Color	Black
Product Dimensions (D x W x H)	15 x 10 x 15 cm
Item Weight	20 g
Control Type	Knob
Heating Settings	3 (Low, Med, High)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Specific warranty terms and conditions may vary by region and retailer.

