



Manuals.plus /

- › Kichler /
- › KICHLER Crosby 6-Light Chandelier Instruction Manual, Model 44013NI

Kichler 44013NI

KICHLER Crosby 6-Light Chandelier Instruction Manual

Model: 44013NI

Brand: Kichler

1. PRODUCT OVERVIEW

The KICHLER Crosby 6-Light Chandelier offers a versatile and modern lighting solution. Its streamlined design, featuring clean lines and a modest form, integrates well into contemporary environments. The clear glass shades are designed for easy cleaning and provide ambient lighting to the entire room.



Image 1: Front view of the KICHLER Crosby 6-Light Chandelier in Brushed Nickel with clear glass shades.

2. WHAT'S INCLUDED IN THE BOX

Please verify that all components are present before beginning installation:

- 1 x Fixture Body
- 1 x Canopy
- 1 x Mounting Strap
- 1 x 36-Inch Chain
- 6 x Clear Glass Shades

Note: Bulbs are not included and must be purchased separately.



Image 2: Assembled view of the KICHLER Crosby Chandelier, showing all main components.

3. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before installation. Failure to do so may result in electric shock, fire, or other injuries. Keep these instructions for future reference.

- **Always disconnect power** at the main circuit breaker or fuse box before installing, servicing, or cleaning the fixture.
- Consult a qualified electrician if you are unsure about the installation process or have any electrical questions.
- Ensure all electrical connections comply with local codes and ordinances.
- Do not exceed the maximum wattage specified for the bulbs (60W incandescent per socket).
- Handle glass components with care to prevent breakage.
- This fixture is designed for **indoor use only**. Do not expose to water or excessive moisture.
- Wear safety glasses and gloves during installation.

4. INSTALLATION GUIDE

Tools Required:

- Phillips screwdriver
- Flathead screwdriver

- Wire strippers
- Pliers
- Electrical tape
- Ladder

Step-by-Step Installation:

1. **Prepare for Installation:** Turn off power at the circuit breaker or fuse box to the outlet box where the fixture will be installed. Ensure the mounting surface is structurally sound to support the fixture's weight (approximately 11.2 lbs).
2. **Attach Mounting Strap:** Secure the mounting strap to the outlet box using the screws provided. Ensure it is firmly attached.
3. **Determine Chain Length:** Hold the fixture in place to estimate the desired hanging height. Open a link on the 36-inch chain using pliers, remove any excess chain, and then securely close the link.
4. **Connect Wires:** Carefully connect the fixture's wires to the supply wires from the outlet box.
 - Connect the black (live) wire from the fixture to the black (live) wire from the outlet box.
 - Connect the white (neutral) wire from the fixture to the white (neutral) wire from the outlet box.
 - Connect the bare copper or green (ground) wire from the fixture to the bare copper or green (ground) wire from the outlet box.

Use wire nuts to secure all connections and wrap them with electrical tape for added safety.

5. **Secure Canopy:** Carefully slide the canopy up to the ceiling, covering the outlet box and wiring. Secure it to the mounting strap using the provided hardware.
6. **Install Glass Shades:** Gently place each of the six clear glass shades onto its designated socket holder on the fixture. Ensure they are seated properly.
7. **Install Bulbs:** Insert six E12 base bulbs (not included) into the sockets. Do not exceed 60 watts per bulb. For LED bulbs, refer to the bulb manufacturer's specifications.
8. **Restore Power:** Once installation is complete and all connections are secure, turn on power at the circuit breaker.





Image 3: Detail of the chandelier's chain and canopy, illustrating components for ceiling mounting.

5. OPERATING YOUR CHANDELIER

The KICHLER Crosby Chandelier operates using a standard wall switch connected to the fixture's electrical circuit.

Dimmable Feature: This fixture is designed to be dimmable when used with a compatible dimmer switch (sold separately). If using LED bulbs, ensure that both the bulbs and the dimmer switch are rated for LED dimming to prevent flickering or damage. Consult the LED bulb manufacturer's specifications for dimming compatibility.

6. CARE AND MAINTENANCE

Proper care will ensure the longevity and appearance of your chandelier.

- **Cleaning:** Always disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes, as they may damage the brushed nickel finish. The clear glass shades are removable for easier cleaning; they can be gently washed with mild soap and water, then dried thoroughly before reinstallation.
- **Bulb Replacement:** Ensure power is off and bulbs have cooled completely before attempting to replace them. Use only E12 base bulbs, up to 60W incandescent, or equivalent LED bulbs.

7. TROUBLESHOOTING

If you encounter issues with your chandelier, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Light does not turn on	Power is off at circuit breaker or switch	Check circuit breaker and wall switch; ensure power is on.
Light does not turn on	Loose wire connection	Turn off power, then check wiring connections at the fixture and outlet box. Secure any loose connections.
Light does not turn on	Faulty bulb	Replace bulb with a new, working one.
Flickering lights	Loose bulb	Turn off power, then tighten all bulbs securely into their sockets.
Flickering lights	Incompatible dimmer switch or LED bulbs	Ensure both the dimmer and LED bulbs (if used) are compatible with each other. Consult bulb manufacturer specifications.
Glass shades are difficult to clean	Accumulation of dust or debris	Remove shades, wash gently with mild soap and water, rinse, and dry thoroughly before reattaching.

8. PRODUCT SPECIFICATIONS

Detailed specifications for the KICHLER Crosby 6-Light Chandelier, Model 44013NI:

Brand	Kichler
Model Number	44013NI
Dimensions (L x W x H)	32.25"L x 32.25"W x 21.75"H
Overall Height Adjustable To	61.25 inches (with chain)
Canopy Width	5 inches
Item Weight	11.2 Pounds
Color	Brushed Nickel
Material	Metal, Glass
Number of Light Sources	6
Bulb Base	E12
Max Wattage per Bulb	60W (Incandescent)
Voltage	120 Volts
Dimmable	Yes (with compatible dimmer switch)
Indoor/Outdoor Usage	Indoor
Installation Type	Ceiling Mount
Required Assembly	Yes
UPC	783927048958

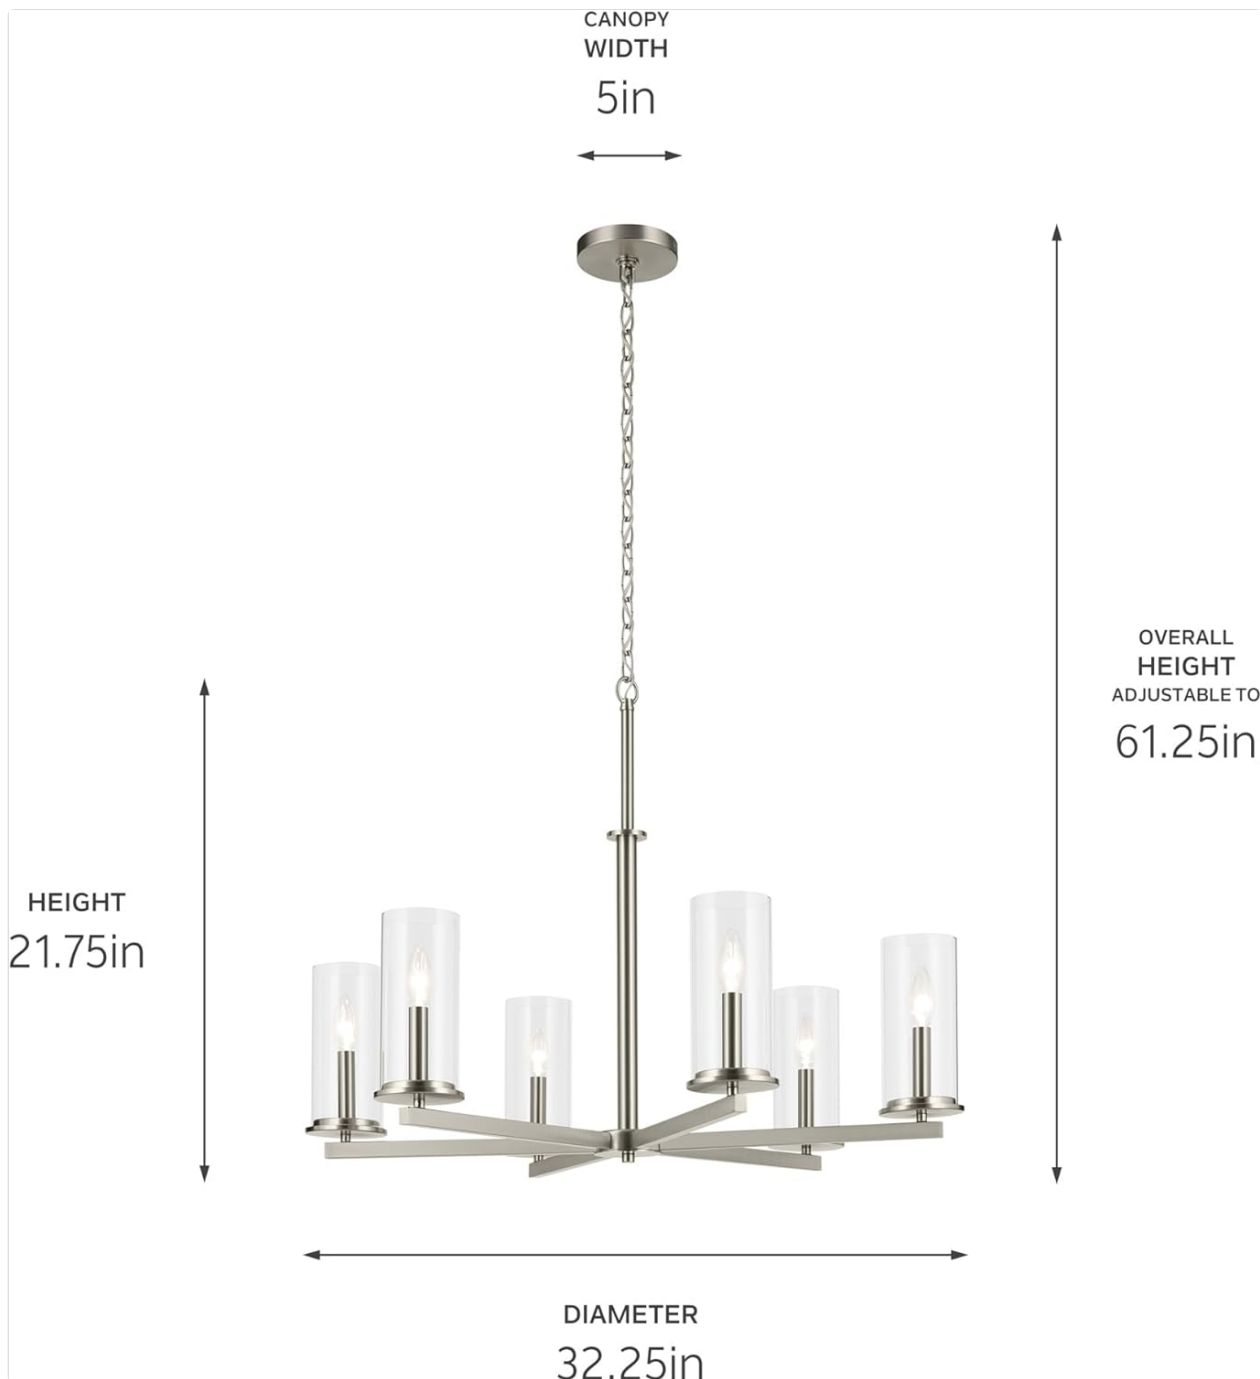


Image 4: Diagram showing the dimensions of the KICHLER Crosby Chandelier.

9. WARRANTY AND CUSTOMER SUPPORT

Warranty: This Kichler product is covered by a 1-year limited manufacturer's warranty. Please retain your proof of purchase for warranty claims. For complete warranty terms and conditions, refer to the documentation included with your product or visit the official Kichler website.

For technical assistance, replacement parts, or further inquiries, please visit the official Kichler website or contact their customer support directly. You can also find more information and products at the Kichler Store on Amazon:

Visit the Kichler Store on Amazon

10. ABOUT KICHLER LIGHTING

Learn more about Kichler Lighting and their commitment to quality and design.

Your browser does not support the video tag.

Video 1: Kichler Brand Story. This video provides an overview of the Kichler brand and their philosophy on lighting design.