

Generic5kg83axpv1

# Generic 4K Digital Camera User Manual

Model: Generic5kg83axpv1

[Introduction](#)   [Setup](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Generic 4K Digital Camera, Model Generic5kg83axpv1. Please read this manual thoroughly before operating the camera and retain it for future reference.



Figure 1: Front view of the Generic 4K Digital Camera.

## 2. SETUP

### 2.1. Battery Installation and Charging

The camera is equipped with a 3600mAh high-capacity battery. Ensure the battery is fully charged before first use.

1. Locate the battery compartment cover on the camera.

2. Open the cover and insert the battery according to the polarity indicators.
3. Close the battery compartment cover securely.
4. Connect the camera to a power source using the provided charging cable. The charging indicator light will illuminate.
5. Charging supports various methods, including power bank, car charger, and standard wall charger.

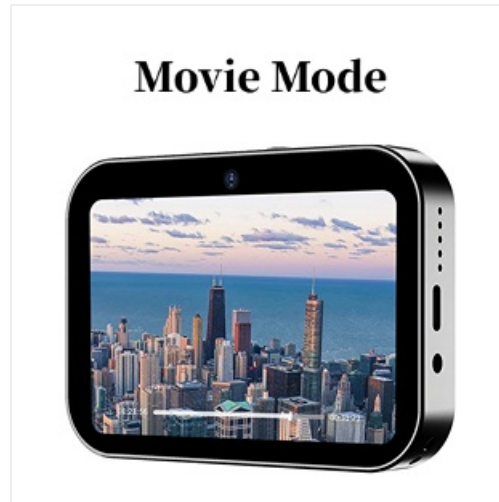


Figure 2: The camera features a 3600mAh battery for extended use.

## 2.2. Memory Card Installation

A memory card (not included) is required to store photos and videos.

1. Locate the memory card slot, typically near the battery compartment.
2. Insert the memory card with the contacts facing the correct direction until it clicks into place.
3. To remove, gently press the card until it ejects.

## 2.3. Initial Power On

Press and hold the power button until the screen illuminates. Follow any on-screen prompts for initial setup, such as language and date/time settings.

## 3. OPERATION

---

### 3.1. Basic Photography and Video Recording

The camera features a multi-lens system including CCD prime, CMOS telephoto, and CCD wide-angle lenses for high-quality imaging.

# Touch Screen Digital Camera



Figure 3: The camera captures delicate and colorful images with its advanced lens system.

1. **Power On:** Press the power button.
2. **Mode Selection:** Use the mode dial or on-screen menu to select between photo and video modes.
3. **Focus:** The camera supports manual and auto focus. For auto focus, half-press the shutter button to focus, then fully press to capture.
4. **Zoom:** Utilize the 16x optical zoom for distant subjects.
5. **Capture:** Press the shutter button to take a photo or start/stop video recording.

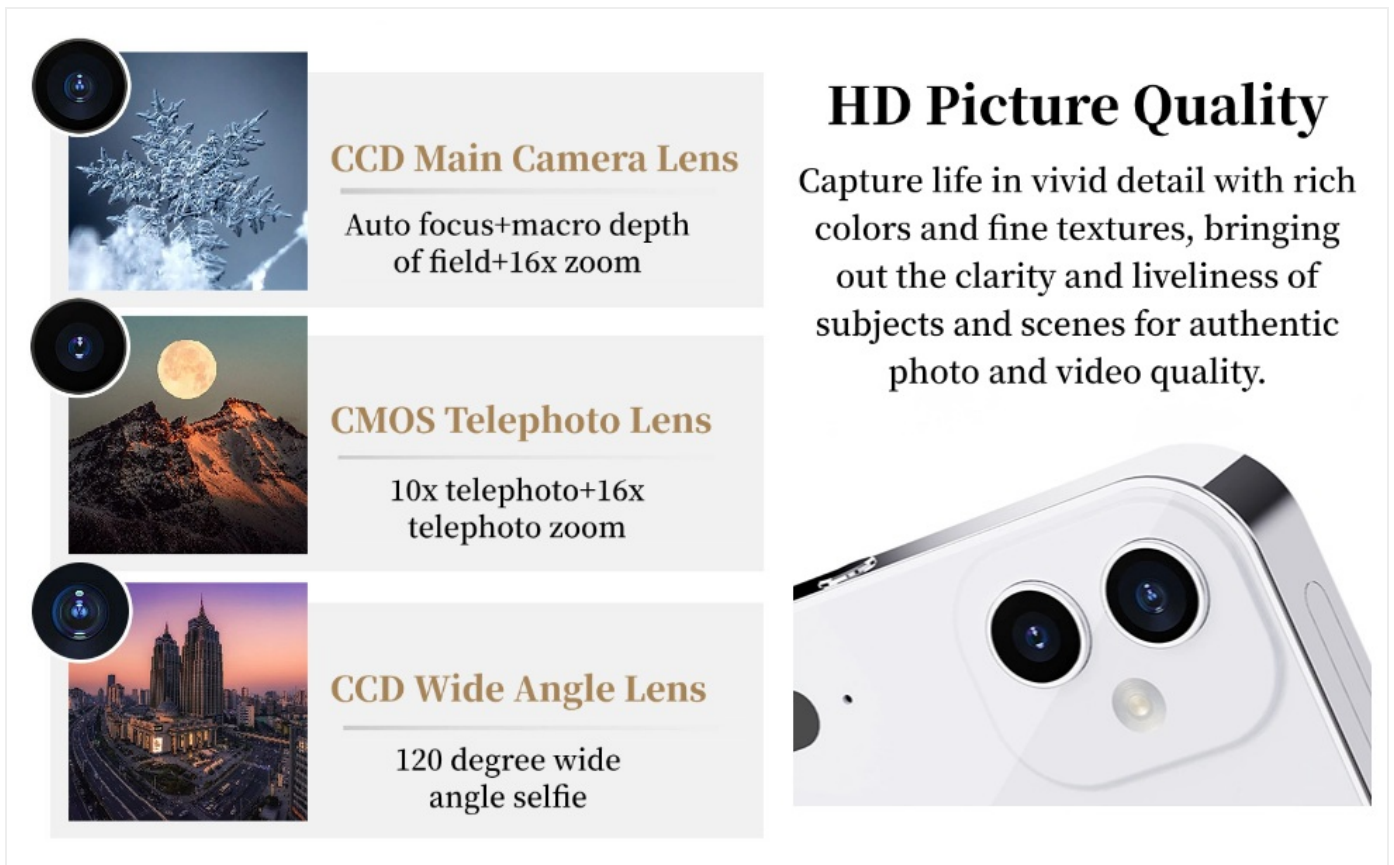


Figure 4: Detailed view of the camera's triple lens system and 16x optical zoom capability.

### 3.2. 3-Inch OLED Display and Filters

The camera features a 3-inch organic light-emitting diode (OLED) display. You can slide the screen left and right to access and apply various filters to your photos and videos.

### 3.3. Lock Screen Shooting

The camera supports lock screen shooting. By clicking the lock screen button, you can continue to take photos, record sound, and capture video even when the screen is off. This feature helps conserve battery life.

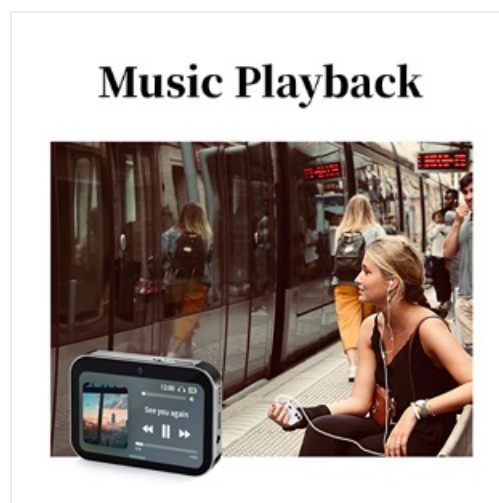


Figure 5: The camera can operate and capture content even with the screen off, saving power.

### 3.4. Night Vision Triple Lens

The camera includes a night vision triple lens system to improve lighting in low-light conditions, allowing for clear and bright captures even in challenging environments.



Figure 6: Infrared Night Vision Light and Flash enhance visibility in dark settings.

### 3.5. OTG Transmission

The camera supports data transfer via OTG (On-The-Go) connection. This allows you to connect the camera directly to a smartphone or other compatible device to view, save, and share photos and videos quickly.



Figure 7: OTG Transmission enables quick data transfer to mobile phones, laptops, and computers.

### 3.6. Live Streaming Function

The camera can be used simultaneously with mobile phones as a multi-camera setup or as a PC camera for live streaming purposes.



Figure 8: The camera supports live streaming when connected to a mobile phone or PC.

## 4. MAINTENANCE

---

### 4.1. Cleaning the Camera and Lens

Regular cleaning helps maintain optimal performance and image quality.

- Use a soft, lint-free cloth to wipe the camera body.
- For the lens, use a specialized lens cleaning cloth and lens cleaning solution. Avoid touching the lens surface with your fingers.

- Do not use harsh chemicals or abrasive materials.

## 4.2. Battery Care

- Avoid fully discharging the battery frequently.
- Store the camera with a partially charged battery if not used for extended periods.
- Do not expose the battery to extreme temperatures.

## 4.3. Storage

When not in use, store the camera in a cool, dry place, away from direct sunlight and excessive dust. Use a camera bag for protection during transport.

## 5. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Camera does not power on.	Battery is discharged or incorrectly installed.	Charge the battery fully. Reinstall the battery correctly.
Cannot take photos/videos.	Memory card is full, not inserted, or corrupted.	Insert a memory card. Delete unnecessary files. Format the card (this will erase all data).
Images are blurry.	Lens is dirty, camera shake, or incorrect focus.	Clean the lens. Hold the camera steady or use a tripod. Ensure proper focus.
OTG transmission not working.	Incorrect cable, incompatible device, or software issue.	Ensure you are using a compatible OTG cable. Check device compatibility. Restart both devices.

## 6. SPECIFICATIONS

---

Feature	Detail
Model Name	Generic5kg83axpv1
Photo Sensor Resolution	36 MP
Maximum Image Size	64 MP
Video Resolution	3840 x 2160 pixels (4K)
Frame Rate	30 FPS
Optical Zoom	16 x
Image Stabilization	Digital
Sensor Type	CMOS
Display Type	OLED
Screen Size	3 Inches
Battery Capacity	3600 Milliamp Hours
Lens Type	Wide Angle, Telephoto (Triple Lens System)
Focus Type	Manual and Auto Focus
Connectivity Technology	Ethernet (for live streaming/PC connection), OTG
Supported File Format	JPEG
Special Feature	Adjustable, Lock Screen Shooting, Night Vision

## 7. WARRANTY & SUPPORT

---

### 7.1. Warranty Information

Please refer to the warranty card included with your product for specific warranty terms and conditions. The warranty typically covers manufacturing defects for a specified period from the date of purchase.

### 7.2. Customer Support

For technical assistance, troubleshooting, or service inquiries, please contact your retailer or the manufacturer's customer support. Contact information can usually be found on the product packaging or the manufacturer's official website.

