

## Schneider Allur Flex Expert SCVC7ITEFB

# Schneider Allur Flex Expert Cordless Stick Vacuum Cleaner SCVC7ITEFB User Manual

Model: SCVC7ITEFB

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the Schneider Allur Flex Expert Cordless Stick Vacuum Cleaner. Retain this manual for future reference.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filter in place.
- Turn off the appliance before connecting or disconnecting the motorized brush or other accessories.
- Use only the charger supplied by the manufacturer to recharge the battery.
- Do not handle the charger or appliance with wet hands.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

## 2. PRODUCT OVERVIEW

---

The Schneider Allur Flex Expert is a powerful and versatile cordless stick vacuum cleaner designed for efficient cleaning of various surfaces.

### Key Features:

- **Digital Motor:** 270 W for strong suction (80AW).
- **Detachable Lithium Battery:** 22.5 V, 2200 mAh, providing up to 40 minutes of runtime.
- **LED Motorized Brush:** Enhances visibility and effectively cleans various floor types.
- **Digital LCD Screen:** Displays speed levels and battery status.
- **Dust Tank Capacity:** 600 ml.
- **Suction Speeds:** 2 levels for different cleaning needs.
- **HEPA 10 Filter:** Captures fine dust and allergens for cleaner air.

### Included Components:

- Main Vacuum Unit
- Extension Tube
- Motorized LED Brush Head
- Crevice Tool
- 2-in-1 Brush Tool
- Wall Mount / Docking Station
- Charger
- User Manual
- HEPA Filter (pre-installed)



Image: Included accessories for the Schneider Allur Flex Expert vacuum cleaner.

## 3. SETUP AND ASSEMBLY

---

### 3.1 Initial Charging

Before first use, fully charge the battery. The battery can be charged while attached to the main unit or separately. Connect the charger to a power outlet and to the charging port on the battery. The LCD screen will indicate charging status. A full charge takes approximately 4 hours.

### 3.2 Assembling the Vacuum Cleaner

1. **Attach the Extension Tube:** Insert the extension tube into the main vacuum unit until it clicks securely into place.
2. **Attach the Motorized Brush Head:** Connect the motorized LED brush head to the other end of the extension tube, ensuring it clicks into place.
3. **Handheld Configuration:** For handheld use, attach desired accessories (crevice tool or 2-in-1 brush) directly to the main vacuum unit.



Image: The vacuum cleaner assembled in stick mode for floor cleaning.



Image: The vacuum cleaner configured for handheld use with an attachment.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Powering On/Off and Suction Control

- Press the power button on the main unit to turn the vacuum cleaner on. It will start in the normal suction mode.
- Press the mode button (usually indicated by a fan icon) to switch between the 2 available suction levels

(Normal and Max). The LCD screen will display the current mode.

- Press the power button again to turn the vacuum cleaner off.

## 4.2 Using Attachments

- **Motorized LED Brush:** Ideal for carpets, rugs, and hard floors. The LED lights illuminate dust and debris.
- **Crevice Tool:** Use for narrow gaps, corners, and edges.
- **2-in-1 Brush Tool:** Can be used as a dusting brush for delicate surfaces or as an upholstery tool for furniture.



Image: Detail of the vacuum's control panel and dustbin.



Image: Using the crevice tool for detailed cleaning.

## 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 5.1 Emptying the Dustbin

- Ensure the vacuum is turned off.
- Press the dustbin release button (refer to diagram in physical manual) to detach the dustbin from the main unit.
- Hold the dustbin over a trash can and press the bottom release latch to open the dustbin flap and empty its contents.
- Close the flap and reattach the dustbin to the main unit until it clicks.

### 5.2 Cleaning the HEPA Filter

- The HEPA filter should be cleaned regularly, ideally after every 3-5 uses, or when suction power decreases.
- Twist and pull out the filter assembly from the dustbin.
- Tap the filter gently over a trash can to remove loose dust.
- For a deeper clean, rinse the filter under cold running water. Ensure it is completely dry (24-48 hours) before reinserting it into the vacuum. Do not use detergents or hot water.
- Replace the HEPA filter every 6-12 months, depending on usage.

### 5.3 Cleaning the Motorized Brush

- Turn off the vacuum and detach the brush head.

- Locate the brush roll release tab/lock on the side of the brush head. Unlock it and remove the brush roll.
- Use scissors or a brush to remove any tangled hair, threads, or debris from the brush roll.
- Clean the brush housing and reinsert the brush roll, securing it with the lock.

## 6. TROUBLESHOOTING

If you encounter any issues, please refer to the following troubleshooting guide before contacting customer support.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and correctly inserted.
Low suction power	Dustbin is full. Filter is clogged. Obstruction in nozzle/tube.	Empty dustbin. Clean or replace HEPA filter. Check for and remove any blockages.
Motorized brush not spinning	Brush roll is jammed. Brush head is not properly attached.	Clean hair/debris from brush roll. Ensure brush head is securely connected.
Short runtime	Battery not fully charged. Using Max power mode continuously. Battery degradation.	Fully charge battery. Use Normal mode for longer runtime. Contact support if battery life significantly decreases.

## 7. SPECIFICATIONS

Feature	Specification
Brand	Schneider
Model Name	Allur Flex Expert
Model Number	SCVC7ITEFB
Special Feature	HEPA Filtration
Filter Type	HEPA 10
Surface Recommendation	Carpet, Hardwood
Power Source	Battery Powered
Included Components	Brushes, Filter, User Manual
Cordless?	Yes

Feature	Specification
Recommended Uses	Carpeted Floors, Hardwood Floors
Form Factor	Stick
Color	Blue
Number of Speeds	2
Portable	Yes
Number of Power Levels	2
Indoor/Outdoor Use	Indoor
Battery Life	40 minutes
Runtime	40 minutes
ASIN	B0D4RF2YG2

## 8. WARRANTY AND SUPPORT

---

This product is covered by a warranty provided by our sellers. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact your retailer.

Should you require assistance, have questions, or need to report an issue with your Schneider Allur Flex Expert vacuum cleaner, please contact our responsive customer service team. Contact details can typically be found on the product packaging or the retailer's website.

Please have your model number (SCVC7ITEFB) and proof of purchase ready when contacting support.