

VCK TF004B

VCK TF004B 13-inch Oscillating Bladeless Desk Fan

INSTRUCTION MANUAL

Introduction

Thank you for choosing the VCK TF004B 13-inch Oscillating Bladeless Desk Fan. This manual provides essential information for the safe and efficient operation of your new fan. Please read it thoroughly before use and retain it for future reference.

The VCK TF004B is designed to provide personal cooling with its compact size, bladeless design, and 80-degree oscillation feature. It offers three speed settings for customized airflow.

Important Safety Instructions

- Read all instructions before using this fan.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect the fan, turn controls to the OFF position, then remove the plug from the outlet.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
- Do not block air intakes or exhaust in any manner. Do not use on any soft surface, like a bed, where openings may become blocked.
- This fan is intended for indoor use only.
- Always place the fan on a stable, flat surface to prevent tipping.
- The fan features a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Package Contents

- VCK TF004B Desk Fan
- Power Cord (integrated)

Product Overview

The VCK TF004B is a compact tower fan with a bladeless design, making it suitable for various indoor environments. Its intuitive top-mounted control knob allows for easy adjustment of settings.



Figure 1: VCK TF004B Desk Fan with airflow and oscillation indicator.



Figure 2: Top-mounted control knob for fan operation.

The fan features a convenient handle integrated into its design for easy portability.

Setup

1. Unpack the fan and all accessories from the packaging.
2. Place the fan on a firm, level surface. Ensure there are no obstructions around the fan's air intake or exhaust.
3. Plug the power cord into a standard AC electrical outlet. The fan is equipped with a polarized plug for safety.

Figure 3: Illustration of the polarized plug for safe connection.

Operating Instructions

The VCK TF004B fan is controlled via a single rotary knob located on the top of the unit. This knob combines power, speed, and oscillation functions.

1. **Power On/Off:** Rotate the knob clockwise from the 'OFF' position to turn the fan on. Continue rotating to select a speed. Rotate counter-clockwise back to 'OFF' to power down.
2. **Adjusting Fan Speed:** The fan offers three speed settings. Rotate the knob clockwise to increase the fan speed (Low, Medium, High).
3. **Activating Oscillation:** To enable the 80-degree oscillation, rotate the knob to the designated oscillation settings (Low, Medium, High with oscillation). The fan will then sweep air across an 80-degree arc.

Surrounded By Coolness

Every square inch of your room is cooled by the 80° wide-angle swing.



Figure 4: 80-degree oscillation for wide area cooling.

Your browser does not support the video tag.

Video 1: Demonstration of the VCK TF004B fan's operation and features.

Maintenance

Regular cleaning and proper storage will help maintain the performance and longevity of your fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or immerse the fan in water. For dust accumulation in the air intake/exhaust, use a soft brush or vacuum cleaner with a brush attachment.
- **Storage:** When not in use, store the fan in a cool, dry place, preferably in its original packaging, away from direct sunlight and extreme temperatures.

Troubleshooting

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; power outlet not active; control knob in 'OFF' position.	Ensure the fan is securely plugged into a working outlet. Check the circuit breaker. Rotate the control knob to a speed setting.
Weak or no airflow.	Low speed setting; air intake/exhaust blocked.	Increase the fan speed using the control knob. Ensure air intake and exhaust vents are clear of obstructions.
Fan is noisy.	Unstable surface; internal obstruction.	Place the fan on a stable, flat surface. Check for any foreign objects inside the fan (after unplugging).

Specifications

Feature	Detail
Brand	VCK
Model Name	TF004B
Electric Fan Design	Table Fan (Tower Fan)
Color	Black
Power Source	AC
Product Dimensions	3.1"D x 3.2"W x 13"H
Item Weight	2.97 pounds
Special Features	Bladeless, Oscillating (80°), Portable
Control Method	Touch (Rotary Knob)
Number of Power Levels	3
Indoor/Outdoor Usage	Indoor

Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact VCK customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question