

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Midea](#) /

> [Midea 5L Digital Air Fryer Instruction Manual MF-CN40D2](#)

Midea MF-CN40D2

Midea 5L Digital Air Fryer Instruction Manual

Model: MF-CN40D2

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Midea 5L Digital Air Fryer. Please read all instructions carefully before first use and retain this manual for future reference.



Image: Front view of the Midea 5L Digital Air Fryer, showcasing its sleek black design and digital control panel.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.
- This appliance is equipped with overheat protection. If the internal temperature exceeds a safe limit, the appliance will automatically shut off.



Image: Visual representation of key features including Overheat Protection, Non-Stick Coating, and up to 90% Less Oil usage.

PRODUCT OVERVIEW

The Midea 5L Digital Air Fryer is designed for versatile cooking with minimal oil. Familiarize yourself with its main components:

- **Main Unit:** Houses the heating element and fan.
- **Digital Control Panel:** For setting temperature, time, and selecting presets.
- **Basket Handle:** For safely pulling out the cooking basket.
- **Cooking Basket:** The primary container for food, featuring a non-stick coating.
- **Crisper Plate/Basket:** Inserted into the cooking basket to allow air circulation around food for even cooking.
- **Air Outlet:** Located at the rear of the appliance for hot air exhaust.



Image: The air fryer with its cooking basket partially removed, revealing a batch of fries inside. This illustrates the basket's design and capacity.

SETUP AND FIRST USE

- Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
- Cleaning:** Wash the cooking basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.
- Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space around the back and sides of the appliance for proper ventilation.
- Power Connection:** Plug the power cord into a grounded wall outlet.
- Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure good ventilation during this process.

OPERATING INSTRUCTIONS

Digital Control Panel

The digital display and touch controls allow for precise temperature and time adjustments, along with convenient preset programs.

PRECISE TIMER AND TEMPERATURE CONTROL

Adjust a precise temperature up to 200°C and timer up to 60 minutes for different gourmet delicacies you love.



Image: A close-up view of the air fryer's digital control panel, showing the temperature display and various touch buttons for operation.

- **Power Button:** Turns the appliance on/off and starts/pauses cooking.
- **Temperature Control (+/-):** Adjusts the cooking temperature (80°C to 200°C).
- **Time Control (+/-):** Adjusts the cooking time (up to 60 minutes).
- **Preset Menu Button:** Cycles through 8 pre-programmed cooking settings.
- **Start/Pause Button:** Initiates or temporarily stops the cooking cycle.

Basic Operation

1. **Prepare Food:** Place ingredients into the cooking basket. Do not overfill.
2. **Insert Basket:** Slide the cooking basket firmly back into the main unit.
3. **Power On:** Press the Power button. The display will illuminate.
4. **Set Temperature and Time:** Use the Temperature (+/-) and Time (+/-) buttons to set your desired cooking parameters.
5. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
6. **Shaking/Flipping (Optional):** For even cooking, some recipes require shaking or flipping ingredients halfway through. The air fryer features an **Auto Pause** function: when the basket is removed, the cooking cycle pauses automatically and resumes when the basket is reinserted.
7. **Cooking Completion:** The air fryer will beep when the cooking time is complete. Carefully pull out the basket and transfer food to a serving dish.



**Adjustable Temp.
Upto 200°C**



**Upto 60
Minute Timer**



**Auto Pause On
Basket Removal**



Image: Icons illustrating the adjustable temperature feature (up to 200°C), the 60-minute timer, and the auto-pause function when the basket is removed.

Using Preset Settings

The Midea 5L Digital Air Fryer includes 8 convenient preset programs for common foods:



DEFROST
11-12 MIN 80°C



FRENCH FRIES
14-16 MIN 200°C



CUPCAKES
8-10 MIN 170°C



REHEAT
8-12 MIN 200°C



CHICKEN WING
13-16 MIN 200°C



SEA FOOD
8-12 MIN 180°C



FISH
11-15 MIN 190°C



MEAT
13-14 MIN 200°C

8 Preset Settings

Choose your own favorite settings and cook with just a single touch



Image: A visual guide to the 8 preset settings, each with an icon and suggested cooking times/temperatures for items such as French fries, cupcakes, chicken wings, and seafood.

- 1. Prepare Food:** Place ingredients into the cooking basket.
- 2. Insert Basket:** Slide the cooking basket firmly back into the main unit.
- 3. Power On:** Press the Power button.
- 4. Select Preset:** Press the Preset Menu button repeatedly to cycle through the available programs (e.g., French Fries, Cupcake, Chicken, Seafood, Fish, Meat, Defrost, Reheat). The display will show the default time and temperature for the selected preset.
- 5. Adjust (Optional):** You can adjust the time and temperature of a preset using the respective (+/-) buttons if needed.
- 6. Start Cooking:** Press the Start/Pause button to begin.

Cooking Functions

The Midea Air Fryer supports various cooking methods:



Image: Icons representing the versatile cooking functions of the air fryer: Fry, Bake, Grill, and Roast.

- Fry:** Achieves crispy results with significantly less oil.
- Bake:** Suitable for cakes, muffins, and other baked goods.
- Grill:** Ideal for meats and vegetables, providing a grilled texture.
- Roast:** Perfect for roasting poultry, vegetables, or smaller cuts of meat.
- Defrost:** Thaws frozen food efficiently.
- Reheat:** Warms up leftovers quickly.

The appliance utilizes **Dual Cyclone Rapid Air Technology** for even heat distribution, ensuring consistent cooking results.



Image: A cutaway diagram of the air fryer showing the 360° air flow heating, illustrating the Dual Cyclone Rapid Air Technology for powerful and even heating.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your air fryer. Always unplug the appliance and allow it to cool completely before cleaning.

1. Cleaning the Basket and Crisper Plate:

- The cooking basket and crisper plate have a non-stick coating. Wash them with hot water, dish soap, and a non-abrasive sponge.
- For stubborn food residue, soak the basket and plate in hot water with some dish soap for about 10 minutes before cleaning.
- Do not use metal utensils or abrasive cleaning materials, as these can damage the non-stick coating.
- The basket and crisper plate are **not dishwasher safe**.

- 2. Cleaning the Interior:** Wipe the interior of the appliance with a damp cloth and mild detergent. Do not immerse the main unit in water.
- 3. Cleaning the Exterior:** Wipe the exterior with a damp cloth.
- 4. Cleaning the Heating Element:** Use a cleaning brush to remove any food residue from the heating element.

TROUBLESHOOTING

If you encounter issues with your Midea Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working; basket not inserted correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the cooking basket is fully inserted.
Food is not cooked evenly.	Basket is overcrowded; food not shaken/flipped.	Do not overfill the basket. Shake or flip ingredients halfway through cooking.
White smoke comes from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, absorb excess oil before cooking.
Food is not crispy.	Too much moisture in food; not enough oil (for some recipes); temperature too low.	Pat food dry before cooking. Lightly brush or spray with oil if desired. Increase temperature or cooking time slightly.
Appliance suddenly stops during operation.	Overheat protection activated; basket removed.	Unplug and allow to cool for 30 minutes before restarting. Ensure basket is fully inserted.

SPECIFICATIONS

Model Number	MF-CN40D2
Capacity	5 Litres
Power	1500W
Voltage	230V
Control Method	Touch Control (Digital Display)
Temperature Range	80°C - 200°C
Timer Range	Up to 60 minutes
Special Features	Automatic Shut-Off, Programmable, Temperature Control, Timer, Overheat Protection, Auto Pause, Non-Stick Coating, Rapid Air Technology
Product Dimensions (D x W x H)	38D x 31.6W x 27.5H Centimeters
Item Weight	4 kg
Material	Plastic, Aluminium (Outer Material)
Color	Black



Image: A diagram illustrating the physical dimensions of the Midea Air Fryer: 380mm (height), 316mm (width), and 275mm (depth).

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact Midea customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.


Manufacturer: GUANGDONG MIDEA CONSUMER ELECTRIC LTD, FOSHAN, GUANGDONG P.R.CHINA

Importer: Midea India Private Limited, Unit 517-522, 5th Floor, BPTP Park Centra, Sector-30, Gurugram-122001, Haryana
For further assistance, visit the official Midea website or contact their customer support helpline.

© 2024 Midea. All rights reserved.

Related Documents - MF-CN40D2

<p>Midea Air Fryer MF-CN35C2 Instruction Manual This manual provides instructions for operating the Midea Air Fryer model MF-CN35C2, including important safeguards, product components, electrical parameters, and usage guidelines.</p>	
<p>Midea MAF-TN40D Air Fryer User Manual Comprehensive user manual for the Midea MAF-TN40D air fryer, covering safety instructions, technical specifications, operation, cleaning, troubleshooting, and warranty information. Model: MIDEA-MF-TN40D2 (MAF-TN40D)-0501.</p>	
<p>Midea MF-CN35B Air Fryer Instruction Manual This document provides comprehensive instructions for the Midea MF-CN35B Air Fryer, including important safety guidelines, product components, electrical specifications, operating procedures, and maintenance advice.</p>	

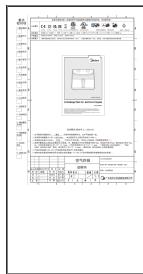	<p>Руководство по эксплуатации Midea MAF-TN45WK Аэрогриль</p> <p>Полное руководство пользователя для аэрогриля Midea MAF-TN45WK. Содержит инструкции по безопасности, эксплуатации, очистке и устранению неисправностей.</p>
	<p>Midea MF-TN40D2 Air Fryer User Manual</p> <p>Comprehensive user manual for the Midea MF-TN40D2 4L Air Fryer, covering safety instructions, operation, cleaning, troubleshooting, specifications, and disposal information.</p>
	<p>Midea MF-TN40D2 Air Fryer User Manual</p> <p>User manual for the Midea MF-TN40D2 Air Fryer, providing safety instructions, specifications, operation guidance, cleaning and maintenance tips, and troubleshooting.</p>

Documents - Midea – MF-CN40D2



[\[pdf\] User Manual](#)

User Manual Midea Φρυγαλός Αέρος MF CN40D2 FG Europe UM Gr fgeurope gr 2023 07 |||

INNERCHEF SERIE **MF-CN40D2** : , , , , 01 Midea . EL 0 1 0 2 0 5 0 6 0 7 1 2 1 3 , 1 4 1 5 1 6 0 1 . EL

lang:en score:52 filesize: 1.21 M page_count: 20 document date: 2023-03-13




[\[pdf\] User Manual Instructions Diagram](#)

user manual MAD40F8APK midea content dam aem uk air fryer mad40f8apk |||

1 2 3 4 5 6 1. A 000000 000000 5mm 5mm 5mm 5mm 7mm ETLCUSC US ULC US 22 PAP A GS ... 40410 H ----- 2024-04

lang:en score:32 filesize: 4.91 M page_count: 21 document date: 2024-08-14

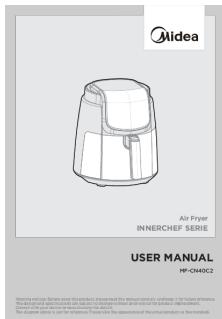

[Midea MF-CN40C2 Air Fryer User Manual: Operation, Safety, and Maintenance](#)

Comprehensive user manual for the Midea MF-CN40C2 Air Fryer (INNERCHEF SERIE). Learn about safety instructions, product spe

lang:en score:27 filesize: 11.01 M page_count: 68 document date: 2025-04-01



[\[pdf\]](#) User Manual Specifications Diagram

Lire la notice Test avis friteuse sans huile Midea 4L petite marque qui prend de l'envol Comparatif des meilleures friteuses et cuissons A1Mi4ROFkxL m media am: Air Fryer INNERCHEF SERIE USER MANUAL MF-CN40D2 Warning notices: Before using this product, please read this manual car lang:es **score:24** filesize: 1.48 M page_count: 20 document date: 2023-06-07



[\[pdf\]](#) User Manual Specifications Diagram

16161000A21976 MIDEA MF CN40D2 CN40C2 0501 C10FjASZ9WLm media amazon images | C10FjASZ9WL |||

Air Fryer INNERCHEF SERIE USER MANUAL MF-CN40C2 Warning notices: Before using this product, please read this manual car lang:de **score:24** filesize: 5.64 M page_count: 19 document date: 2023-01-05



[\[pdf\]](#) User Manual

16161000A25981 MIDEA MF CN40D2 0501 Інструкція з експлуатації BrainMF CN40E Напруга 220 240 В ~ Частота 50 60 Гц Цей посібник створено кс MF-CN40E : . . . , Midea Midea, 0 1 lang:i-klingon **score:24** filesize: 6.67 M page_count: 20 document date: 2024-09-19



[\[pdf\]](#)

16161000A25981 MIDEA MF CN40D2 0501 mf cn40c i citrus world files |||

MF-CN40E : . . . , Midea Midea, 0 1 lang:i-klingon **score:23** filesize: 6.67 M page_count: 20 document date: 2024-09-19



[\[pdf\]](#) User Manual Quick Start Guide Instructions Troubleshooting Guide Specifications Guide Warranty Diagram

16161000A21976 MIDEA MF CN40D2 CN40C2 0501 Bedienungsanleitung Garantiekarte Heißluftfritteuse ALDI ONLINESHOP 860ebe761728406767c028f815c2 bWFzdGVyfGtYWdlc3w4NTc5MTQ5GFwcGxpY2F0aW9uL3BkZnxhRGM1TDJnMlpOHhNaEyTmpRME1qSTBNREF6TUM4NE5qQmxZbVUzTmpFM01qZzBNR |||

Air Fryer INNERCHEF SERIE USER MANUAL MF-CN40C2 Warning notices: Before using this product, please read this manual car lang:en **score:22** filesize: 8.18 M page_count: 68 document date: 2024-11-05



[\[pdf\]](#) Catalog

Jamara Full Catalogue KENWOOD BLENDER 2L 1000W STEEL BLACK BLM45 Home 2025 drive google file d 10Xbgb7i7u6Njg53xFDGw3O17RWLzW view i TV AEON TV 50 UHD SMART BLACK 50A1 SKU: J048100003 NEXUS TV/FHD/NXTV43 SKU: J173100002 NEXUS TV/UH ... : J15 lang:i-klingon score:15 filesize: 4.19 M page_count: 66 document date: 2025-01-27



[pdf]

Скачать инструкцию Аэрогриль Midea MF CN40D2 в Алматы цены купить интернет магазине Sulpak отзывы описание file 0 318 68 jPDSof object pscloud io
...

12

lang::i-klingon score:14 filesize: 7.5 M page_count: 22 document date: 0000-00-00



[\[pdf\]](#)

16161000A26128 MIDEA MF CN40D2 MAF 1040 0401 midearussia ru 26 mag 2025 — Page 1 2 01 3 02 4 03 5 04 6 7

lang:i-klingon score:11 filesize: 8.15 M page_count: 24 document date: 2024-12-04