

1 Hora AMZ-BOC242N

1 Hora Portable Bluetooth Speaker AMZ-BOC242N User Manual

Comprehensive instructions for your 1 Hora Portable Bluetooth Speaker with RGB Lighting and TWS Dual Pairing.

1. INTRODUCTION

Thank you for choosing the 1 Hora Portable Bluetooth Speaker, model AMZ-BOC242N. This speaker combines powerful 10W stereo sound with dynamic RGB lighting, offering an immersive audio-visual experience. Its compact design and 2400mAh battery make it ideal for both indoor and outdoor use. This manual provides detailed instructions to help you get the most out of your device.



Figure 1: The 1 Hora Portable Bluetooth Speaker, showcasing its cylindrical design and vibrant RGB lighting.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x 1 Hora Portable Bluetooth Speaker (AMZ-BOC242N)

- 1 x USB Type-C Charging Cable
- 1 x 3.5mm Audio Cable (AUX)
- 1 x Quick Start Guide
- 1 x Warranty Card

Your browser does not support the video tag.

Video 1: Unboxing and overview of the 1 Hora Portable Bluetooth Speaker, showing the speaker and included accessories.

3. PRODUCT FEATURES

- **Powerful Audio:** Equipped with 10W stereo speakers for deep bass, detailed mids, and clear highs.
- **Dynamic RGB Lighting:** Features multiple multicolor light effects that synchronize with music, adjustable via a dedicated button.
- **True Wireless Stereo (TWS):** Connect two speakers wirelessly for an enhanced, immersive stereo sound experience.
- **Extended Playtime:** Built-in 2400mAh battery provides up to 8 hours of continuous playback at 80% volume.
- **Versatile Connectivity:** Supports Bluetooth 5.1, USB, TF card, FM radio, and AUX input.
- **Intuitive Control Panel:** Easy-to-use buttons for music control, volume adjustment, and mode switching.
- **Durable Design:** Features a resistant metallic mesh, dust-proof interface, and anti-slip silicone base.
- **Portable:** Compact size (Ø72.4*155.9mm) and lightweight (495g) for easy transport.

Panel Portátil



Figure 2: The intuitive control panel located on top of the speaker, showing buttons for light mode, power, play/pause, previous/volume down, and next/volume up.



Malla Metálica Resistente



Interfaz a Prueba de Polvo



Silicona Antideslizante

Figure 3: Close-up images highlighting the speaker's metallic mesh, dust-proof interface, and anti-slip silicone base, demonstrating its robust construction.

4. SETUP AND CHARGING

4.1 Initial Charge

Before first use, fully charge the speaker. Connect the provided USB Type-C cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show charging status (refer to the Quick Start Guide for specific light behavior). A full charge typically takes approximately 4 hours.

4.2 Powering On/Off

Press and hold the **Power button**  on the control panel for 2-3 seconds to turn the speaker ON or OFF.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing light.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "AMZ-BOC242N" from the list.
4. Once connected, the speaker will emit an audible confirmation, and the light will stop flashing.

5.2 True Wireless Stereo (TWS) Pairing

To achieve a true stereo sound experience, you can pair two 1 Hora AMZ-BOC242N speakers together:

1. Ensure both speakers are turned ON and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the **Play/Pause button** . The speaker will enter TWS pairing mode.
3. The two speakers will automatically connect to each other. You will hear a confirmation tone once paired.
4. Now, connect your device to the primary speaker via Bluetooth as described in section 5.1. Both speakers will play audio in stereo.

Your browser does not support the video tag.

Video 2: Demonstration of TWS pairing functionality, showing two speakers connecting wirelessly for stereo sound.

5.3 RGB Light Modes

Press the **Light Mode button**  on the control panel to cycle through different RGB lighting effects. To turn off the lights, press and hold the Light Mode button for 2-3 seconds.



Figure 4: The speaker illuminated with dynamic RGB lights, creating an immersive visual experience.

5.4 Playback Controls

- **Play/Pause:** Press the **Play/Pause button** (🔊) to play or pause music.
- **Volume Up:** Short press the **Volume + button** (🔊) to increase volume.
- **Volume Down:** Short press the **Volume - button** (🔊) to decrease volume.
- **Next Track:** Long press the **Volume + button** (🔊) to skip to the next track.
- **Previous Track:** Long press the **Volume - button** (🔊) to go to the previous track.

5.5 Input Modes (USB, TF, AUX, FM)

The speaker supports multiple input sources. Briefly press the **Power button** (🔊) to cycle through the available modes: Bluetooth, USB, TF (MicroSD) card, FM radio, and AUX.

- **USB/TF Card:** Insert a USB flash drive or a TF (MicroSD) card into the corresponding port on the speaker. The speaker will automatically switch to USB/TF mode and begin playing audio files (MP3, WAV).
- **AUX Input:** Connect an external audio device using the provided 3.5mm audio cable to the AUX port. The speaker

will switch to AUX mode.

- **FM Radio:** In FM mode, the speaker will automatically scan and save available radio stations. Use the Volume +/- buttons to navigate between stations.



Figure 5: The rear panel of the speaker, illustrating the various input ports including USB, TF card slot, and AUX input.

6. MAINTENANCE

- Keep the speaker away from extreme temperatures, direct sunlight, and moisture.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Ensure the dust-proof cover for the ports is properly sealed when not in use to protect against dust and splashes.
- Store the speaker in a cool, dry place when not in use for extended periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker is already connected to another device; Bluetooth is off on your device; speaker is out of range.	Ensure no other device is connected. Turn off and on Bluetooth on your device. Move speaker closer to your device (within 10 meters).
No sound.	Volume is too low; incorrect input mode selected; device not playing.	Increase volume on both speaker and connected device. Switch to the correct input mode. Ensure audio is playing on your device.
TWS pairing fails.	Speakers are too far apart; one or both speakers are connected to another device.	Ensure speakers are close to each other. Disconnect both speakers from any other Bluetooth devices before initiating TWS pairing.
RGB lights not working.	Lights are turned off; a specific light mode is selected.	Press the Light Mode button to cycle through modes. If off, press and hold the Light Mode button to reactivate.

8. SPECIFICATIONS

Feature	Specification
Model Name	AMZ-BOC242N
Output Power	10 Watts
Battery Capacity	2400mAh (Lithium Ion)
Playback Time	Up to 8 hours (at 80% volume)
Charging Time	Approx. 4 hours
Bluetooth Version	5.1
Wireless Range	Up to 10 meters
Frequency Response	120 KHz
Signal-to-Noise Ratio	85 dB
Impedance	4 Ohms
Input Voltage	5 Volts
Dimensions (D x W x H)	7.2 x 7.2 x 15.6 cm
Weight	495 Grams
Material	Acrylonitrile Butadiene Styrene (ABS), Metallic
Connectivity Technology	Bluetooth, AUX, USB, TF Card, FM Radio

Feature	Specification
Special Features	High-resolution audio, LED light, Integrated microphone, Portable, USB port

9. WARRANTY AND SUPPORT

The 1 Hora Portable Bluetooth Speaker comes with a limited warranty. For specific warranty details, please refer to the included Warranty Card.

For customer support, including technical assistance or replacement inquiries, please contact 1 Hora customer service. We offer:

- **365-Day Replacement:** For eligible product issues.
- **24-Hour Customer Service:** Dedicated support to assist you.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question