

[Manuals.plus](#) /

› [Citizen](#) /

› Citizen Tsuyosa Collection NJ0152-51X Automatic Analog Watch User Manual

Citizen NJ0152-51X

Citizen Tsuyosa Collection NJ0152-51X Automatic Analog Watch User Manual

Model: NJ0152-51X

INTRODUCTION

Thank you for choosing a Citizen Tsuyosa Collection automatic analog watch. This manual provides essential information for the proper use, care, and maintenance of your timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch. For additional support, please visit the official Citizen website.

PRODUCT OVERVIEW

The Citizen Tsuyosa Collection NJ0152-51X is an automatic analog watch featuring a stainless steel case and band, a green dial, and a sapphire crystal. It is designed for daily wear with a focus on reliability and classic aesthetics.



Front view of the Citizen Tsuyosa NJ0152-51X watch, showcasing its green dial, gold-tone stainless steel case, and integrated bracelet.



Side profile of the Citizen Tsuyosa NJ0152-51X, highlighting the watch's case thickness and the position of the crown.



Rear view of the Citizen Tsuyosa NJ0152-51X, displaying the transparent case back that reveals the automatic mechanical movement.



A Citizen Tsuyosa watch in low light, demonstrating the luminescence of its hands and hour markers for improved visibility.



Detailed close-up of the automatic mechanical movement visible through the exhibition case back of a Citizen Tsuyosa watch.

SETUP

1. Initial Winding

Your Citizen Tsuyosa watch is powered by an automatic mechanical movement. If the watch has stopped, it requires an initial manual wind to start. To do this:

1. Ensure the crown is in position 0 (fully pushed in).
2. Rotate the crown clockwise approximately 30-40 times. This will build up sufficient power reserve to start the watch.
3. Once started, the watch will continue to wind itself through the motion of your arm while worn.

2. Setting the Time and Date

To set the time and date on your watch:

1. **Pull the crown out to position 2**(the outermost position). The second hand will stop.
2. Rotate the crown to set the hour and minute hands. To avoid confusion between AM and PM for the date change, advance the hands past 12 o'clock. If the date changes, you are in the AM hours.
3. **Push the crown in to position 1** (middle position).
4. Rotate the crown to set the date. Turn it until the correct date appears. Avoid setting the date between 9 PM and 3 AM, as this can damage the movement. If the current time falls within this period, first adjust the time outside this window, set the date, then reset the time.
5. **Pull the crown out to position 2** again.
6. Set the exact time. Synchronize with a reliable time source.
7. **Push the crown back to position 0** (fully pushed in) to start the watch and ensure water resistance.

3. Bracelet Adjustment

The stainless steel bracelet can be adjusted to fit your wrist. This typically involves removing or adding links. It is recommended to have this adjustment performed by a qualified watchmaker or an authorized Citizen service center to prevent damage to the bracelet or clasp.

OPERATING INSTRUCTIONS

Automatic Movement

Your watch is equipped with an automatic mechanical movement. This means it is powered by the natural motion of your wrist. When worn regularly (approximately 8-10 hours a day), the oscillating weight inside the watch winds the mainspring, providing power. If the watch is not worn for an extended period, the power reserve will deplete, and the watch will stop. Simply manually wind it as described in the "Initial Winding" section or wear it to restart.

Date Display

The watch features a date display at the 3 o'clock position. The date automatically advances once every 24 hours. If the date needs adjustment (e.g., after a month with fewer than 31 days), refer to the "Setting the Time and Date" section.

Water Resistance (5 Bar)

This watch is water resistant to 5 bar (50 meters). This rating means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is **not suitable** for swimming, showering, or diving. Always ensure the crown is fully pushed in to maintain water resistance. Avoid operating the crown while the watch is wet.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the case and crystal with a soft, dry cloth regularly.
- For the stainless steel bracelet, use a soft brush and mild soapy water to clean dirt from between the links. Rinse thoroughly with clean water and dry immediately with a soft cloth.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials.

Environmental Considerations

- **Temperature:** Avoid exposing your watch to extreme temperatures (above 60°C / 140°F or below 0°C / 32°F) or sudden temperature changes, as this can affect the movement's accuracy and seals.
- **Magnetic Fields:** Keep your watch away from strong magnetic fields (e.g., speakers, refrigerators, mobile phones, medical devices), as magnetism can affect the accuracy of mechanical watches. If your watch becomes magnetized, it may require demagnetization by a professional.
- **Shocks:** While robust, avoid severe impacts or shocks to the watch.

Regular Servicing

Like any precision mechanical instrument, your watch benefits from periodic servicing to ensure its long-term accuracy and water resistance. It is recommended to have your watch inspected and serviced by an authorized Citizen service center every 3-5 years.

TROUBLESHOOTING

If you encounter issues with your watch, please refer to the following common solutions before contacting customer support.

- **Watch has stopped:** If the watch has stopped, it likely needs to be wound. Manually wind the watch by rotating the crown clockwise 30-40 times while it is in position 0. Then, wear the watch regularly to maintain its power reserve.
- **Inaccurate time:**
 - Ensure the watch is fully wound and worn consistently.
 - Check if the watch has been exposed to strong magnetic fields. If so, it may need demagnetization.
 - If accuracy issues persist, the watch may require servicing by an authorized technician.
- **Date not changing or changing at incorrect time:**
 - Ensure the time is set correctly, distinguishing between AM and PM. The date typically changes around midnight.
 - Avoid setting the date manually between 9 PM and 3 AM.
 - If the issue continues, professional inspection may be necessary.
- **Condensation under crystal:** This indicates a potential breach in water resistance. Immediately take the watch to an authorized service center to prevent further damage to the movement.

SPECIFICATIONS

Brand	Citizen
-------	---------

Model Number	NJ0152-51X
Movement Type	Automatic Mechanical
Display Type	Analog
Case Material	Stainless Steel
Band Material	Stainless Steel
Glass Material	Sapphire Crystal
Water Resistance	5 Bar (50 Meters)
Product Dimensions	4.5 x 1.2 x 1.2 cm
Item Weight	138 g
Special Features	Automatic Self Wind, Sapphire Crystal, Date Display, Water Resistant
Country of Origin	China (Movement: Made in Japan)

WARRANTY AND SUPPORT

Warranty Information

Your Citizen Tsuyosa Collection watch comes with a **2 Years Regional Warranty**. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty card included with your watch or visit the official Citizen website.



Image of the Citizen 2 Years Guarantee card, valid in India.

Customer Support

For service, repairs, or further inquiries, please contact an authorized Citizen service center. You can find contact information and locations on the official Citizen website: www.citizenwatch.com.

Manufacturer: CITIZEN WATCH CO., LTD., 6-1-12 Tanashi-cho, Nishi Tokyo-shi, Tokyo 188-8511, Japan.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question