

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bofypoo](#) /

› [Bofypoo 4K Digital Camera User Manual](#)

Bofypoo DC308

Bofypoo 4K Digital Camera User Manual

Model: DC308

INTRODUCTION

The Bofypoo 4K Digital Camera (Model DC308) is a versatile and compact device designed for high-quality photography and vlogging. Featuring a 48MP CMOS image sensor and dual lenses, it allows for easy capture of stunning images and 4K videos. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance.



Figure 1: Bofypoo 4K Digital Camera and included accessories.

WHAT'S IN THE BOX

Your Bofypoo 4K Digital Camera package includes the following items:

- 1x Digital Camera
- 1x 32GB SD Card
- 2x Rechargeable Batteries
- 1x Long Lanyard
- 1x Type-C Cable
- 1x Adapter
- 1x User's Manual (this document)
- 1x Wrist Strap
- 1x Camera Bag

Ideal Gift for Daily and Holidays



Birthday Gift



Christmas Gift



Travel Record



Packing List



Figure 2: All components included in the camera package.

SETUP

Battery and SD Card Installation

Before using your camera, ensure the battery is charged and properly installed, along with the SD card.

1. **Open Battery Compartment:** Locate the battery compartment cover on the bottom of the camera. Slide the latch to

open the cover.

2. **Insert Battery:** Insert one of the provided rechargeable batteries into the compartment, ensuring the correct orientation. The battery cannot be charged if inserted incorrectly.
3. **Insert SD Card:** Locate the SD card slot next to the battery compartment. Insert the 32GB SD card until it clicks into place.
4. **Close Compartment:** Close the battery compartment cover securely until it latches.



Figure 3: Visual guide for battery and SD card installation.

Initial Use Note: Upon first use, you may need to format the SD card through the camera's settings menu. Refer to the "Operating Modes" section for navigation.

OPERATING MODES

The Bofypoo 4K Digital Camera offers intuitive controls and various modes for different shooting scenarios.

Power On/Off

Press and hold the power button (usually located on the top or side) to turn the camera on or off. The 2.8-inch IPS screen will display a welcome message upon startup.

Button Introduction

Familiarize yourself with the camera's buttons for seamless operation:

How to Install Battery and Micro SD Card?

Please note the direction of the battery. The battery cannot be charged if it is reversed.



Figure 4: Key camera buttons and their labels.

Photo Mode (48MP)

To capture high-resolution 48MP images:

1. Ensure the camera is in photo mode (indicated by a camera icon on the screen).
2. **Autofocus:** Lightly tap the capture button (shutter button) to activate autofocus. The focus frame on the screen will change from yellow to green when focus is achieved.
3. **Capture:** Fully press the capture button to take the photo.
4. **Digital Zoom:** Use the W/T buttons to adjust the 16x digital zoom for distant subjects.

48MP Autofocus Digital Camera

With autofocus technology, Half-press the Shutter for clear photos



Figure 5: Capturing photos with autofocus and digital zoom.

Video Mode (4K)

To record 4K videos:

1. Switch to video mode (indicated by a video camera icon).
2. Press the capture button to start recording.
3. **Pause Function:** Press the "OK" button to pause recording. Press again to resume. This allows for seamless video creation without post-editing.
4. Press the capture button again to stop recording.

4K Digital Camera for Video



Figure 6: Recording 4K video with pause functionality.

Dual-Lens Functionality

The camera features dual lenses for easy switching between front and rear views, ideal for selfies and vlogging.

1. Locate the dedicated lens switch button (often near the top of the camera).
2. Press this button to instantly switch between the front-facing lens (for selfies/vlogging) and the rear-facing lens (for general photography).



Dual Front and Rear Cameras

Switch the front camera with one click and take selfies conveniently



Figure 7: Switching between front and rear cameras.

Webcam Functionality

The camera can be used as a webcam for video calls or live streaming:

1. Connect the camera to your computer using the provided Type-C cable.
2. Select "Webcam Mode" on the camera's screen (if prompted).
3. Your computer should recognize the camera as a webcam. Select it in your video conferencing or streaming software.

4K Digital Camera For Webcam/Vlogging

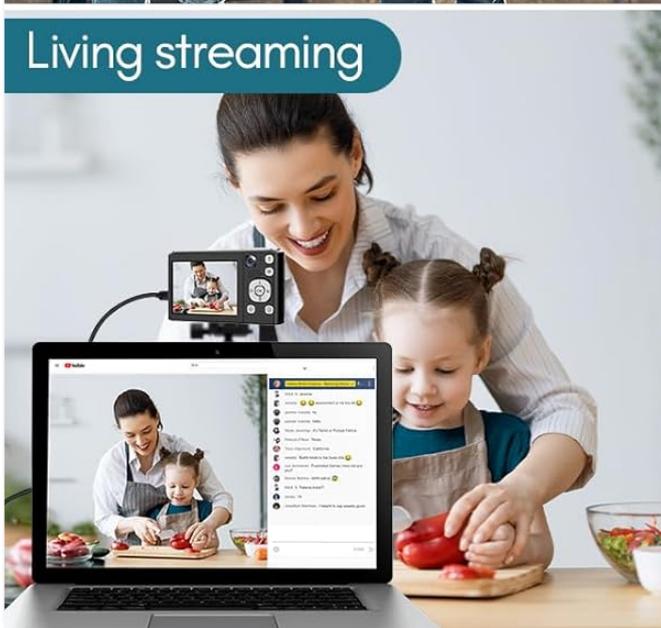


Figure 8: Camera setup for webcam and vlogging use.

KEY FEATURES

- **Portable & Compact Design:** Weighing only 0.29lb and with a sleek profile, this camera is highly portable and fits easily into your pocket, purse, or backpack, making it ideal for travel and light carrying.
- **16X Digital Zoom:** Capture distant subjects with clarity using the powerful 16x digital zoom.

- **Anti-Shake Function:** The anti-shake feature helps stabilize images and videos, reducing blur caused by camera movement, ensuring clear and steady shots.
- **Self-Timer:** Set a delay of 2, 5, or 10 seconds before a photo is taken, perfect for group shots or self-portraits.
- **Built-in Flash:** The integrated flash provides fill light, allowing you to take high-quality photos even in low-light conditions.
- **Continuous Shooting:** Capture a rapid sequence of photos with the 3-continuous shooting mode, ensuring you don't miss any action.
- **Face Recognition:** Automatically detects and focuses on faces in the frame for sharp portraits.
- **Multiple Image Styles:** Explore various image styles and filter effects to add creative touches to your photos.

Portable & Compact Digital Camera

Sleek and smaller than most cell phones, this travel camera fits comfortably in your pocket



Figure 9: The camera's portable and compact design.

16X Digital Zoom & Anti Shake



Figure 10: 16X Digital Zoom and Anti-Shake in action.



Figure 11: Self-Timer, Flash, and Continuous Shooting modes.

TECHNICAL SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	Bofypoo
Model Name	DC308
Photo Sensor Resolution	48 MP
Video Resolution	2160p, 4320p
Optical Zoom	16 x
Image Stabilization	Digital
Screen Size	2.8 Inches
Display Type	LCD
Flash Memory Type	SD (32 GB included)
Battery Type	Lithium Ion (2 included)
Connectivity Technology	USB (Type-C)
Auto Focus Technology	Face Detection
Form Factor	Compact
Color	Black

MAINTENANCE

Proper care and maintenance will extend the life of your Bofypoo 4K Digital Camera.

- **Cleaning the Lens:** Use the provided lens wipe or a soft, lint-free cloth specifically designed for camera lenses. Gently wipe the lens in a circular motion to remove dust or smudges. Avoid using harsh chemicals.
- **Cleaning the Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water, then wipe dry.
- **Storage:** When not in use, store the camera in its protective bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Store batteries in a cool, dry place. If storing for extended periods, charge them periodically to maintain battery health.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Camera Not Turning On:**

- Ensure the battery is fully charged and correctly inserted.
- Try using the second provided battery.

- **Cannot Take Photos/Videos:**

- Check if the SD card is inserted properly.
- Ensure the SD card has sufficient free space.
- If it's a new SD card, format it via the camera's settings.

- **Blurry Images:**

- Ensure autofocus is engaged (half-press shutter button until green frame appears).
- Hold the camera steady during capture. Utilize the anti-shake feature.
- Clean the camera lens with a lens wipe.

- **Computer Not Recognizing Camera (Webcam Mode):**

- Ensure the Type-C cable is securely connected to both the camera and the computer.
- Verify "Webcam Mode" is selected on the camera.
- Try a different USB port on your computer.

WARRANTY AND SUPPORT

The Bofypoo 4K Digital Camera comes with a **1-Year Manufacturer Warranty**. For any product-related inquiries, technical assistance, or warranty claims, please contact Bofypoo-US customer support.

We provide comprehensive after-sales support and 24/7 customer assistance to ensure your satisfaction.



Figure 12: Bofypoo customer support is available 24/7.

OFFICIAL PRODUCT VIDEOS

Check out this HD 4k digital camera with dual cameras!

Your browser does not support the video tag.

This video provides an overview of the Bofypoo 4K Digital Camera, highlighting its dual camera functionality and high-definition capabilities.

Capture Every Detail in Stunning 4K Digital Camera!

Your browser does not support the video tag.

Learn how to capture intricate details with the camera's 4K resolution and advanced features in this informative video.