

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TUTOTAK](#) /

› [TUTOTAK Small End Table with Charging Station TB01BK060 User Manual](#)

## TUTOTAK TB01BK060

# TUTOTAK Small End Table with Charging Station TB01BK060 User Manual

Model: TB01BK060

## INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, and maintenance of your TUTOTAK Small End Table with Charging Station. Please read these instructions carefully before assembly and use to ensure proper function and longevity of the product.



Image: The TUTOTAK Small End Table, featuring a black finish, two tiers, and an integrated charging station on the top surface.

## SAFETY INFORMATION

---

- Ensure all components are securely fastened before use.
- Do not overload the table or shelves beyond their intended capacity.
- Keep liquids away from the charging station to prevent electrical hazards.
- Only use the charging station with compatible devices and within specified electrical ratings (1 AC outlet, 2 USB ports).
- Place the table on a stable, level surface to prevent tipping.
- Keep the power cord away from heat sources and sharp objects.

## PACKAGE CONTENTS

---

Please verify that all parts are present before beginning assembly. If any parts are missing or damaged, please contact customer service.

- Tabletop with integrated charging station (1)
- Bottom shelf (1)
- Support legs/frame components (4-6, depending on design)
- Assembly hardware (screws, bolts, Allen wrench)
- Assembly Instructions

## SETUP AND ASSEMBLY

---

Assembly is designed to be straightforward and typically takes approximately 15 minutes. No special tools are required beyond what is provided.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Legs to Top Shelf:** Secure the support legs to the underside of the tabletop using the provided hardware. Ensure they are oriented correctly as per the included graphic instructions.
3. **Install Bottom Shelf:** Attach the bottom shelf to the lower section of the support legs using the designated hardware.
4. **Tighten All Connections:** Once all parts are in place, gently tighten all screws and bolts to ensure stability. Do not overtighten.
5. **Position the Table:** Place the assembled end table in its desired location, ensuring it is stable and level.



Image: A diagram illustrating the dimensions of the end table: 7.9 inches deep, 15.8 inches wide, and 22.5 inches high, with a 55-inch power cord.

## OPERATING THE CHARGING STATION

The integrated charging station provides convenient power access for your electronic devices.

- **Power Connection:** Plug the 4.5 ft (approximately 55 inches) power cord from the end table into a standard wall outlet.
- **AC Outlets:** The table features 1 AC outlet (125V/12A). Plug in devices such as lamps, laptops, or other small appliances.
- **USB Ports:** Two USB ports (5V/2A) are available for charging smartphones, tablets, and other USB-powered devices.
- **Optimal Spacing:** The design ensures sufficient space between outlets and ports to accommodate various adapter sizes without obstruction.

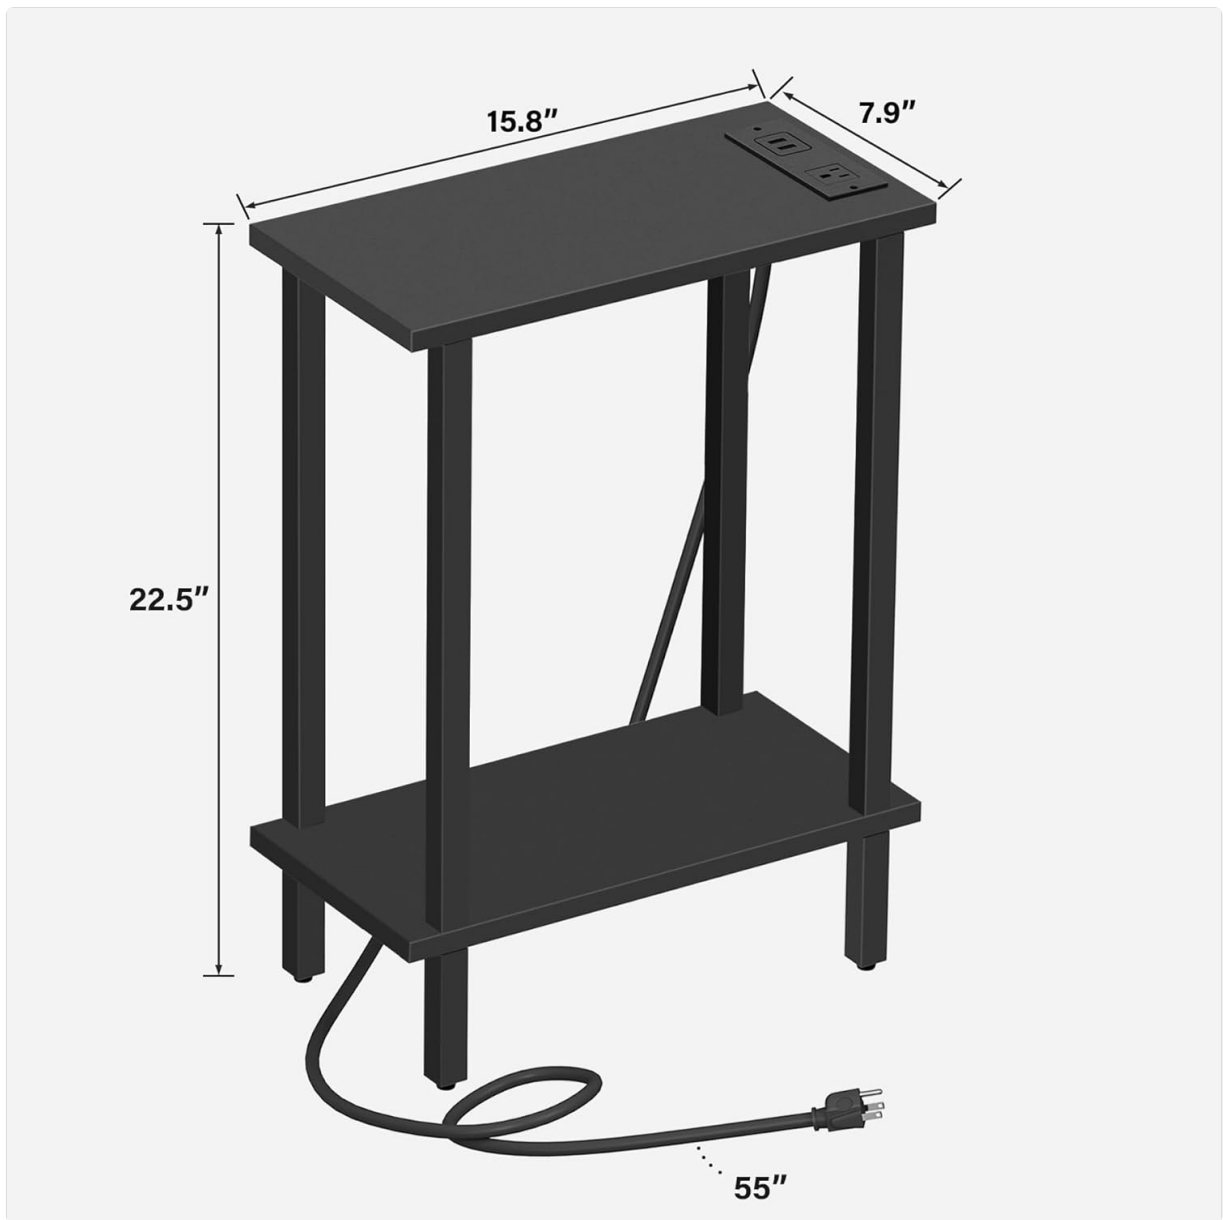


Image: A detailed view of the charging station embedded in the tabletop, showing one AC outlet and two USB ports, with a smartphone connected for charging.

## CARE AND MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Spills:** Promptly clean up any spills, especially near the charging station, to prevent damage.
- **Inspection:** Periodically check all connections and hardware to ensure they remain tight. Retighten if necessary.
- **Environmental Conditions:** Avoid placing the table in direct sunlight or near extreme heat/cold sources to prevent material warping or discoloration.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Charging station not working	Power cord not fully plugged in; Wall outlet not active; Device not compatible; Internal wiring issue.	Ensure power cord is securely plugged into both the table and a functional wall outlet. Test the wall outlet with another device. Verify device compatibility. If issues persist, contact customer service.
Table is wobbly	Loose hardware; Uneven floor surface.	Check and tighten all assembly screws and bolts. Move the table to a level surface or use furniture pads to stabilize.
Missing parts during assembly	Packaging error.	Review the package contents list. Contact TUTOTAK customer service for replacement parts.

## SPECIFICATIONS

Feature	Detail
Brand	TUTOTAK
Model	TB01BK060
Dimensions (D x W x H)	7.9" x 15.8" x 22.5"
Color	Black
Material Type	Engineered Wood
Number of Tiers/Shelves	2
AC Outlets	1 (125V/12A)
USB Ports	2 (5V/2A)
Power Cord Length	4.5 ft (approx. 55 inches)
Indoor/Outdoor Usage	Indoor

## WARRANTY AND SUPPORT

TUTOTAK provides friendly and professional customer service. Every end table is thoroughly tested to ensure quality. If you encounter any questions or issues, please feel free to contact us. Our customer service team aims to respond within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official TUTOTAK website.

