

[Manuals.plus](#) /

› [Timever](#) /

› Timever Sport Digital Watch User Manual

Timever L6662G-GoldBlack-TEUS

Timever Sport Digital Watch User Manual

Model: L6662G-GoldBlack-TEUS

INTRODUCTION

This manual provides detailed instructions for the Timever Sport Digital Watch. Please read this manual thoroughly before using your watch to ensure proper operation and to maximize its lifespan. This watch is designed for daily wear and various sports activities, featuring multiple functions and a durable, water-resistant design.





Figure 1: Front view of the Timeever Sport Digital Watch.

SETUP

1. Initial Time and Date Setting

To set the time and date on your Timeever Sport Digital Watch, follow these steps:

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **RESET** button to cycle through the settings (seconds, hours, minutes, month, date, day of week).
3. Use the **START** button to adjust the flashing digit.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

2. Adjusting the Silicone Strap

The watch features a soft and flexible silicone strap with a buckle clasp for comfortable wear. To adjust the strap, simply slide the buckle to the desired position and secure the pin through one of the holes. Ensure the watch fits snugly but comfortably on your wrist.



Figure 2: The soft silicone band provides all-day comfort.

OPERATING INSTRUCTIONS

Your Timever Sport Digital Watch comes equipped with several useful functions. Familiarize yourself with the buttons and their corresponding actions:

- **EL Button (Top Left):** Activates the LED backlight for visibility in low-light conditions.
- **MODE Button (Bottom Left):** Cycles through different modes: Time Display, Alarm, Stopwatch, and Date/Day.
- **START Button (Top Right):** Used to start/stop the stopwatch, adjust values during setting, or activate specific functions within a mode.
- **RESET Button (Bottom Right):** Used to reset the stopwatch, confirm settings, or clear values during setting.

1. Time Display

The default mode displays the current time, including hours, minutes, seconds, and day of the week. The large numbers ensure easy readability.

2. Alarm Function

To set the alarm:

1. Press **MODE** until the alarm setting appears.
2. Use **RESET** to select hours or minutes.
3. Use **START** to adjust the alarm time.
4. Press **MODE** to save and exit.

3. Stopwatch Function

To use the stopwatch:

1. Press **MODE** until the stopwatch mode is displayed (usually showing 00:00:00).
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to zero.

Mineral Crystal Glass Mirror

High Density & Durable



Premium Stainless Steel

Sleek & Skin Friendly

Figure 3: The watch offers multiple functions including alarm, time/date/week, stopwatch, LED backlight, and water resistance.

MAINTENANCE

1. Water Resistance

The Timever Sport Digital Watch is rated for 3ATM water resistance. This means it supports daily waterproof activities such as washing your face, washing hands, and exposure to rain. *It is not recommended to wear the watch while swimming, showering, or surfing, as prolonged exposure to water pressure or hot water can compromise the seals.*



Figure 4: The watch is suitable for daily water exposure like hand washing, but not for swimming or showering.

2. Cleaning

To clean your watch, wipe the case and silicone strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or strap.

3. Battery Replacement

The watch uses a standard watch battery. When the display dims or functions become erratic, it may

be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

4. Shock Resistance

The watch is made of upgraded resin materials, providing strong shock resistance. While durable, avoid excessive impacts or dropping the watch from significant heights to prevent damage to internal components or the mineral crystal glass mirror.



Figure 5: Rear view of the watch, showing the stainless steel back and water resistance marking.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Time is inaccurate (gains or loses time)	Low battery or internal mechanism issue.	Replace battery. If problem persists, contact customer support.
Display is dim or blank	Low battery.	Replace battery.
Buttons are unresponsive	Stuck button or internal issue.	Gently press buttons to ensure they are not stuck. If problem persists, contact customer support.
Water inside the watch	Exposure to water beyond 3ATM rating or damaged seal.	Immediately stop using the watch. Seek professional repair to prevent further damage.

SPECIFICATIONS

- **Model Number:** L6662G-GoldBlack-TEUS
- **Brand:** Timever
- **Department:** Womens
- **Clasp Type:** Buckle
- **Water Resistance:** 3ATM (Daily waterproof, not for swimming/showering)
- **Display Type:** Digital with LED Backlight
- **Functions:** Alarm, Stopwatch, Chronograph, Calendar (Time/Date/Week)
- **Strap Material:** Silicone
- **Case Material:** Upgraded Resin
- **Back Material:** Premium Stainless Steel
- **Glass:** Mineral Crystal Glass Mirror
- **Approximate Dimensions:** 3.35 x 3.27 x 2.4 inches (Package); 2.82 ounces (Weight)

Soft Silicone Band

Skin-Friendly & Comfortable



Figure 6: Approximate dimensions of the watch face.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the seller directly through the platform where the watch was purchased. Keep your proof of purchase for any warranty claims.