



Manuals.plus /

› FVBADE /

› FVBADE R40S PRO Handheld Game Console Instruction Manual

FVBADE R40S PRO

FVBADE R40S PRO Handheld Game Console Instruction Manual

Model: R40S PRO

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your FVBADE R40S PRO Handheld Game Console. Please read it thoroughly before using the device to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The FVBADE R40S PRO is a portable handheld game console designed for retro gaming enthusiasts. It features a compact design, a high-resolution IPS screen, and a powerful battery for extended gameplay.



Figure 2.1: FVBADE R40S PRO Handheld Game Console and included accessories.

3. KEY FEATURES

- **Processor:** 1.5GHz 64-bit RK3326 CPU, Mali-G31MP dual-core GPU.
- **Memory:** 4GB*2 RAM DDR3L.
- **Operating System:** Optimized for responsive and smooth performance.
- **Display:** 3.5-inch IPS full-view screen with 640x480 resolution and RGB color display.
- **Storage:** 256GB TF Card pre-installed with over 30,000 games. Supports extended memory for additional games.
- **Emulators:** Supports 12+ mainstream emulators.
- **Battery:** 3800mAh rechargeable battery providing up to 10 hours of battery life.
- **Connectivity:** Supports Wi-Fi (requires a Type-C interface Wi-Fi receiver, not included).
- **Audio:** Built-in speaker and 3.5mm headphone jack.

- **Portability:** Ultra-small size (5*3*1 inch) for easy carrying.
- **External Connection:** Can be connected to a large screen or external controller via a Type-C-OTG adapter.

4. PACKAGE CONTENTS

The package includes the following items:

- FVBADE R40S PRO Handheld Game Console
- 256GB TF Card (pre-installed)
- Type-C Charging Cable
- User Manual



Figure 4.1: Visual representation of package contents.

5. DEVICE LAYOUT



Figure 5.1: Key description of the console's buttons and ports.

- **L1/L2/R1/R2:** Shoulder buttons located on the top of the device.
- **Indicator Light:** Status indicator.
- **OTG Port:** On-The-Go port for external connections.
- **DC Port:** Type-C charging port.
- **Power On/Off:** Button to power the device on or off.
- **RESET:** Button to reset the device.
- **TF2-GAME:** Second TF card slot (for games).
- **Direction Keys:** D-pad for directional input.
- **Select:** Select button.
- **Left Rocker:** Left analog stick.
- **-VOL+:** Volume control buttons.
- **TF1-OS:** Primary TF card slot (for operating system).
- **Function Keys:** A, B, X, Y buttons.

- **FN Key:** Function key for special commands.
- **Start:** Start button.
- **Right Rocker:** Right analog stick.

6. SETUP

6.1 Charging the Device

Before initial use, fully charge the console. Connect the provided Type-C charging cable to the DC port on the device and the other end to a compatible USB power source (e.g., computer USB port, wall adapter). The indicator light will show charging status.

6.2 Inserting the TF Card

The console comes with a 256GB TF card pre-installed in the TF1-OS slot, containing the operating system and games. If you wish to expand storage or use a different game card, insert it into the TF2-GAME slot. Ensure the card is inserted correctly until it clicks into place.

6.3 Power On/Off

- **To Power On:** Press and hold the Power On/Off button until the screen illuminates.
- **To Power Off:** Press and hold the Power On/Off button until the power-off options appear on the screen, then select 'Shutdown' or 'Power Off'. A quick press will put the device into sleep mode.

7. OPERATING INSTRUCTIONS

7.1 Navigating Menus

Use the Direction Keys (D-pad) or the Left/Right Rockers to navigate through the main menu and game lists. The A button typically confirms selections, and the B button goes back to the previous screen.

7.2 Playing Games

Select an emulator or game collection from the main menu, then browse the available titles. Press the A button to launch a selected game.

7.3 Saving and Loading Game Progress

During gameplay, you can save and load your progress using specific key combinations:

- **To Save:** Press the **FN + R1** keys simultaneously.
- **To Load:** Press the **FN + L1** keys simultaneously.

7.4 Exiting Games

To exit a game and return to the main menu, press the **FN + START** keys twice simultaneously.

7.5 System Settings

The main menu provides access to various system settings:

- **UI Settings:** Customize the user interface appearance.

- **Sound Settings:** Adjust volume, audio output, etc.
- **Game Collection Settings:** Manage game lists and display options.
- **Emulator Settings:** Configure individual emulator options.
- **Scraper:** Update game information and artwork (requires internet connection).
- **Advanced Settings:** Access advanced system configurations, including options to switch simulator cores, adjust screen orientation and ratios, and apply screen filters.

7.6 Wi-Fi Connectivity

The console supports Wi-Fi connectivity for online battles and other features. A Type-C interface Wi-Fi receiver is required and is not included with the device.



Figure 7.1: Wi-Fi connectivity for online gameplay.

7.7 Connecting to External Display or Controller

For a home console experience, the device can be connected to a larger screen or an external controller using a Type-C-OTG adapter (not included).



Figure 7.2: Connecting the console to an external display or controller.

8. MAINTENANCE

8.1 Battery Care

To prolong battery life, avoid completely draining the battery frequently. Charge the device regularly, especially if it will not be used for an extended period. Use only the provided charging cable or a compatible Type-C cable.

8.2 Storage

Store the console in a cool, dry place away from direct sunlight and extreme temperatures. Keep it away from dust and moisture.

9. TROUBLESHOOTING

- **Device does not power on:** Ensure the battery is charged. Connect the charger and try again. If the issue persists, perform a hard reset using the RESET button.
- **Games are slow or crash:** Some 3D games may require more processing power than the console can consistently provide. Ensure the TF card is properly inserted. Avoid using high-power charging cables that are not compatible, as this can cause system instability.
- **Cannot exit a game:** Press FN + START twice simultaneously.
- **Wi-Fi not working:** Ensure you have a compatible Type-C Wi-Fi receiver connected, as it is not included with the console.

10. SPECIFICATIONS

Feature	Detail
Model	R40S PRO
CPU	1.5GHz 64-bit RK3326
GPU	Mali-G31MP dual-core
RAM	4GB*2 DDR3L
Screen Size	3.5 Inches IPS
Screen Resolution	640x480 pixels
Battery Capacity	3800mAh
Battery Life	Up to 10 hours
Memory Storage	256 GB (TF Card)
Product Dimensions	1"L x 1"W x 1"H
Item Weight	0.32 Kilograms (11.3 ounces)
Material	PVC
Controller Type	Button Control

11. SAFETY INFORMATION

Please observe the following safety guidelines:

- Do not expose the device to extreme temperatures, direct sunlight, or moisture.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Keep the device out of reach of small children.
- Use only approved charging accessories.

12. WARRANTY AND SUPPORT

Warranty information for this product was not provided in the product details. For support or inquiries, please refer to the contact information provided by your retailer or the manufacturer, FVBADE.