

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [HONEY JOY](#) /
- › [HONEY JOY Teepee Tent for Kids Instruction Manual \(Model HJ-2408-US\)](#)

## HONEY JOY HJ-2408-US

# HONEY JOY Teepee Tent for Kids Instruction Manual

Model: HJ-2408-US

## INTRODUCTION

---

Thank you for choosing the HONEY JOY Teepee Tent for Kids. This manual provides important information for the safe assembly, operation, and maintenance of your new play tent. Please read these instructions carefully before use and retain them for future reference.



*Image: The HONEY JOY Teepee Tent assembled, showing a child playing inside. This tent provides a cozy and engaging space for children's activities.*

## **SAFETY INFORMATION**

---

Your safety and the safety of your children are paramount. Please observe the following safety guidelines:

- Always supervise children when they are playing in or around the teepee tent.
- Ensure the tent is assembled on a flat, stable surface to prevent tipping.
- Keep the tent away from open flames, heat sources, and electrical appliances.
- Regularly inspect the tent for any signs of wear or damage. Discontinue use if any part is broken or compromised.
- This product is designed for children aged 36 months to 8 years.
- The fir wood material is BPA-free and child-safe, complying with ASTM and CPSIA standards.

# Reliable fir Wood Material



Image: Illustration detailing the safety and material quality of the fir wood frame, emphasizing its child-safe, natural, BPA-free, anti-cracking, and anti-fading characteristics.

## WHAT'S IN THE BOX

---

Upon unpacking, please verify that all components are present:

- 1 x Kids Play Tent (includes fir wood frame, fabric curtains, flags, and chalkboard)
- 1 x Instruction Manual

## SETUP

---

The HONEY JOY Teepee Tent is designed for easy assembly. Follow these general steps:

1. Unpack all components from the box and lay them out on a clean, flat surface.
2. Assemble the fir wood frame according to the detailed diagrams in the included instruction manual. Ensure all connections are secure.
3. Attach the fabric curtains to the frame.

4. Place the two decorative flags at the top of the tent.
5. Hang the chalkboard in the desired position.
6. Ensure the tent is stable and all parts are correctly installed before allowing children to play.



Image: Product dimensions of the teepee tent, indicating a length of 53.5 inches, width of 53 inches, and height of 67 inches, suitable for children aged 3-8 years.

## OPERATING THE TEEPEE TENT

The teepee tent offers a versatile play space for children. Here's how to maximize its use:

- **Activity Space:** The tent provides ample space for 2-3 children to engage in various activities such as reading, playing, or napping.
- **Curtain Management:** The door curtains are equipped with tie-down straps to keep them open for easy access. For privacy or to create a cozy enclosed space, the curtains can be closed and secured with built-in magnets.
- **Creative Play:** Utilize the removable flags to decorate the tent, allowing children to personalize their play area. The

hanging chalkboard provides a surface for drawing and writing, fostering imagination and creativity.

- **Ventilation:** The unique slatted design of the frame allows for good air circulation, ensuring a comfortable environment inside the tent.



*Image: Two children enjoying the spacious interior of the teepee tent, suitable for various activities.*

# Enjoyable Kids Tent



2 Machine-Washable Flags



Hanging Chalkboard



Image: The decorative flags and hanging chalkboard, offering creative play opportunities.



*Image: The teepee tent used outdoors, providing a fun play area in a garden setting.*



*Image: The teepee tent set up indoors, demonstrating its use as a cozy play corner.*

## MAINTENANCE

---

Proper maintenance will extend the life of your teepee tent:

- **Cleaning Curtains and Flags:** The door curtains and flags are machine washable. Use a gentle cycle with cold water and mild detergent. Air dry or tumble dry on low heat.
- **Cleaning Wood Frame:** Wipe the fir wood frame with a damp cloth and mild soap if necessary. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, the tent can be easily detached and stored in a dry, cool place to prevent damage.



## Machine-Washable Polyester Door Curtains



Curtain Ties



Built-in Magnets



Image: Close-up of the machine-washable polyester door curtains, highlighting the curtain ties and built-in magnets for convenience.

## TROUBLESHOOTING

If you encounter any issues with your teepee tent, consider the following:

- **Tent Instability:** Ensure all frame poles are fully inserted and securely connected. Verify the tent is placed on a flat, even surface.
- **Curtains Not Closing Properly:** Check if the magnets are aligned. Ensure no fabric is caught in the closing mechanism.
- **Missing Parts:** Refer to the "What's in the Box" section. If parts are missing upon initial inspection, contact customer support.

## SPECIFICATIONS

| Feature            | Detail                        |
|--------------------|-------------------------------|
| Product Dimensions | 53.5" (L) x 53" (W) x 67" (H) |
| Item Weight        | 32 pounds                     |
| Model Number       | HJ-2408-US                    |
| Recommended Age    | 36 months - 8 years           |
| Material           | Fir Wood, Polyester Fabric    |
| Certifications     | ASTM, CPSIA                   |

## WARRANTY INFORMATION

---

Specific warranty details for the HONEY JOY Teepee Tent (Model HJ-2408-US) are not provided in this document. Please refer to your purchase receipt or contact the retailer/manufacturer directly for warranty terms and conditions.

## CUSTOMER SUPPORT

---

For further assistance, questions, or to report any issues with your HONEY JOY Teepee Tent, please contact the seller or HONEY JOY customer service through the platform where the product was purchased.

You may also visit the official HONEY JOY store for more information: [HONEY JOY Store](#)