

Deryan Explorer

Deryan Explorer Tricycle Instruction Manual

BRAND: DERYAN

Model: Explorer

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before assembly and use of the Deryan Explorer Tricycle. Failure to follow these instructions may result in serious injury.

- **Age and Weight Limit:** This tricycle is designed for children aged 10 months to 4 years, with a maximum weight capacity of 25 kg (55 lbs). Do not exceed this weight limit.
- **Adult Supervision Required:** Always ensure an adult supervises the child when using the tricycle. Never leave a child unattended.
- **Protective Gear:** Always ensure the child wears appropriate safety gear, including a helmet, knee pads, and elbow pads, when riding.
- **Safe Environment:** Use the tricycle on flat, even surfaces away from stairs, swimming pools, busy roads, and other hazards. Avoid using on slopes or uneven terrain.
- **Harness Use:** Always secure the child properly in the safety harness provided.
- **Regular Checks:** Before each use, inspect the tricycle for any loose parts, damage, or wear. Ensure all locks and fasteners are securely engaged.
- **Folding Mechanism:** Exercise extreme caution when folding or unfolding the tricycle to prevent pinching or injury. Keep children clear of moving parts during these operations.



Image: A child secured in the tricycle's harness, demonstrating proper safety.

2. PRODUCT OVERVIEW AND COMPONENTS

The Deryan Explorer Tricycle is designed for comfort and versatility, featuring a foldable design, a push bar for parental control, a swivel seat, and a protective canopy.



Image: The Deryan Explorer Tricycle shown in its fully assembled state, with the push bar extended, and in its compact folded state.

Key Components:

- **Push Bar:** Adjustable handle for parental steering and control.
- **Swivel Seat:** Allows the child to face forward or backward.
- **Foldable Canopy:** Provides sun protection and can be adjusted or removed.
- **Safety Harness:** Secure five-point harness for child safety.
- **Footrests:** Foldable footrests for younger children who cannot reach the pedals.
- **Pedals:** Detachable or lockable pedals for independent riding.
- **Rear Basket:** Convenient storage for small items.
- **Wheels:** Durable, anti-slip wheels for a smooth ride.

3. ASSEMBLY INSTRUCTIONS

The Deryan Explorer Tricycle requires some assembly. Please follow these general steps. Refer to the included visual guide for detailed diagrams.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list (not

provided here, but implied for a real manual).

2. **Attach Wheels:** Securely attach the front and rear wheels according to the instructions. Ensure they rotate freely.
3. **Install Push Bar:** Insert the adjustable push bar into its designated slot at the rear of the tricycle frame and secure it firmly.
4. **Mount Seat and Canopy:** Attach the seat unit to the main frame. Ensure the swivel mechanism operates smoothly. Install the canopy onto the seat unit.
5. **Attach Pedals and Footrests:** Secure the pedals to the front wheel axle. If applicable, attach the foldable footrests.
6. **Final Checks:** Before first use, double-check all connections, bolts, and fasteners to ensure they are tight and secure.



Image: A fully assembled Deryan Explorer Tricycle, ready for use, showcasing the push bar and canopy.

4. OPERATING INSTRUCTIONS

4.1 Using the Push Bar

The adjustable push bar allows parents to steer and control the tricycle. To adjust the height, locate the adjustment mechanism (usually a button or lever) on the bar, press it, and slide the bar to the desired height.

Release to lock in place.

4.2 Adjusting the Swivel Seat

To change the seat direction, locate the swivel lock mechanism beneath the seat. Disengage the lock, rotate the seat to face forward or backward, and re-engage the lock to secure it.

4.3 Adjusting the Canopy

The canopy can be folded back or extended to provide sun protection. Simply push or pull the canopy frame to adjust its position. It can also be detached if not needed.

4.4 Folding and Unfolding the Tricycle

The Deryan Explorer Tricycle features a compact folding mechanism for easy transport and storage.

1. **To Fold:** Identify the folding release levers or buttons on the frame (consult the product's specific manual for exact locations). Engage these mechanisms and carefully collapse the tricycle until it locks into its folded position. Ensure all parts are securely tucked away.
2. **To Unfold:** Release the folding lock. Gently extend the frame until it clicks into its fully open and locked position. Verify that all components are securely in place before use.



Image: The Deryan Explorer Tricycle in its compact folded configuration, highlighting its portability.

5. MAINTENANCE

Proper maintenance will extend the life of your Deryan Explorer Tricycle.

- **Cleaning:** Clean the tricycle regularly with a damp cloth and mild soap. For fabric parts, hand washing is recommended. Do not use abrasive cleaners or solvents.
- **Lubrication:** Periodically check moving parts (e.g., wheel axles, folding mechanisms) and apply a small amount of silicone-based lubricant if necessary to ensure smooth operation.
- **Storage:** Store the tricycle in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation.

- **Inspection:** Regularly inspect all bolts, nuts, and fasteners. Tighten any loose components. Check for signs of wear or damage on wheels, frame, and fabric. Replace damaged parts immediately.

6. TROUBLESHOOTING

If you encounter issues with your Deryan Explorer Tricycle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Tricycle does not fold/unfold smoothly.	Locking mechanism engaged; dirt/debris in joints; lack of lubrication.	Ensure all locks are disengaged. Clean joints. Apply silicone lubricant to moving parts.
Wheels are stiff or noisy.	Dirt/debris in axles; insufficient lubrication; loose axle nuts.	Clean around axles. Apply lubricant. Check and tighten axle nuts.
Seat does not swivel.	Swivel lock engaged; obstruction.	Ensure swivel lock is disengaged. Check for any obstructions beneath the seat.
Push bar is wobbly.	Not fully inserted or locked; loose fasteners.	Ensure push bar is fully inserted and its locking mechanism is engaged. Tighten any visible fasteners.

If the problem persists, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	102 x 49 x 101 cm (Assembled)
Item Weight	8.7 Kilograms
Weight Limit	25 Kilograms
Recommended Age	10 months to 4 years
Main Material	Plastic
Color	Cream
Assembly Required	Yes

8. WARRANTY AND SUPPORT

For warranty information, please refer to the terms and conditions provided at the point of purchase or visit the official Deryan website. Keep your proof of purchase for any warranty claims.

Regarding spare parts, information on availability is currently not provided. For any product support, technical assistance, or inquiries about spare parts, please contact Deryan customer service through their official channels or the retailer from whom you purchased the product.

Note: Product specifications and features are subject to change without prior notice.