

[Manuals.plus](#) /

> [Casio](#) /

> Casio MW-620H Series Men's Digital Watch Instruction Manual

Casio MW-620H

Casio MW-620H Series Watch Instruction Manual

Model: MW-620H

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Casio MW-620H Series watch. Designed for durability and functionality, this timepiece features a bold design with a high-visibility dial, 100-meter water resistance, an LED illuminator with afterglow, and a long-lasting battery. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.



Image: Casio MW-620H Series watch with blue dial and black resin band.

SETUP

Setting the Time

1. Pull the crown out to the first click position.
2. Rotate the crown to set the hour and minute hands to the desired time.
3. Push the crown back in to the normal position to start timekeeping.

Battery Information

Your Casio MW-620H watch is powered by a Lithium Metal battery, designed to provide approximately three years of power for both movement and the LED light function. When the battery runs low, the watch may exhibit irregular operation or the LED light may dim. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

OPERATING YOUR WATCH

Basic Timekeeping

The watch displays time using analog hour, minute, and second hands. The date is displayed in a small window on the dial.

Using the LED Illuminator

To illuminate the watch face in low-light conditions, press the button located on the side of the watch case. The LED light will activate, providing clear visibility of the dial. The afterglow feature ensures the light remains visible for a short period after the button is released.

Water Resistance (100M)

Your Casio MW-620H watch is rated for 100-meter (330 feet) water resistance. This means it is suitable for everyday use, including hand washing, rain, showering, swimming, and snorkeling. It is **not** suitable for scuba diving or high-impact water sports. **Important:** Do not operate the crown or any buttons while the watch is wet or submerged in water, as this can compromise the water resistance.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and band with a soft, dry cloth. For resin bands, you may use a mild soap solution and rinse thoroughly with water, then dry completely. Avoid using harsh chemicals or abrasive cleaners.

Battery Replacement

When the battery requires replacement, it is strongly recommended to take your watch to an authorized Casio service center or a reputable watch repair shop. This ensures that the correct battery type is installed and the watch's water resistance is properly maintained after the case back is opened.

Water Resistance Care

To preserve the water resistance of your watch, avoid exposing it to extreme temperatures (e.g., hot showers, saunas) or sudden temperature changes. Have the gaskets checked and replaced periodically, especially during battery changes, to ensure continued water resistance.

TROUBLESHOOTING

- **Watch is not running:** The battery may be depleted. Refer to the 'Battery Replacement' section.
- **LED light is dim or not working:** This is typically an indication of a low battery. Replace the battery as described in the 'Battery Information' section.
- **Time is inaccurate:** Ensure the crown is fully pushed in. If the issue persists, the battery may be low, or the watch may require servicing.
- **Moisture inside the watch:** If you notice condensation or moisture inside the watch, stop using it immediately and take it to an authorized service center for inspection.

SPECIFICATIONS

Display	Analog
Watch Movement Type	Quartz
Power Source	Battery Powered (1 Lithium Metal battery included)
Water Resistance Depth	100 Meters (330 Feet)
Strap Type	Two Piece Strap
Clasp Type	Buckle
Band Material Type	Resin
Case Material Type	Resin
Crystal	Resin
Case Diameter	48.1 Millimeters
Band Width	20 Millimeters
Case Thickness	13.6 Millimeters
Included Components	Water Resistant Strap

WARRANTY INFORMATION

Your Casio MW-620H Series watch comes with a limited warranty. The specific terms and duration of the warranty may vary by region. Please refer to the warranty card included with your purchase or visit the official Casio website for detailed information regarding coverage, exclusions, and how to make a warranty claim. Keep your proof of purchase for warranty validation.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries regarding your Casio MW-620H Series watch, please contact Casio customer support. You can find contact information, including phone numbers and online support resources, on the official Casio website. When contacting support, please have your watch model number (MW-620H) and purchase details readily available.