

COSTWAY FK569956ZMIT

COSTWAY Children's Outdoor Mud Kitchen with Canopy

Model: FK569956ZMIT - Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your COSTWAY Children's Outdoor Mud Kitchen with Canopy, Model FK569956ZMIT. Please read these instructions carefully before assembly and use to ensure proper function and safety for your child.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- This product is suitable for children aged 3 to 7 years. Adult supervision is required at all times during play.
- Ensure all parts are securely fastened before allowing children to play. Regularly check for loose screws or damaged components.
- Keep packaging materials (plastic bags, small parts) away from children to prevent suffocation or choking.
- Place the mud kitchen on a flat, stable surface to prevent tipping.
- Do not modify the product or use non-original replacement parts, as this may compromise safety.
- The canopy provides sun protection; however, prolonged exposure to direct sunlight should be avoided.

3. PACKAGE CONTENTS

Please verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, contact COSTWAY customer service.

- 1 x Children's Toy Kitchen (main structure)

- 1 x Pan
- 1 x Chalkboard
- 2 x Pots
- 1 x Manual (this document)



Image: Overview of included accessories and product dimensions.

4. SETUP AND ASSEMBLY

Assembly is required for this product. Please follow the detailed instructions and diagrams provided in the separate assembly guide included in the package. Ensure you have adequate space and the necessary tools (typically a screwdriver) before starting.

1. **Unpack all components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify hardware:** Separate and identify all screws, bolts, and other small hardware items. Refer to the assembly guide's hardware list.
3. **Assemble the main frame:** Follow the step-by-step instructions to connect the wooden frame pieces. Ensure all connections are secure but do not overtighten screws initially.

4. **Install the countertop and sink:** Attach the countertop and place the removable sink into its designated opening.
5. **Attach the canopy:** Secure the fabric canopy to the top frame according to the instructions.
6. **Install accessories:** Mount the chalkboard, hooks, and any other decorative or functional elements.
7. **Final check:** Once assembled, tighten all screws and ensure the structure is stable. Check for any sharp edges or loose parts.



Image: The assembled mud kitchen in an outdoor environment.

Telaio in Legno di Abete Selezionato



Naturale Durevole Robusto



Image: Detail of the selected fir wood frame, highlighting natural, durable, and robust qualities.

5. OPERATING INSTRUCTIONS

The COSTWAY Children's Outdoor Mud Kitchen is designed for imaginative play. Here's how to utilize its features:

- **Chalkboard:** Use standard chalk (not included) to write menus, draw pictures, or list ingredients for pretend cooking.
- **Sink and Faucet:** The sink is removable for easy cleaning. Children can fill it with water, sand, or mud for sensory play. The faucet is decorative and rotates, enhancing realistic play.
- **Stove Burners and Knobs:** The four simulated burners provide a cooking area. The rotating knobs produce a satisfying "click" sound when turned, mimicking real stove controls.
- **Storage:** Utilize the upper shelves, hanging hooks, slatted shelf, and two-door cabinet for storing play accessories, pots, pans, or other outdoor toys.
- **Canopy:** The fabric canopy provides shade, making outdoor play more comfortable during sunny weather.

Cucina di Fango per Bambini all'Aperto

Permette al bambino di usare il fango per simulare la cucina



Lavagna Divertente



Rubinetto & Lavello



4 Fornelli Simulati



Manopole Rotanti

Image: Close-up of interactive features including the chalkboard, faucet and sink, simulated stove burners, and rotating knobs with click sound.

Spazio Sufficiente per Stoccaggio



Ripiani Superiori



2 Ganci per Appendere



Ripiano Inferiore a Doghe



Armadietto a Due Ante



Image: Illustration of the ample storage space provided by the top shelves, two hanging hooks, lower slatted shelf, and two-door cabinet.

Tettuccio Superiore per Uso Esterno



Resistente al Sole



Resistente alle Pieghe



Resistente Sbiadimento



Image: Detail of the top canopy, designed for outdoor use, offering sun resistance, wrinkle resistance, and fade resistance.

6. MAINTENANCE

Regular maintenance will extend the life of your mud kitchen and ensure continued safe play.

- **Cleaning:** Wipe down wooden surfaces with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly. Dry immediately to prevent wood damage. The removable sink can be washed with water and soap.
- **Canopy Care:** The polyester fabric canopy can be wiped clean with a damp cloth. Allow it to air dry completely before folding or storing.
- **Hardware Check:** Periodically inspect all screws and bolts to ensure they are tight. Retighten as necessary to maintain structural integrity.
- **Wood Protection:** While made from durable fir wood, prolonged exposure to extreme weather conditions (heavy rain, snow, intense sun) can affect its longevity. Consider covering the mud kitchen or storing it indoors during harsh weather.
- **Chalkboard:** Clean the chalkboard with a damp cloth. Avoid abrasive cleaners.

7. TROUBLESHOOTING

If you encounter any issues with your mud kitchen, refer to the following common solutions:

Problem	Possible Cause	Solution
Kitchen feels wobbly or unstable.	Loose screws or uneven surface.	Check and tighten all assembly screws. Ensure the kitchen is placed on a flat, level surface.
Knobs do not click or turn smoothly.	Debris or misalignment.	Inspect the knob mechanism for any obstructions. Ensure the knobs are correctly installed according to the assembly guide.
Canopy is sagging or not fitting correctly.	Incorrect attachment or frame issue.	Re-check the canopy attachment points and ensure the frame is assembled correctly.
Wood appears discolored or damaged.	Prolonged exposure to elements.	Ensure proper maintenance as described in Section 6. Consider applying a child-safe wood sealant for added protection if desired.

8. SPECIFICATIONS

Feature	Detail
Model Number	FK569956ZMIT
Overall Dimensions (L x W x H)	100 x 42 x 126 cm (39.4 x 16.5 x 49.6 inches)
Countertop Height	51 cm (20.1 inches)
Net Weight	12 kg (26.5 lbs)
Recommended Age	3 - 7 years
Materials	Fir Wood, Stainless Steel, Plastic, Polyester Fabric, Metal
Assembly Required	Yes

9. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact COSTWAY customer service directly. Refer to your purchase documentation or the official COSTWAY website for contact details.

Please retain this instruction manual for future reference.

