

[Manuals.plus](#) /

> [Devoko](#) /

> Devoko Wicker Sectional Sofa and Daybed Instruction Manual (Model DV240118-C-221)

Devoko DV240118-C-221

Devoko Wicker Sectional Sofa and Daybed Instruction Manual

Model: DV240118-C-221

PRODUCT OVERVIEW

The Devoko Wicker Sectional Sofa and Daybed is a versatile outdoor furniture set designed for comfort and functionality. It features high-quality thickened cushions for relaxation and a durable construction suitable for various outdoor conditions. This manual provides detailed instructions for assembly, operation, and maintenance to ensure optimal use and longevity of your product.



Image: The Devoko Wicker Sectional Sofa and Daybed configured as a daybed, featuring grey cushions and two integrated side tables with wooden tops.

SETUP AND ASSEMBLY

The Devoko Wicker Sectional Sofa and Daybed requires assembly. All necessary hardware and an easy-to-follow instruction guide are included with your purchase. While assembly can be completed by one person, having two individuals may facilitate the process.

Assembly Steps:

1. Unpack all components and verify against the parts list provided in the instruction guide.
2. Follow the step-by-step instructions to connect the frame sections.
3. Secure all connections using the provided hardware. Ensure all screws are tightened appropriately, but do not overtighten.
4. Place the cushions onto the assembled frame.



Image: An illustration demonstrating the modularity of the furniture, showing how the footrest can be stored under the main sofa unit to save space.

OPERATING INSTRUCTIONS AND VERSATILE CONFIGURATIONS

This outdoor furniture set offers multiple configurations to suit your needs, functioning as a sectional sofa, a daybed, or individual seating units with storage.

Converting to a Daybed:

- To extend the sofa into a daybed, pull out the footrest section from underneath the main sofa unit.
- Place the additional cushion onto the footrest to complete the daybed surface.

Utilizing Storage Features:

- The two side tables feature lift-up wooden tops, revealing waterproof storage compartments underneath. These are ideal for keeping small items dry and protected from the elements.
- The main footrest unit also contains a larger storage area with a gas hinge for smooth opening and soft closing. This compartment includes a waterproof liner, suitable for storing cushions or other outdoor essentials.



Image: The sectional sofa configured with the large storage ottoman open, showcasing its waterproof interior for storing items like blankets and hats.

Your browser does not support the video tag.

Video: A demonstration of the Devoko Outdoor Daybed Set, highlighting its weather-resistant features, side storage compartments with waterproof liners, and the large footrest storage with a soft-close gas hinge. The video also shows the conversion from a sofa to a daybed configuration.

CARE AND MAINTENANCE

Proper care ensures the longevity and appearance of your Devoko Wicker Sectional Sofa and Daybed.

Cleaning Instructions:

- **Frame:** Wipe the rattan and metal frame with a dry cloth to remove dust and debris. For more stubborn dirt, use a mild soap solution and a soft brush, then rinse thoroughly and dry completely.
- **Cushions:** The cushions are designed to be weather-resistant. For general cleaning, spot clean with a mild soap and water solution. Allow to air dry completely before use or storage.
- **Waterproof Liners:** Periodically check and clean the waterproof liners in the storage compartments to

prevent moisture buildup.

General Care:

- While the product is weather-resistant, prolonged exposure to extreme weather conditions (heavy rain, snow, intense sun) may affect its lifespan. Consider using a furniture cover during off-seasons or severe weather.
- Store cushions indoors when not in use for extended periods to maintain their quality.



Image: A detailed view highlighting the thick cushions, premium rattan construction, and waterproof material features of the furniture.

TROUBLESHOOTING

If you encounter any issues with your Devoko Wicker Sectional Sofa and Daybed, please refer to the following common solutions:

- **Stability Issues:** Ensure all bolts and screws are securely tightened. Uneven surfaces can also affect stability; try repositioning the furniture on a flat area.
- **Cushion Sliding:** If cushions slide, consider adding non-slip pads or Velcro strips to the underside of

the cushions and the furniture frame.

- **Storage Lid Malfunction:** If the gas hinge on the large storage lid is not operating smoothly, check for any obstructions or damage to the hinge mechanism.

For problems not addressed here, please contact Devoko customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Devoko
Model Number	DV240118-C-221
Color	Grey
Material	Alloy Steel, Rattan, Wicker, Wood
Product Dimensions	87.1 x 48 x 26.4 inches (L x W x H)
Item Weight	83.8 pounds
Weight Capacity (Sofa)	700 lbs (approximate, based on image)
Product Care	Wipe with Dry Cloth

You deserve a comfortable home

Product Dimension

Outdoor home sofa



Image: A visual representation of the product dimensions and weight capacity for the sofa and storage units.

WARRANTY AND CUSTOMER SUPPORT

For specific warranty information regarding your Devoko Wicker Sectional Sofa and Daybed, please refer to the documentation included with your purchase or contact Devoko customer support directly.

If you have any questions, require assistance with assembly, or need to report a defect, please reach out to our customer service team. We are committed to responding to inquiries within 24 hours.

Contact Information: Please refer to the contact details provided in your product packaging or visit the official Devoko website for support options.