

[Manuals.plus](#) /

› [LEGAMI](#) /

› Legami Walkie-Talkies Instruction Manual

LEGAMI WT0001

Legami Walkie-Talkies Instruction Manual

Model: WT0001

PRODUCT OVERVIEW

The Legami Walkie-Talkies Set (Model WT0001) provides reliable two-way radio communication for various activities. Designed for ease of use, these walkie-talkies feature 8 channels, adjustable volume, and a built-in flashlight. They are suitable for both children and adults, offering communication over distances of up to 3-5 kilometers in open areas.



Figure 1: Front view of the Legami Walkie-Talkies, showcasing their vibrant orange and teal design with the display screen and control buttons clearly visible.



Figure 2: The walkie-talkies displaying "8 07" on their screens, indicating channel 8 and sub-code 07, which are used for secure communication.



Figure 3: A view of the back of one walkie-talkie, highlighting the integrated belt clip for convenient carrying, alongside a front view of another unit.



Figure 4: The product packaging for the Legami Walkie-Talkies, showing the "Vintage Memories" branding and key features like 5 KM range and included torch icon.

PACKAGE CONTENTS

The Legami Walkie-Talkies set includes the following items:

- 2 x Legami Walkie-Talkies (Model WT0001)
- User Manual (this document)

Note: 4 x AAA batteries are required for each walkie-talkie and are not included in the package.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of each walkie-talkie.
2. Open the cover by sliding it down or unlatching it (refer to Figure 3 for compartment location).
3. Insert 4 x AAA batteries into each walkie-talkie, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Powering On/Off

- To power on, press and hold the **Power button** (🔌) located on the top right of the device until the screen illuminates.
- To power off, press and hold the **Power button** again until the screen turns off.

OPERATING INSTRUCTIONS

1. Channel Selection

1. Press the **MENU button** to enter channel selection mode. The channel number on the display will flash.
2. Use the **Up**  and **Down**  buttons to select one of the 8 available channels.
3. Press the **TALK button** or **MENU button** again to confirm your selection.

2. Sub-Code (CTCSS/DCCS) Selection

To ensure private communication and avoid interference, you can set a sub-code (CTCSS or DCCS tone). Both walkie-talkies must be on the same channel and sub-code to communicate.

1. After selecting the channel, press the **MENU button** again. The sub-code number will flash.
2. Use the **Up** and **Down** buttons to select one of the 99 available CTCSS/DCCS tones.
3. Press the **TALK button** or **MENU button** again to confirm.

3. Transmitting and Receiving

- To transmit, press and hold the large **TALK button**. Speak clearly into the microphone. Release the button when you finish speaking.
- To receive, ensure the **TALK button** is not pressed. The walkie-talkie will automatically receive signals on the selected channel and sub-code.

4. Volume Adjustment

Use the **Up** and **Down** buttons to adjust the speaker volume when not in menu mode.

5. VOX Function (Hands-Free Communication)

The VOX (Voice Operated Exchange) function allows you to transmit without pressing the TALK button. The walkie-talkie will automatically transmit when it detects your voice.

1. Press the **MENU button** repeatedly until the VOX icon appears on the display.
2. Use the **Up** and **Down** buttons to select the VOX sensitivity level (e.g., 1-3, with 3 being most sensitive). Or select "OFF" to disable.
3. Press the **TALK button** or **MENU button** to confirm.

6. Flashlight Function

Press the **LAMP button**  to turn the built-in flashlight on or off.

7. Key Lock Function

To prevent accidental button presses, you can activate the key lock.

- Press and hold the **MENU button** until a key icon appears on the display. This indicates the keypad is locked.
- To unlock, press and hold the **MENU button** again until the key icon disappears.

MAINTENANCE

- **Cleaning:** Wipe the walkie-talkies with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and corrosion. Store in a cool, dry place.
- **Battery Replacement:** Replace all 4 AAA batteries in a unit simultaneously. Do not mix old and new batteries or different battery types.

Troubleshooting

Problem	Possible Cause	Solution
No power / Unit does not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with fresh AAA batteries.
Cannot communicate with other walkie-talkie.	Different channels or sub-codes. Out of range. Obstructions.	Ensure both units are on the same channel and sub-code. Move closer to the other unit. Avoid large obstacles like buildings or dense foliage.
Static or poor sound quality.	Weak signal. Interference. Low battery.	Move to an open area. Change channel or sub-code. Replace batteries.
VOX function not working.	VOX sensitivity too low.	Increase VOX sensitivity level in the menu settings.

Specifications

Feature	Detail
Model Number	WT0001
Brand	LEGAMI
Channels	8
Sub-Codes	99 CTCSS/DCCS tones
Transmission Range	Up to 3-5 km (open space); Max 15 km (ideal conditions)
Tuner Technology	UHF
Power Source	4 x AAA batteries per unit (not included)
Special Features	VOX function, Flashlight, Belt Clip, Adjustable Volume, Key Lock, Noise Reduction
Product Dimensions (Set)	15 x 10 x 8 cm
Product Weight (Set)	210 grams
Water Resistance	Not waterproof
Compatible Devices	Other Legami Walkie-Talkies and devices with the same UHF frequency band

Safety Information

- Do not expose the walkie-talkies to water or excessive moisture.
- Do not attempt to disassemble or modify the device. This will void the warranty and may cause damage.
- Keep batteries away from small children. If swallowed, seek immediate medical attention.
- Dispose of batteries properly according to local regulations.
- Avoid using the walkie-talkies in explosive atmospheres or near flammable materials.
- Do not use damaged antennas. If an antenna comes into contact with skin, it may cause minor burns.

© 2025 LEGAMI. All rights reserved.

For further assistance, please visit the official LEGAMI website or contact customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question