

[Manuals.plus](#) /

› [Homeika](#) /

› Homeika- Pro Version- 28k PA Cordless Vacuum Instruction Manual

Homeika H016-Pro

Homeika- Pro Version- 28k PA Cordless Vacuum Instruction Manual

Brand: Homeika

Model: H016-Pro

INTRODUCTION

Thank you for choosing the Homeika- Pro Version- 28k PA Cordless Vacuum. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

PRODUCT COMPONENTS

Your Homeika Cordless Vacuum comes with various components designed for versatile cleaning. Familiarize yourself with each part before assembly.



Figure 1: Main unit, telescopic wand, floor brush, and handheld configurations.

- **Main Unit:** Contains the 300W brushless motor, 28KPA suction system, digital IQ LED display, and dust cup.
- **Telescopic Wand:** Adjustable length for comfortable upright vacuuming and high-reach cleaning.
- **Motorized Floor Brush:** Features LED headlights and a 180-degree rotatable design for effective cleaning on various floor types.
- **Detachable Lithium-Ion Battery:** Provides up to 50 minutes of runtime.
- **Crevice Tool:** Ideal for narrow spaces and corners.
- **Dusting Brush:** Suitable for delicate surfaces and upholstery.
- **Wall Mount:** For convenient storage and charging.

1. Assembly

1. **Attach the Telescopic Wand:** Align the connection point of the telescopic wand with the main unit and push until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the telescopic wand, ensuring a firm connection.
3. **Install the Battery:** Slide the detachable Lithium-Ion battery into its slot on the main unit until it locks.
4. **Optional Attachments:** For handheld use, detach the telescopic wand and connect the crevice tool or dusting brush directly to the main unit.

2. Initial Charging

Before first use, fully charge the battery. The IQ LED display will show the battery percentage. A full charge takes approximately 5 hours.

- Connect the charger to the battery or the main unit while the battery is installed.
- Plug the charger into a power outlet.
- Monitor the IQ LED display for charging progress.



Figure 2: Detachable battery and run time indicators.

OPERATING INSTRUCTIONS

1. Power and Speed Modes

Press the power button to turn the vacuum on/off. Use the mode selection button to cycle through the 3 available

speed modes:

- **Eco Mode:** Up to 50 minutes runtime, suitable for light cleaning.
- **Mid Mode:** Up to 30 minutes runtime, for everyday cleaning tasks.
- **High Mode:** Up to 18 minutes runtime, provides maximum 28KPA suction for stubborn dirt and debris.



Figure 3: IQ LED Display for real-time information.

2. Cleaning Different Surfaces

The motorized floor brush is designed for optimal performance on both carpets and hard floors. The LED headlights illuminate hidden dust and debris, ensuring thorough cleaning.



Figure 4: Powerful cleaning on carpets and hard floors.

3. Using Attachments (8-in-1 Functionality)

Utilize the various attachments for specialized cleaning tasks:

- **Crevice Tool:** Perfect for tight spaces, edges, and car interiors.
- **Dusting Brush:** Gently cleans delicate surfaces, curtains, and upholstery.
- **Telescopic Wand:** Extends reach for high ceilings, cobwebs, or under furniture.

Whole-home, Deep Cleans with 8 in 1



Figure 5: Versatile cleaning with 8-in-1 functionality.

28000Pa Powerful Suction

Quickly Clean Up Hair or Any Messes



Figure 6: Powerful 28000Pa suction for quick clean-up.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum.

1. Emptying the Dust Cup

The 1.5L easy-empty dust cup should be emptied regularly, especially when the MAX line is reached, to maintain strong suction.



Figure 7: Easy-empty dust cup for mess-free disposal.

2. Filter Cleaning

The HEPA filter effectively traps allergens and dirt. Clean the filter regularly to prevent clogging and maintain suction power.



**99.99%² Mite
Removal**

Effectively Traps Over Allergens & Dirt

Figure 8: Internal filtration system for effective mite and allergen removal.

- Twist and remove the filter from the dust cup.
- Tap off loose dirt or use a soft brush to clean.
- Rinse the filter under cold running water if necessary. Ensure it is completely dry before reinserting.

3. Battery Care

To prolong battery life, avoid completely draining the battery before recharging. Store the vacuum in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum not turning on	Battery not charged or not properly installed.	Ensure battery is fully charged and securely clicked into place.
Loss of suction power	Full dust cup, clogged filter, or obstruction in the brush/wand.	Empty dust cup, clean filter, check for and remove any blockages.
Motorized brush not rotating	Brush roll tangled with hair/debris or brush head obstructed.	Turn off vacuum, remove any tangled hair or obstructions from the brush roll.
Short runtime	Battery not fully charged or operating in High Mode continuously.	Fully charge the battery. Use Eco or Mid Mode for longer cleaning sessions.

SPECIFICATIONS

Brand	Homeika
Model Number	H016-Pro
Motor Power	300W
Suction Power	28KPA
Battery Type	Lithium-Ion, Detachable
Max Runtime	Up to 50 minutes (Eco Mode)
Charging Time	5 Hours
Dust Cup Capacity	1.5 Liters
Filter Type	Cartridge (HEPA)
Noise Level	75 dB
Weight	8.05 pounds
Dimensions (L x W x H)	46" x 36" x 36"

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact details provided on the product packaging or the official Homeika website. Keep your purchase receipt as proof of purchase.