

Homeika H016-Pro

Homeika Pro Version Cordless Vacuum User Manual

Model: H016-Pro

INTRODUCTION

Thank you for choosing the Homeika Pro Version Cordless Vacuum. This powerful and versatile cleaning tool is designed to provide efficient and convenient cleaning for all floor types. Featuring a digital display, three-speed settings, a telescopic wand, and a detachable battery, this vacuum offers exceptional performance and ease of use. Please read this manual thoroughly before operating the vacuum to ensure safe and optimal performance.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use in an enclosed space where vapors are present from oil base paint, paint thinner, mothproofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

PACKAGE CONTENTS

Please check the package contents to ensure all parts are present and in good condition:

- Main Motor Unit (Handheld Vacuum)
- Telescopic Extension Wand
- Motorized Brush Head (for floors)
- Crevice Tool
- 2-in-1 Brush Tool
- Detachable Lithium-Ion Battery
- Power Adapter/Charger
- Wall Mount Bracket with Screws
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the main components of your Homeika Cordless Vacuum:



Image: The Homeika Pro Version Cordless Vacuum displayed in its full stick vacuum configuration, as a handheld unit, and with different attachments like the crevice tool and brush tool. The telescopic wand is shown with arrows indicating its adjustable length. The main unit features a digital display.

1. **Main Motor Unit:** Contains the motor, dust cup, digital display, and control buttons.
2. **Digital Display:** Shows battery level and current suction mode.
3. **Dust Cup:** Transparent container for collecting dust and debris.
4. **Detachable Battery:** Lithium-Ion battery that can be removed for charging.
5. **Telescopic Extension Wand:** Adjustable length tube for extended reach and floor cleaning.
6. **Motorized Brush Head:** Main cleaning head with a rotating brush for various floor types, includes LED lights.
7. **Crevice Tool:** Narrow attachment for cleaning tight spaces and corners.
8. **2-in-1 Brush Tool:** Versatile attachment for dusting and upholstery.

SETUP

Initial Battery Charge

1. Remove the detachable battery from the main motor unit by pressing the battery release button and sliding it out.
2. Connect the power adapter to the charging port on the battery.
3. Plug the power adapter into a wall outlet. The battery indicator on the digital display (if attached to the main unit) or on the battery itself will show charging status.
4. Charge the battery fully before first use (approximately 3-4 hours).

Assembly

The Homeika vacuum can be assembled in various configurations:

1. For Stick Vacuum Configuration:

- Insert the telescopic extension wand into the main motor unit until it clicks securely into place.
- Attach the motorized brush head to the other end of the telescopic extension wand until it clicks securely.

2. For Handheld Vacuum Configuration:

- Attach the desired accessory (crevice tool or 2-in-1 brush tool) directly to the main motor unit until it clicks securely.

3. Ensure the detachable battery is securely inserted into the main motor unit.

OPERATING INSTRUCTIONS

Power On/Off

- Press the Power Button () on the main motor unit to turn the vacuum on. The digital display will illuminate.
- Press the Power Button again to turn the vacuum off.

Adjusting Suction Modes

The vacuum features 3 suction speeds for different cleaning needs:

- While the vacuum is on, press the Mode Button (+/-) to cycle through the suction modes: Low, Medium, and High.
- The digital display will indicate the current suction mode.

Using the Telescopic Wand

To adjust the length of the telescopic wand:

- Press the release button on the telescopic wand.
- Extend or retract the wand to your desired length.
- Release the button to lock the wand in place.

Using Attachments

- **Motorized Brush Head:** Ideal for all floor types, including carpets and hard floors. The integrated LED lights illuminate dust and debris for thorough cleaning.
- **Crevice Tool:** Perfect for reaching into narrow gaps, corners, and along edges.
- **2-in-1 Brush Tool:** Versatile attachment for dusting delicate surfaces like keyboards or blinds, and retract the brush for upholstery or larger debris.

MAINTENANCE

Emptying the Dust Cup

Empty the dust cup regularly to maintain optimal suction power.

1. Ensure the vacuum is turned off.
2. Locate the dust cup release button on the main motor unit.
3. Press the button and detach the dust cup.
4. Hold the dust cup over a trash bin and press the bottom release latch to open the dust cup and empty its contents.
5. Close the dust cup lid firmly and reattach the dust cup to the main motor unit until it clicks.

Cleaning Filters

The vacuum is equipped with a HEPA filter and a metal filter. Clean them regularly for best performance.

1. Remove the dust cup as described above.
2. Twist and pull out the filter assembly from inside the dust cup.
3. Separate the HEPA filter and the metal filter.
4. Tap both filters over a trash bin to remove loose dust.
5. Rinse the filters under cold running water until the water runs clear*Do not use hot water or detergents.*
6. Allow the filters to air dry completely for at least 24 hours before reassembling. Ensure they are **completely dry** before placing them back into the vacuum to prevent damage to the motor.
7. Reassemble the filters and place them back into the dust cup, then reattach the dust cup to the main unit.

Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris.

1. Turn off the vacuum and detach the motorized brush head.
2. Locate the brush roll release tab on the side of the brush head.
3. Remove the brush roll.
4. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
5. Reinsert the brush roll until it clicks into place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly inserted.	Ensure battery is fully charged and securely inserted.
Loss of suction.	Dust cup is full; Filters are clogged; Brush roll is tangled; Obstruction in nozzle/wand.	Empty dust cup; Clean/replace filters; Remove tangled debris from brush roll; Check for and clear any obstructions.
Brush roll not spinning.	Brush roll is tangled; Obstruction in brush head; Brush head not properly attached.	Clean brush roll; Remove any obstructions; Ensure brush head is securely attached to the wand/main unit.

Problem	Possible Cause	Solution
Short run time.	Battery not fully charged; Battery life degrading.	Fully charge the battery; If battery life is significantly reduced, consider replacing the battery.

SPECIFICATIONS

Feature	Detail
Brand	Homeika
Model Number	H016-Pro
Special Feature	Bagless
Filter Type	Cartridge (HEPA)
Cordless	Yes
Runtime	Up to 50 minutes
Form Factor	Stick
Battery Type	Lithium-Ion
Number of Speeds	3
Control Method	Touch / Push Button
Motor Horsepower	0.40 horsepower
Product Dimensions	1 x 1 x 1 inches (Approximate, as per provided data)
Item Weight	7.13 pounds
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

Homeika products are manufactured to the highest quality standards. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or visit the official Homeika website. Please have your model number (H016-Pro) and purchase date ready when contacting support.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question