

[Manuals.plus](#) /

› [KANBIT](#) /

› KANBIT Digital Travel Alarm Clock User Manual

KANBIT Small Digital Travel Alarm Clock

KANBIT Digital Travel Alarm Clock User Manual

Model: Small Digital Travel Alarm Clock

Brand: KANBIT

PRODUCT OVERVIEW

The KANBIT Small Digital Travel Alarm Clock is designed for convenience and portability, featuring a large LCD display that shows time, date, day of the week, and temperature. Its compact design and front-facing buttons make it ideal for travel and easy to operate. Key features include a snooze function, multiple alarm melodies, and an 8-second backlight for visibility in low light conditions.



Image: Front view of the KANBIT Digital Travel Alarm Clock, displaying time, date, day, and temperature.

SMALL DIGITAL TRAVEL ALARM CLOCK

12/24

Time Format

C°/F

Temperature Switch

8 Seconds

Backlight



TIME



ALARM



SNOOZE



DATE



TEMPERATURE

AAA BATTERY
POWERED

Image: Visual representation of the clock's main features, including time format, temperature unit conversion, backlight duration, and various functions like alarm, snooze, and date display.

SETUP

Battery Installation

The clock operates on 2 AAA batteries (not included). To install the batteries:

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

New Control Button Design

Front Buttons for Easy Setting Within Minutes!

Long Battery Life

Two AAA Battery Operated
(Not Included)



Image: The clock with its battery compartment open, showing where to insert AAA batteries. Dimensions are also indicated.

OPERATING INSTRUCTIONS

Setting Time and Date

To set the current time and date:

1. Press the **MODE** button to enter Time mode.
2. Press the **SET** button to begin setting. The hour digit will flash.
3. Use the **UP/12/24** and **DOWN/°C/°F** buttons to adjust the hour.
4. Press **SET** again to move to minutes, then year, month, and date. Adjust each using the UP/DOWN buttons.
5. Press **SET** one more time to confirm and exit setting mode.

Video: A demonstration of how to set the time, date, and year on the KANBIT Digital Travel Alarm Clock.

Setting the Alarm

The clock offers 9 different melodies for the alarm. To set the alarm:

1. Press the **MODE** button twice to enter Alarm mode. The display will show "ALARM".
2. Press the **SET** button. The alarm hour will flash.
3. Use the **UP/12/24** and **DOWN/°C/°F** buttons to adjust the alarm hour.
4. Press **SET** again to move to alarm minutes. Adjust using the UP/DOWN buttons.
5. Press **SET** one more time to confirm.
6. To activate the alarm and snooze function, press the **UP/12/24** button while in Alarm mode. An alarm icon and "SNOOZE" will appear on the display.

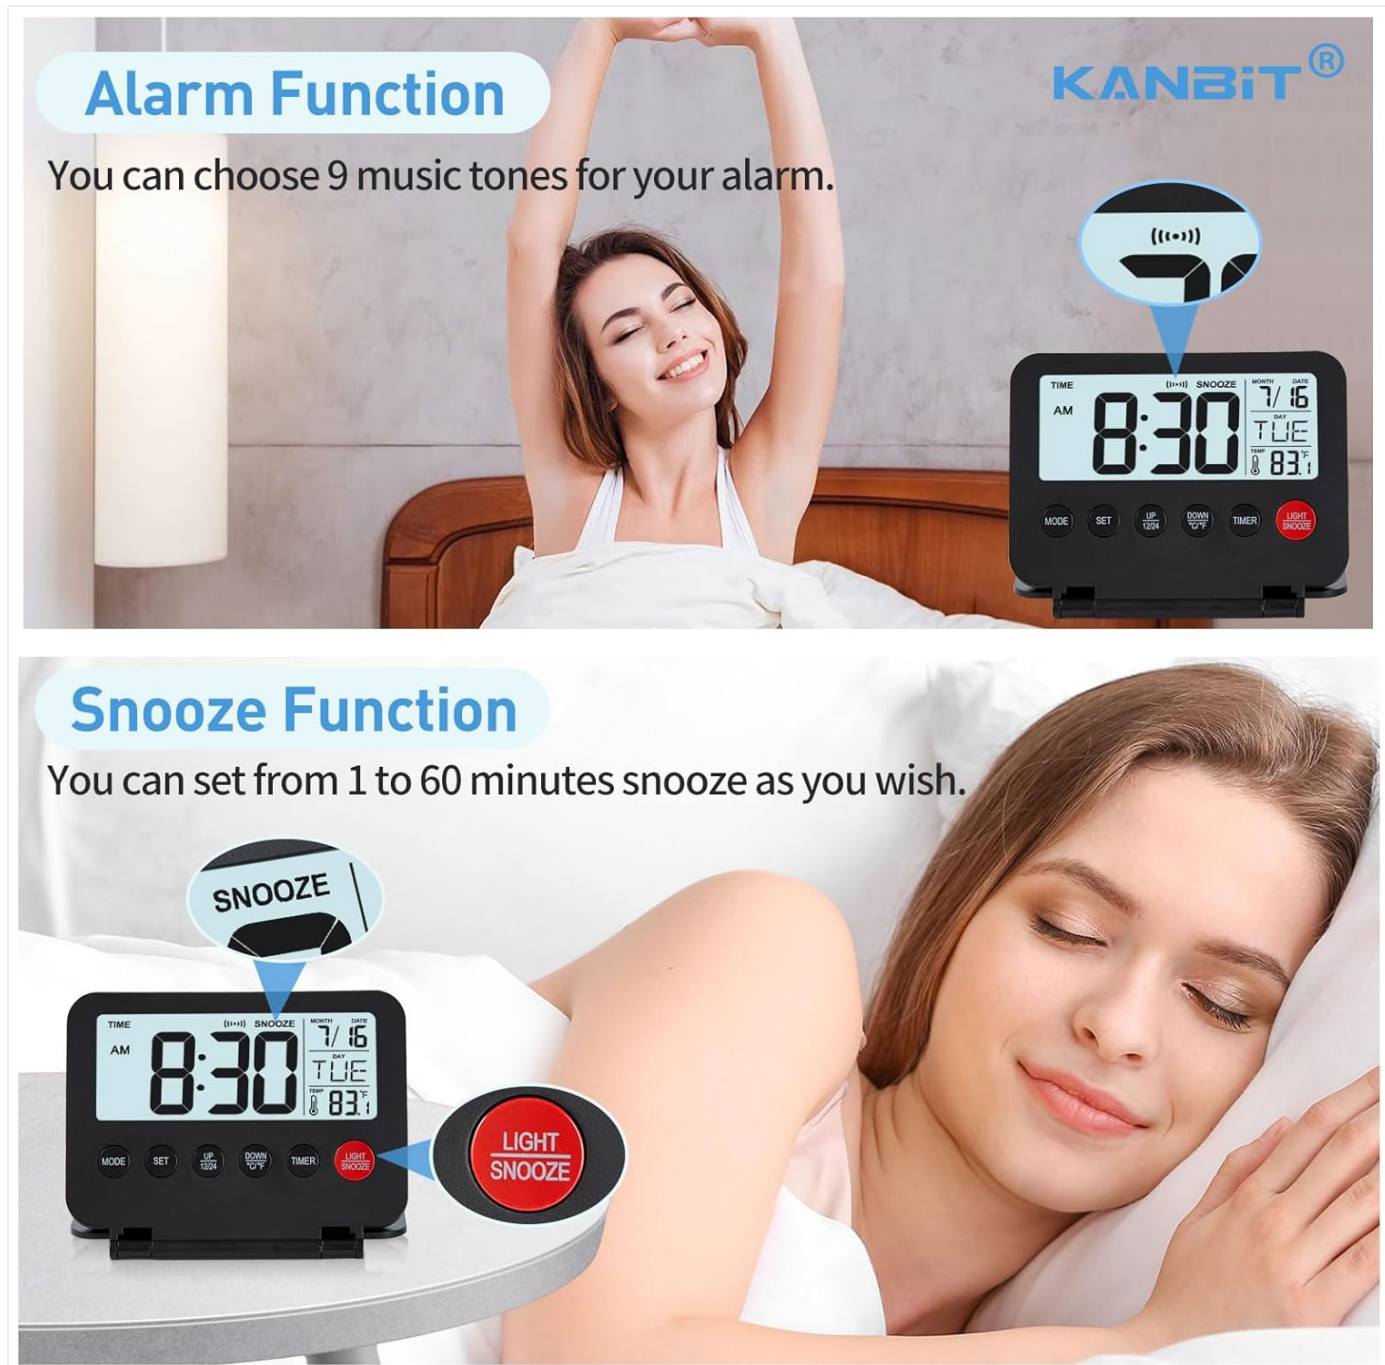


Image: The clock displaying the alarm and snooze settings, with a person stretching in the background, indicating wake-up.

Snooze Function

When the alarm sounds, press the **LIGHT/SNOOZE** button to activate the snooze function. The alarm will pause and sound again after the set snooze duration (adjustable from 1 to 60 minutes during alarm setting).

Countdown Timer

To use the countdown timer:

1. Press the **MODE** button three times to enter Timer mode. The display will show "TIMER".
2. Press the **SET** button. The hour digit will flash.
3. Use the **UP/12/24** and **DOWN/°C/°F** buttons to set the desired countdown hour, minute, and second.
4. Press **TIMER** button to start or pause the countdown.
5. When the countdown reaches zero, the alarm will sound.



Image: The clock displaying the countdown timer, with a child studying in the background, illustrating its use for focused tasks.

Backlight Function

Press the **LIGHT/SNOOZE** button to activate the backlight. The backlight will illuminate the display for 8 seconds, providing clear visibility in dark environments. Note that the backlight does not stay on continuously.

12/24 Hours Time Format

Press "UP/12/24" button to switch the time format

Temperature Display

Press "C/F" button to switch the temperature unit



Image: Comparison of the clock's display in normal lighting and with the 8-second backlight activated, demonstrating improved visibility in darkness.

12/24 Hour Format and Temperature Unit Conversion

- To switch between 12-hour and 24-hour time formats, press the **UP/12/24** button.
- To switch between Celsius (°C) and Fahrenheit (°F) temperature units, press the **DOWN/°C/°F** button.



Image: The clock displaying both 12-hour (AM/PM) and 24-hour (military) time formats, illustrating the easy switching feature.

MAINTENANCE

To ensure the longevity and proper functioning of your KANBIT Digital Travel Alarm Clock:

- Clean the clock with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- If the clock will not be used for an extended period, remove the batteries to prevent leakage.
- Handle the clock with care to prevent damage from drops or impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are low or incorrectly installed.	Replace batteries with new AAA batteries, ensuring correct polarity.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure alarm is set and activated (alarm icon visible). Check alarm volume if adjustable (this model does not specify volume control, so omit if not applicable).
Time/Date is incorrect.	Time/Date was not set correctly.	Follow "Setting Time and Date" instructions carefully, especially setting the correct year.
Backlight does not work.	Batteries are low or button not pressed firmly.	Replace batteries. Press the LIGHT/SNOOZE button firmly.

SPECIFICATIONS

- **Brand:** KANBIT
- **Color:** Black
- **Display Type:** LCD
- **Product Dimensions:** 3.15"W x 4.1"H
- **Power Source:** Battery Powered (2 AAA batteries, not included)
- **Special Feature:** Calendar Display, Snooze, Temperature Display, Backlight, Countdown Timer, Multiple Alarm Melodies
- **Material:** Plastic
- **Item Weight:** 3.52 ounces

WARRANTY AND SUPPORT

All KANBIT products come with a one-year support period. If you have any questions or require assistance, please email us through the Amazon buyer center. We aim to respond to all inquiries within 24 hours. For further assistance, please visit the [KANBIT Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question