

[Manuals.plus](#) /

> [vidaXL](#) /

> vidaXL Beach Tent Model 4004154 Instruction Manual

vidaXL 4004154

vidaXL Beach Tent Model 4004154 Instruction Manual

Model: 4004154 | Brand: vidaXL

INTRODUCTION

This manual provides essential information for the safe and effective use of your vidaXL Beach Tent. Please read these instructions carefully before assembly and use, and retain them for future reference. This beach tent is designed to provide a comfortable and waterproof shelter during warm summer seasons, suitable for beach use, as a shade for sandboxes, or children's pools.

SAFETY INFORMATION

- **Fire Hazard:** Keep all flames and heat sources away from the tent fabric.
- **Weather Conditions:** This product is not suitable for severe weather conditions such as strong winds, heavy snowfall, or extreme temperatures. Disassemble and store the tent during such conditions.
- **Assembly:** Ensure all components are correctly assembled and secured before use to prevent collapse or injury.
- **Children:** Do not leave children unattended in or around the tent.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 1 x vidaXL Beach Tent
- 1 x Carry Bag
- Ground stakes (if included, based on image 41t+QjMA3bL)



Image: The beach tent carry bag shown alongside ground stakes, indicating the complete package contents.



Image: The beach tent neatly folded and stored inside its compact carry bag, ready for transport.

SETUP INSTRUCTIONS

The vidaXL Beach Tent features a quick-release system for effortless setup.

1. **Unpack:** Remove the tent and all components from the carry bag.
2. **Position:** Lay the tent flat on your desired location, ensuring enough space for full extension.
3. **Extend Poles:** The tent features pre-assembled poles. Gently extend each pole until it locks securely into position. You will hear a click or feel the lock engage.
4. **Secure Tent:**
 - Utilize the integrated sandbags (4 total) by filling them with sand or small stones to provide stability.
 - For additional stability, especially on softer ground, use the provided ground stakes to anchor the tent corners.
 - Ensure all ropes and connections are secured to prevent movement in light winds.



Image: The vidaxL beach tent fully assembled and positioned on a sandy beach, demonstrating its open design and shelter capabilities.



Image: Detailed views highlighting the tent's construction, including secured rope connections, stable frame joints, the robust fiberglass frame mechanism, and the four integrated sandbags for anchoring.

OPERATING INSTRUCTIONS (USAGE)

Your vidaXL Beach Tent is designed for ease of use and provides versatile shelter.

- **Sun Protection:** Position the tent to maximize shade from the sun. The open entrance allows for enjoyment of the surroundings while providing shelter.
- **Water Resistance:** The tent is made from 190T polyester with a PU coating, offering water and wind resistance for light conditions.
- **Ventilation:** The open design ensures good airflow, preventing the interior from becoming too hot.
- **Portability:** When not in use, the tent can be easily folded and stored in its carry bag for convenient transport.



Image: A close-up view of the tent fabric demonstrating its waterproof properties, with water droplets beading on the surface.



Image: The beach tent configured to provide shelter from the side, illustrating its adaptability as a windbreak or privacy screen.

MAINTENANCE

- **Cleaning:** Clean the tent fabric with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Allow the tent to air dry completely before packing.
- **Storage:** Ensure the tent is completely dry before folding and storing it in the carry bag. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the poles, fabric, and seams for any signs of wear or damage. Repair any minor damage promptly to extend the life of the tent.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent does not stand securely.	Poles not fully extended/locked, sandbags not filled, or stakes not used.	Ensure all poles are locked. Fill sandbags completely. Use ground stakes for added stability.
Water leakage.	Heavy rain exceeding tent's water resistance, or damage to fabric.	The tent is designed for light rain; avoid heavy downpours. Inspect fabric for tears and repair if necessary.
Difficulty folding the tent.	Poles not fully disengaged or incorrect folding technique.	Ensure all pole locks are released. Follow the reverse of the setup instructions for folding.

SPECIFICATIONS

Model Number	4004154
Color	Grey
Tent Material	190T Polyester with PU coating
Mesh Material	60D Polyester
Tent Dimensions (L x W x H)	205 x 200 x 115 cm (80.7" x 78.7" x 45.3")
Packed Dimensions (L x W x H)	84 x 11 x 11 cm (33.1" x 4.3" x 4.3")
Weight	1.1 kg (2.4 lbs)
Tent Type	Beach Tent
Features	Quick-release system, double-access zipper, sandbags for stability
Assembly Required	Yes

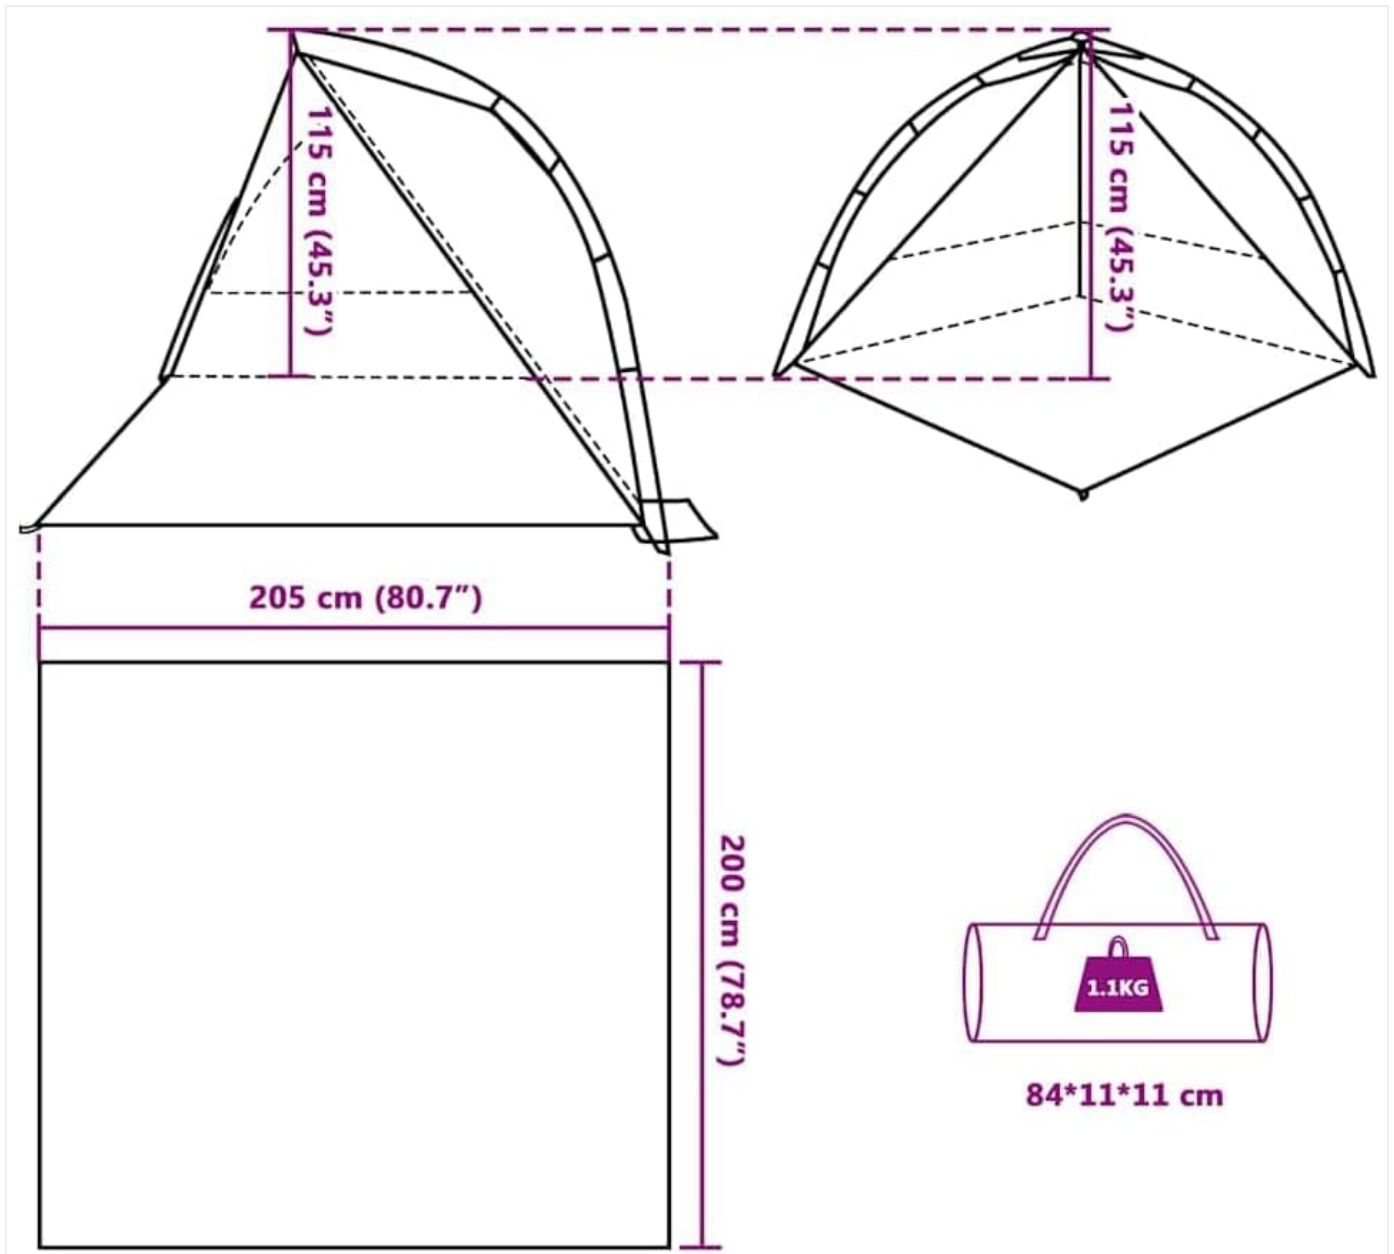


Image: Technical diagram illustrating the tent's dimensions (length, width, height) when set up, and the compact size of the carry bag.

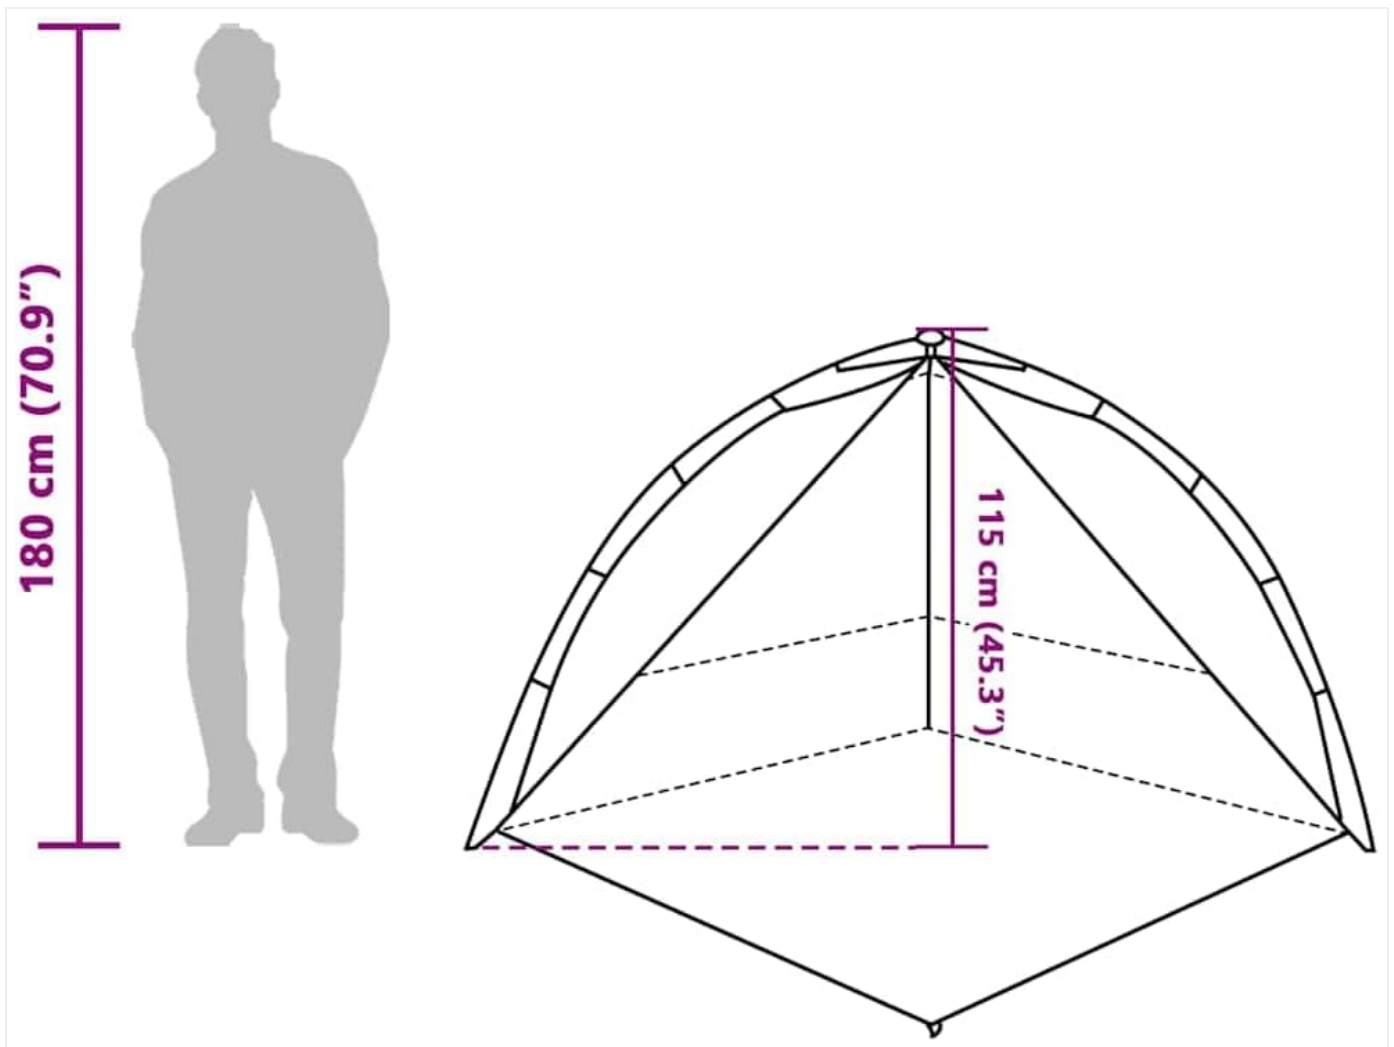


Image: A diagram showing the beach tent's height and overall dimensions in comparison to an average human figure (180 cm / 70.9 inches tall) for scale.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where the product was purchased or visit the official [vidaXL website](#). Keep your purchase receipt as proof of purchase.

Manufacturer: vidaXL

Contact: For further assistance, please visit [vidaXL Store on Amazon](#).

