

Emerio TO-128676.3

Emerio TO-128676.3 2-Slice Toaster User Manual

Model: TO-128676.3

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use can lead to electric shock, fire, or serious injury.

- Always ensure the voltage on the rating label corresponds to your mains voltage.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plug, or toaster in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- Do not operate unattended.

- Bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

2. PRODUCT OVERVIEW

The Emerio TO-128676.3 toaster is designed for convenient toasting of bread slices and warming of pastries. Familiarize yourself with its components:

1. Toasting Slots
2. Browning Control Dial (1-6)
3. Cancel Button
4. Crumb Tray
5. Bun Warmer Rack
6. Lever



Figure 1: Front view of the Emerio TO-128676.3 toaster, showing the toasting slots, lever, browning control dial, and the bun warmer rack in its raised position.



Figure 2: Top-down view highlighting the browning control dial with settings from 1 to 6 and the 'CANCEL' button.

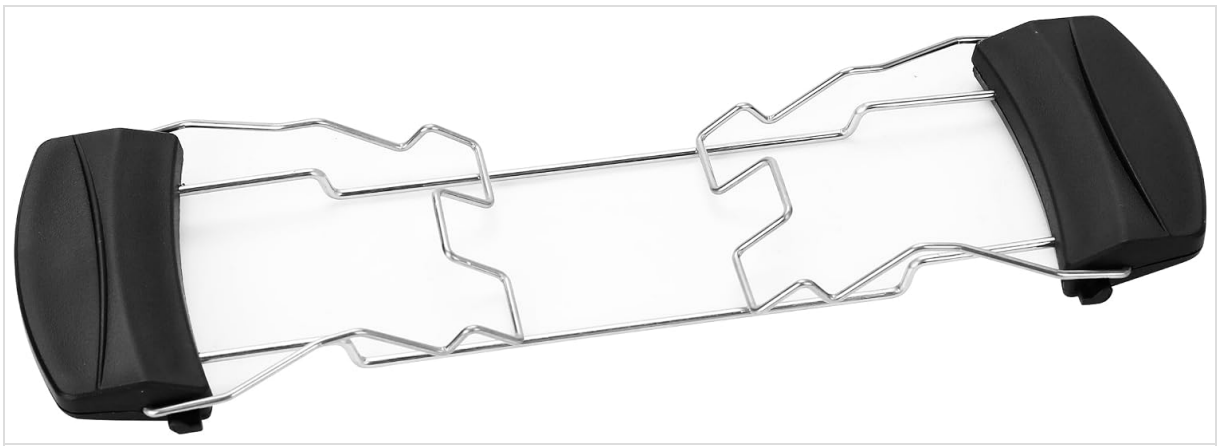


Figure 3: Detached bun warmer rack, a metal wire accessory used for warming pastries.

3. SETUP AND FIRST USE

Unpacking

- Remove all packaging materials, including any stickers or labels.
- Check that all parts are present and undamaged.
- Place the toaster on a stable, heat-resistant surface, away from flammable materials.

Before First Use (Burn-off Cycle)

It is recommended to run the toaster empty a few times before first use to burn off any manufacturing residues and eliminate initial odors.

1. Plug the toaster into a suitable power outlet.
2. Set the browning control dial to a medium setting (e.g., 3 or 4).
3. Lower the lever without any bread in the slots. The toaster will operate for a short cycle.
4. Repeat this process 2-3 times in a well-ventilated area.
5. Allow the toaster to cool down completely between cycles.

4. OPERATING INSTRUCTIONS

Toasting Bread

1. Ensure the crumb tray is properly inserted.
2. Place one or two slices of bread into the toasting slots.
3. Select your desired browning level using the browning control dial (1 for light, 6 for dark).
4. Press the lever down until it locks into place. The toasting cycle will begin, and the indicator light (if present) will illuminate.
5. Once the selected browning level is reached, the toast will automatically pop up, and the toaster will switch off.
6. If you wish to stop the toasting cycle at any time, press the 'CANCEL' button.

Using the Bun Warmer Rack

The bun warmer rack is ideal for warming croissants, rolls, or other pastries.

1. Place the bun warmer rack onto the top of the toaster slots. Ensure it is securely seated.

2. Place the items to be warmed on the rack.
3. Set the browning control dial to a low setting (e.g., 1 or 2).
4. Press the lever down to start the warming cycle.
5. Monitor the warming process closely to prevent burning. Press the 'CANCEL' button when desired warmth is achieved.
6. Carefully remove the warmed items and the bun warmer rack (it will be hot).

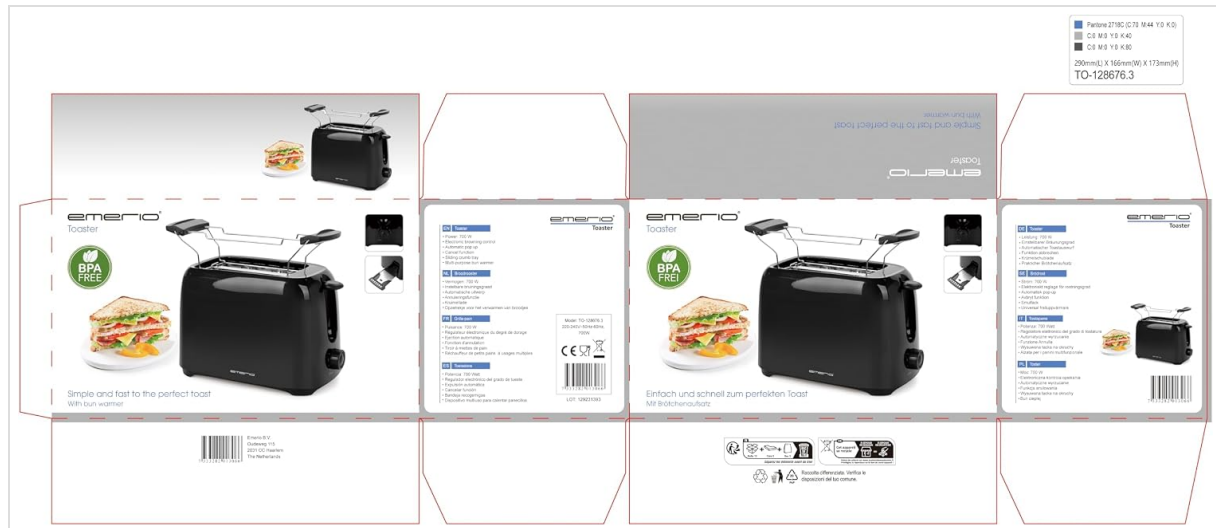


Figure 4: The toaster with the bun warmer rack positioned over the slots, ready for use.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

- **Always unplug the toaster and allow it to cool completely before cleaning.**
- Do not use abrasive cleaners, steel wool, or scouring pads.

Emptying the Crumb Tray

The crumb tray collects crumbs during toasting and should be emptied regularly to prevent fire hazards.

1. Locate the crumb tray at the bottom of the toaster.
2. Pull the tray out completely.
3. Discard the collected crumbs.
4. Wipe the tray clean with a damp cloth, then dry thoroughly.
5. Slide the crumb tray back into its position until it clicks securely.



Figure 5: The removable crumb tray partially pulled out from the toaster base for cleaning.

Cleaning the Exterior

- Wipe the exterior of the toaster with a soft, damp cloth.
- Do not use harsh chemicals or abrasive materials.
- Ensure the toaster is completely dry before plugging it back in.

Storage

- Ensure the toaster is cool and clean before storing.
- The power cord can be wrapped around the cord storage facility at the bottom of the toaster.
- Store the toaster in a dry, safe place.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; check circuit breaker; try a different outlet.

Problem	Possible Cause	Solution
Bread is not toasting evenly.	Uneven bread thickness; first use residue.	Ensure bread slices are of similar thickness; perform burn-off cycles if new.
Smoke coming from toaster.	Crumbs in heating element; food stuck; browning setting too high.	Unplug immediately. Allow to cool. Empty crumb tray. Remove any stuck food carefully. Reduce browning setting.
Lever does not stay down.	Toaster not plugged in; internal mechanism issue.	Ensure toaster is plugged into a live outlet. If problem persists, contact customer support.

7. SPECIFICATIONS

Feature	Specification
Model Number	TO-128676.3
Brand	Emerio
Power	700 Watts
Voltage	230 Volts
Number of Slots	2
Browning Levels	6 adjustable levels
Special Features	Variable browning control, Cancel function, Removable crumb tray, Bun warmer rack, BPA-free
Material	Plastic or coated metal
Product Dimensions (L x W x H)	14 x 25 x 16 cm
Item Weight	800 grams

8. WARRANTY AND SUPPORT

This Emerio TO-128676.3 toaster comes with a **1-year warranty for spare parts availability** from the date of purchase. Please retain your proof of purchase for any warranty claims.

For technical support, service, or warranty inquiries, please contact your retailer or the Emerio customer service department.

