

[Manuals.plus](#) /

› [Stylecraft](#) /

› Stylecraft Rebel SC203R Professional Cordless Clipper and Trimmer Instruction Manual

Stylecraft SC203R

Stylecraft Rebel Professional Modular Cordless Hair Clipper and Trimmer Combo Set Instruction Manual

Model: SC203R

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Stylecraft Rebel Professional Modular Cordless Hair Clipper and Trimmer Combo Set. Please read all instructions carefully before operation and retain this manual for future reference.



Image: The Stylecraft Rebel Professional Modular Cordless Hair Clipper and Trimmer Combo Set, featuring both devices on their respective charging stands.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Stylecraft Rebel Cordless Hair Clipper
- Stylecraft Rebel Cordless Hair Trimmer
- 4 Tight Dub magnetic guards (1/16", 1/8", 3/16", 1/4")
- 1 Spare lever
- Micro-USB charging cord
- Mini screwdriver
- Cleaning/maintenance kit
- Charging stand/cord for each device

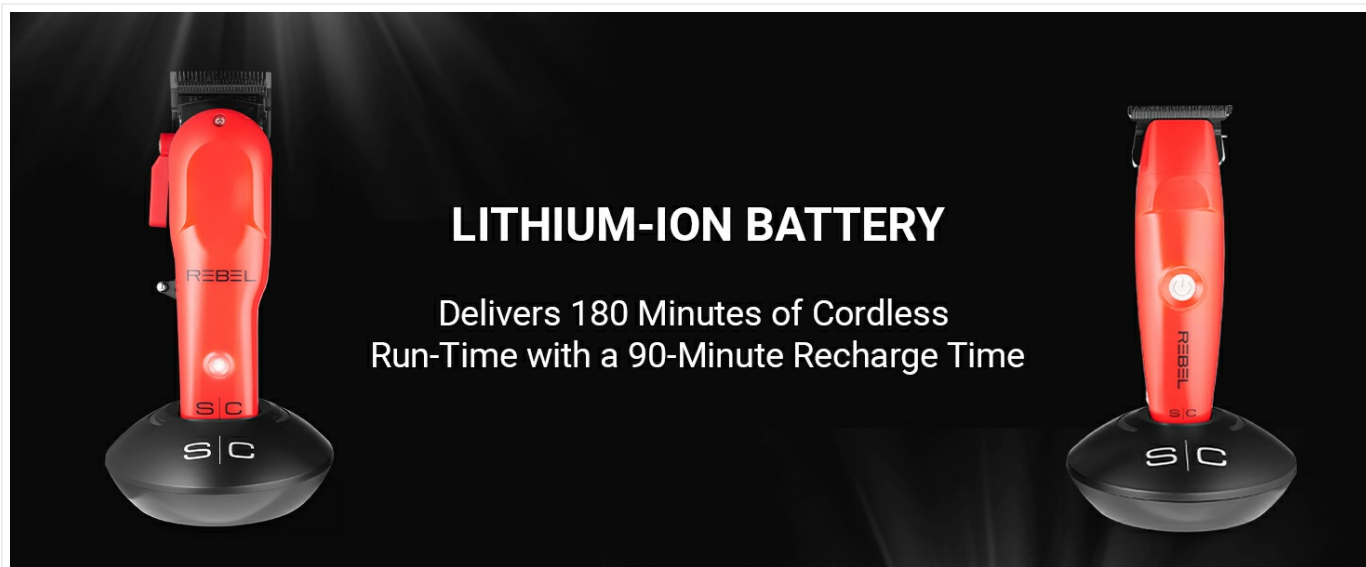


Image: An illustration showing all included accessories and devices in the Stylecraft Rebel Combo Set packaging.

SETUP AND CHARGING

Initial Charge

Before first use, fully charge both the clipper and trimmer. Connect the micro-USB charging cord to the device and plug it into a suitable power adapter. The devices can be charged directly via the cord or by placing them on their respective charging stands.

- **Charging Time:** Approximately 90 minutes for a full charge.
- **Run Time:** Up to 180 minutes of cordless operation per charge.



Image: The Stylecraft Rebel Clipper and Trimmer positioned on their charging stands, illustrating the charging process.

OPERATING INSTRUCTIONS

Clipper Operation



Image: A hand demonstrating the grip of the Stylecraft Rebel Clipper.

1. **Power On/Off:** Press the power button to turn the clipper on or off.
2. **Blade Adjustment:** The clipper features a customizable lever for blade adjustment. You can choose between a click-system for precise length settings or a freestyle lever for seamless blending.
3. **Blade Type:** Equipped with a Fixed Black Diamond Faper Blade and a Moving Deep Slip Blade for smooth and efficient cutting.
4. **Motor Speed:** The super-torque rotary motor operates at 7,200 RPM for consistent power.
5. **Attaching Guards:** Select the desired magnetic guard (1/16", 1/8", 3/16", 1/4") and securely attach it to the clipper blade.



Image: Diagram highlighting the clipper blade features, including the Fixed Black Diamond Faper Blade and Moving Deep Slip Blade.



Image: An infographic detailing the clipper's features: Super-Torque Motor, Black Diamond Carbon DLC Blade, Adjustable Zero Gap Blade, Micro-USB Rechargeable, Lithium-Ion Battery, Dub Magnetic Guards, and Customizable Click or Freestyle Levers.

Trimmer Operation



Image: A hand demonstrating the grip of the Stylecraft Rebel Trimmer.

1. **Power On/Off:** Press the power button to turn the trimmer on or off.
2. **Blade Type:** Features a Fixed Black Diamond X-Pro Wide Blade and "The One" Black Diamond Moving Blade for sharp lines.
3. **Zero Gap Setting:** The trimmer blade can be adjusted for a zero-gap setting using the included mini screwdriver for the sharpest possible lines.
4. **Motor Speed:** The super-torque rotary motor operates at 7,500 RPM for precise trimming.
5. **Drop-Top Skeleton Option:** The trimmer offers a removable drop-top skeleton option for enhanced visibility during use.



Image: Diagram highlighting the trimmer blade features, including the Fixed Black Diamond X-Pro Wide Blade and "The One" Black Diamond Moving Blade.

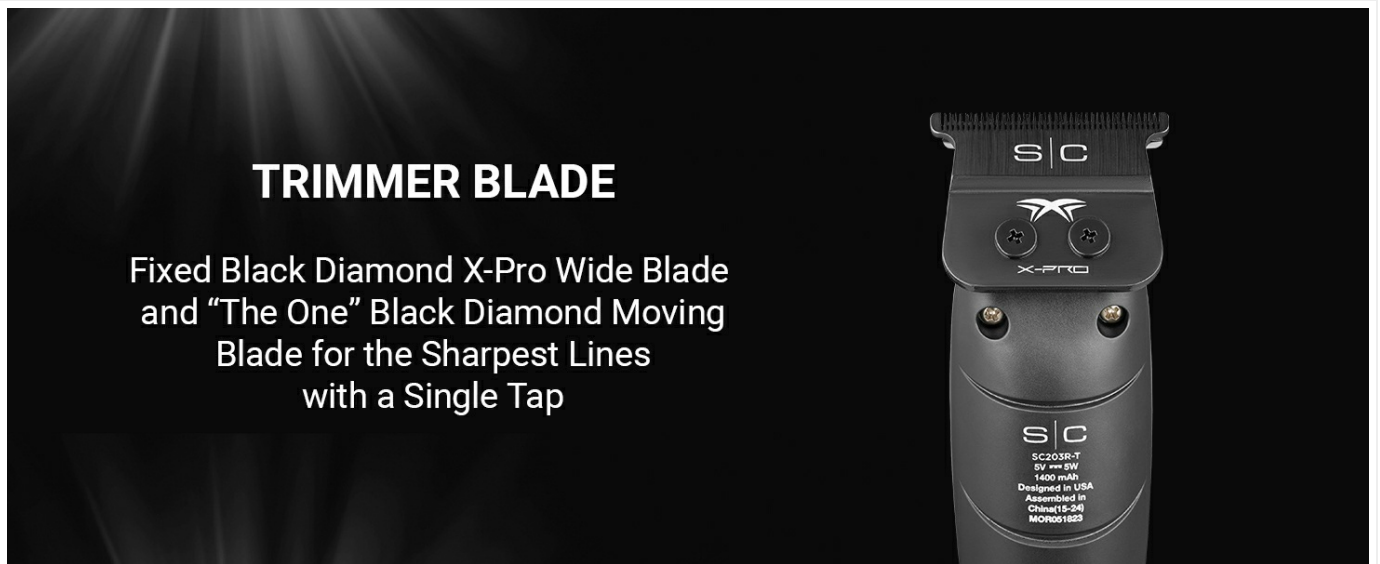


Image: An infographic detailing the trimmer's features: Super-Torque Motor, Black Diamond Carbon DLC Blade, Adjustable Zero Gap Blade, Zero Gap Setter, Micro-USB Rechargeable, Lithium-Ion Battery, and Removable Drop-Top Skeleton Option.

MAINTENANCE

Cleaning the Blades

Regular cleaning ensures optimal performance and extends the life of your clipper and trimmer.

1. Turn off the device and disconnect it from the charger.
2. Use the included cleaning brush to remove hair clippings from the blades.
3. Apply a few drops of blade oil (included in the maintenance kit) to the blades after each use. This lubricates the blades and prevents rust.
4. Wipe the exterior of the device with a clean, dry cloth. Do not immerse the devices in water.

Blade Care

- Handle blades with care to avoid damage.
- Store the clipper and trimmer with blade guards on when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided micro-USB cord or charging stand.
Device not charging properly (e.g., light turns off quickly).	Faulty charging cable/adaptor or connection issue.	Ensure the micro-USB cable is securely connected to both the device and the power adapter. Try a different USB port or power adapter. If the issue persists, contact customer support.
Reduced cutting performance.	Blades are dirty or not lubricated.	Clean the blades thoroughly and apply blade oil as per maintenance instructions.
Blades pull hair.	Blades are dull or misaligned.	Ensure blades are clean and oiled. Check for proper blade alignment. If blades are dull, consider professional sharpening or replacement.

SPECIFICATIONS

- **Model Number:** SC203R
- **Brand:** Stylecraft
- **Product Dimensions:** 2 x 2 x 7.25 inches
- **Item Weight:** 3.09 Pounds (total for combo set)
- **Motor Type:** Super-Torque Rotary Motor
- **Clipper RPM:** 7,200 RPM
- **Trimmer RPM:** 7,500 RPM
- **Battery Type:** Lithium-Ion
- **Cordless Run Time:** Up to 180 minutes
- **Charging Interface:** Micro-USB
- **Blade Material:** Black Diamond Carbon DLC
- **Color:** Red
- **Material:** Plastic
- **UPC:** 810069132266

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Stylecraft customer service. Refer to the product packaging or the official Stylecraft website for the most current contact details.

Manufacturer: STYLECRAFT

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question