

[Manuals.plus](#) /

> [Aiwa](#) /

> Aiwa 22 fl. oz. Compact Coffee Maker WCF1-1007-BLK User Manual

## Aiwa WCF1-1007-BLK

# Aiwa 22 fl. oz. Compact Coffee Maker (Model WCF1-1007-BLK) User Manual

Your guide to safe and efficient operation

## 1. IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the coffee maker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## 2. PRODUCT OVERVIEW

---

The Aiwa Compact Coffee Maker is designed for convenient coffee brewing. It features a 22 fl. oz. capacity, a reusable filter, and an indicator light to signal when coffee is ready. Its compact design helps save counter space.

## Components

- Water Reservoir with Easy View Water Window
- Lid
- Filter Basket
- Reusable Filter
- Glass Carafe
- Non-Stick Warming Plate
- Power Button with LED Indicator Light
- AC Power Cord
- Measuring Scoop



Image 1: Aiwa Compact Coffee Maker with key components labeled, including the Easy View Water Window, Glass Carafe, Power and LED Indicator Light, and AC Power Cord.



Image 2: The Aiwa Compact Coffee Maker shown with its removable glass carafe, reusable filter, and measuring scoop, highlighting its easy-to-clean components.

### 3. SETUP

---

#### Initial Cleaning

1. Before first use, wash the glass carafe, lid, and reusable filter in warm, soapy water. Rinse thoroughly and dry.
2. Wipe the exterior of the coffee maker with a damp cloth. Do not immerse the main unit in water.
3. To clean the internal components, fill the water reservoir with clean water to the 'max' level and run a brewing cycle without coffee grounds. Discard the water. Repeat this process 2-3 times.

#### Placement

Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the unit.

## 4. OPERATING INSTRUCTIONS

---

### Brewing Coffee

1. Open the lid of the coffee maker.
2. Fill the glass carafe with the desired amount of fresh, cold water. Refer to the water level markings on the side of the coffee maker. The maximum capacity is 22 fl. oz.
3. Pour the water from the carafe into the water reservoir.
4. Place the reusable filter into the filter basket.
5. Add the desired amount of ground coffee into the reusable filter. A general guideline is one level scoop (provided) per cup, adjusting to personal preference.
6. Close the lid securely.
7. Place the empty glass carafe onto the warming plate.
8. Plug the power cord into a standard electrical outlet.
9. Press the Power button. The LED indicator light will illuminate, indicating that the brewing process has started.
10. Once the brewing cycle is complete, the coffee maker will automatically switch to a warming mode. The indicator light will remain on.
11. Allow the coffee to sit for a few minutes before serving for optimal flavor.
12. To turn off the coffee maker, press the Power button again. The indicator light will turn off.





Image 3: The Aiwa Compact Coffee Maker with a full carafe of freshly brewed coffee, ready for serving.

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

### Daily Cleaning

1. Always unplug the coffee maker and allow it to cool completely before cleaning.
2. Remove the reusable filter and discard used coffee grounds. Wash the reusable filter, filter basket, and glass carafe in warm, soapy water. Rinse thoroughly and dry. These parts are generally top-rack dishwasher safe, but hand washing is recommended for longevity.
3. Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
4. Clean the non-stick warming plate with a damp cloth. Do not use abrasive materials that could scratch the surface.



Image 4: Close-up view of the Aiwa Compact Coffee Maker's non-stick warming plate, designed to keep coffee warm after brewing.

## Descaling (Monthly or as needed)

Mineral deposits (limescale) can build up in your coffee maker over time, affecting performance. Descale your coffee maker monthly or more frequently if you have hard water.

1. Fill the water reservoir with a mixture of white vinegar and water (1:2 ratio).
2. Place the empty carafe on the warming plate.
3. Run a brewing cycle. After about half the mixture has brewed through, turn off the coffee maker and let it soak for at least 15 minutes.
4. Turn the coffee maker back on and let the remaining mixture brew through.
5. Discard the vinegar solution.
6. Run 2-3 cycles with clean, fresh water to rinse out any remaining vinegar taste.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Coffee maker is not plugged in or turned on. No water in reservoir.	Ensure the unit is plugged in and the power button is pressed. Fill the water reservoir.
Coffee is too weak.	Not enough coffee grounds. Coarse grind.	Add more coffee grounds. Use a finer grind.
Coffee overflows from filter basket.	Too much coffee grounds. Filter basket not seated correctly. Clogged filter.	Reduce coffee grounds. Ensure filter basket is properly seated. Clean the reusable filter or descale the unit.
Coffee tastes bad.	Stale coffee. Unit needs cleaning/descaling.	Use fresh coffee. Clean and descale the coffee maker.

## 7. SPECIFICATIONS

- **Brand:** Aiwa
- **Model Name:** WCF1-1007-BLK
- **Capacity:** 22 fl. oz.
- **Product Dimensions:** 6"D x 7.2"W x 9.8"H
- **Item Weight:** 2.16 pounds
- **Color:** Black
- **Coffee Maker Type:** Drip Coffee Machine
- **Operation Mode:** Manual
- **Included Components:** Filter
- **Special Feature:** Portable

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Aiwa customer service. Keep your proof of purchase for warranty claims.

